


Dumbwaiter Pro

User Guide

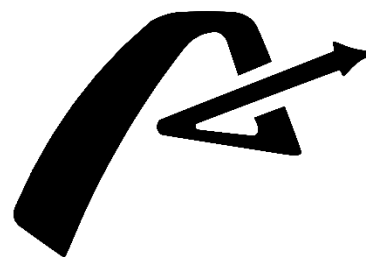

ATLAS

Fabricant de Solutions de Mobilité
A Mobility and Accessibility Manufacturer

Table of Contents

Table of Contents

Table of Contents	2
Warning.....	3
Introduction	1
Technical specifications.....	2
Signs of malfunction requiring immediate shutdown:	3
Daily use	4
Routine maintenance (by the user)	5
In case of problems	6
Professional maintenance	7
Warranty.....	8
Service and support	9

Warning

Thank you for choosing the Dumbwaiter Pro.

This dumbwaiter is intended exclusively for transporting goods. Transporting people or animals is strictly prohibited.

Any improper use, unauthorized modification, or maintenance performed by an unqualified person may result in serious injury, property damage, and void the warranty.

This product complies with CSA B44 (Section 7) and ASME 17 standards.

1

Introduction

This guide is intended for anyone using the Atlas Pro dumbwaiter.
It contains the information necessary for safe and effective use of the device.
The dumbwaiter is designed **exclusively for the transport of goods**.
It is prohibited to transport people or animals.

2

Technical specifications

FEATURES	VALUE
Maximum capacity	300 lb (136 kg)
Number of stops	Up to 4
Speed	0.12 m/s (24 ppm)
Cabin	100% stainless steel

FEATURE	VALUE
Voltage	120
Drive system	Chain and sprocket
Rail material	Aluminum
Safety standards	CSA B44 (Section 7) ASME 17

3

Important safety instructions

- Never transport people or animals.
- Do not force doors open.
- Keep hands away from openings when the device is in motion.
- Do not modify or disable safety devices.
- If in doubt or if a problem arises, stop using the device immediately and contact a technician.

Signs of malfunction requiring immediate shutdown:

- Abnormal noises
- Excessive vibrations
- Door not functioning properly
- Irregular movement or failure to stop

4

Daily use

Steps to follow:

1. Open the landing door and the cabin door (if there is a cabin).
2. Place the load inside the cabin.
3. Close the cabin door properly.
4. Check that the load is stable and ensure that the maximum capacity is not exceeded (300 lb / 136 kg).
5. Ensure that no objects are blocking the passageway.
6. Close the landing door before starting.
7. Select the desired floor on the call panel.
8. Wait until the cabin has come to a complete stop.
9. Open the doors and remove the load.

5

Routine maintenance (by the user)

- Clean the inside of the cabin regularly.
 - Check that the doors align and close properly.
 - Clean the control buttons with a soft cloth.
- ☐ **Do not attempt to repair or open the internal mechanisms.**

6

In case of problems

Problem	Recommended action
The dumbwaiter does not start	Check that all doors are closed properly and that the power supply is turned on (disconnecter and circuit breaker).
Stopped between two floors	Do not open the doors. Reset the power supply. Contact a technician if the problem persists.
Unusual noises or vibrations	Stop using the elevator immediately and contact your installer.

☐ **Never stand under the cabin or in the machine room.**

7

Professional maintenance

A certified technician must perform a complete maintenance check **once a year**, including:

- Inspection of the motor, chain, and sprocket
 - Checking of sensors and locks
 - Safety system testing
- Battery and charger check (if applicable)

Any unauthorized intervention will void the warranty.

8

Warrant

Standard warranty: 2 years parts and labor
Battery: 30 days


Keep:

- The purchase invoice
- This guide

9

Service and support

Les Escalateurs Atlas Inc.
Phone: **1-888-773-6708**
Email: **info@atlasacces.com**

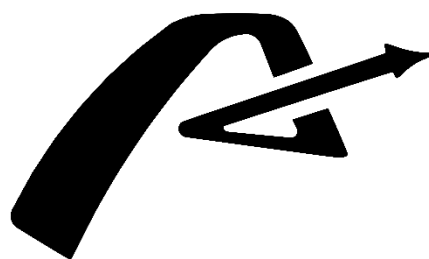

ATLAS

Fabricant de Solutions de Mobilité

A Mobility and Accessibility Manufacturer