

# **No Right Angles**

### No. 1451-101 LAF CHAIR

W 50 D 38 H 27½ in. Seat depth 23 in. Seat height 18 in. Arm height 27½ in. Arm width 3 in.

#### No. 1451-210 CURVED CORNER


W 64 D 38 H 27<sup>1</sup>/<sub>2</sub> in. Seat depth 23 in. Seat height 18 in.

Height to top of back cushion is 36 inches approximately.

#### No. 1451-436 RIGHT CHAISE

W 72 D 38 H 27<sup>1</sup>/<sub>2</sub> in. Seat depth 23 in. Seat height 18 in.



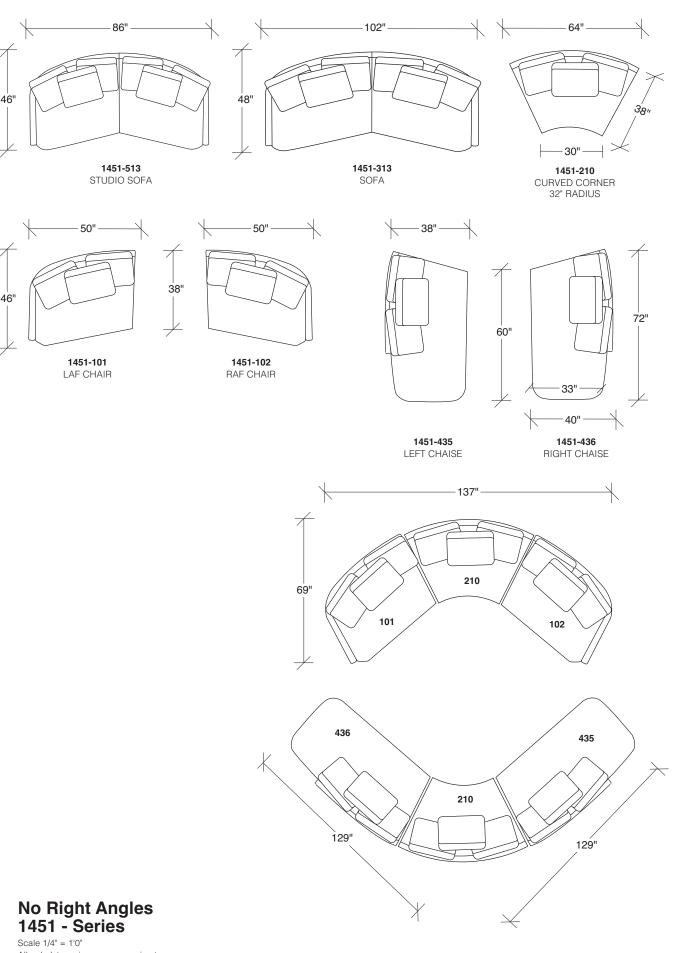

All upholstery sizes are approximate



No. 1451-435 LEFT CHAISE W 72 D 38 H 27<sup>1</sup>/<sub>2</sub> in. Seat depth 23 in.

Seat height 18 in.

## No. 1451-102 RAF CHAIR

W 50 D 38 H 27<sup>1</sup>/<sub>2</sub> in. Seat depth 23 in. Seat height 18 in. Arm heigh 27½ in. Arm width 3 in.



No. 1451-313 SOFA

W 102 D 48 H 27<sup>1</sup>/<sub>2</sub> in. Seat depth 23 in. Seat height 18 in. Arm height 27½ in. Arm width 3 in.

Height to top of back cushion is 36 inches approximately.



**No. 1451-513 STUDIO SOFA** W 86 D 46 H 27<sup>1</sup>/<sub>2</sub> in. Seat depth 23 in. Seat height 18 in. Arm height 27½ in. Arm width 3 in.

Height to top of back cushion is 36 inches approximately.