

### REMOTE CONTROL INSTRUCTION

Size: 5.51\*2.28\*0.83"

Warranty: 5 years



### Programming & Function Applying

	Buttons	LCD Screen	The Light
Programming at the 1st Sensor	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press  button to start programming	The LCD screen starts to show all the sensor numbers at the right column	Light blinks then keeps ON for 5S then OFF if no motion or other commands
	Press  button	The S icon at the left bottom corner blinks	Following the last step, light keeps ON or OFF
	Press the <i>Detection Area</i> button	The S icon and <i>Detection Area</i> icon blinks	Following the last step, light keeps ON or OFF
	Press the  buttons to adjust the  as 25%, 50%, 75% or 100%.	The S icon and <i>Detection Area</i> icon keep blinking, numbers changing	Light blinks at each press
	Press the <i>Holdtime</i> button	The S icon and <i>Holdtime</i> icon blinks	Light ON
	Press the  buttons to adjust the  as 5S, 30S, 1min., 3min, 5min, 10min, 20min or 30min	The S icon and <i>Holdtime</i> icon keep blinking, numbers changing	Light blinks at each press
	Press the <i>Standby Dimming</i> button	The S icon and <i>Standby Dimming</i> icon blinks	Light ON
	Press the  buttons to adjust the  as 10% 20% 30% or 50%.	The S icon and <i>Standby Dimming</i> icon keep blinking, numbers changing	Light blinks at each press
	Press the <i>Standby Period</i> button	The S icon and <i>Standby Period</i> icon blinks	Light ON
	Press the  buttons to adjust the  as 0S, 10S, 30S, 1min, 5min, 10min., 30min, 60min, --(infinite+∞)	The S icon and <i>Standby Period</i> icon keep blinking, numbers changing	Light blinks at each press
	Press the <i>Daylight Threshold</i> button	The S icon and <i>Daylight Threshold</i> icon blinks	Light ON
	Press the  buttons to adjust the  as --(Disable), 2lux, 10lux, 30lux, 50lux, 80lux, 120lux, 200lux, 250lux, 300lux, 350lux or 400lux.	The S icon and <i>Daylight Threshold</i> icon keep blinking, numbers changing	Light blinks at each press
	Press the  button	The M icon (right next to S icon) blinks	Light ON
	Press the <i>Daylight Threshold</i> button	All icons settle	Light performs the saved program
Applying to all the other Sensors	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press  button to start programming	The LCD screen starts to show all the sensor numbers at the right column	Light blinks then keeps ON for 5S then OFF if no motion or other commands
	Press the  button	All icons settle	Light performs the saved program
Manually Dimming in ON/OFF Mode	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press  buttons to adjust output accordingly	Percent number on the left column changes along	Light performs output change
Manually Dimming in Sensor Mode	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press  button	The PW icon blinks	Light blinks
	Press  buttons to adjust output accordingly	Percent number on the left column changes along	Light performs output change