



SONR **MUSIC**

User Manual

QUICK START GUIDE

① PLAY BUTTON

Power On/Off

Press and hold for 3 seconds (–)

Play/Pause


Press once (•)

Change Mode (MP3/ Wireless)

Press twice (••)

Shuffle Mode On/Off

Press three times (•••)

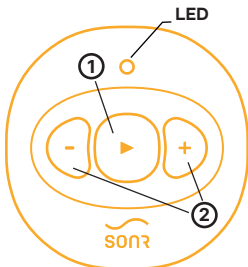

For the latest guides
and videos, visit:

<https://music.sonr.pro/faq>

② Volume Buttons

Volume Up/Down

Press once (•)

Next/Previous Track

Press and hold for 2 seconds (–)

Battery Level Check

Press – and + simultaneously

NOTES AND WARNINGS



Do not charge or leave the device under direct sunlight or at high temperatures.

If the temperature exceeds 45°C (113°F), the device will indicate an error by alternating white and red LED blinking.

Disconnect the charger and allow SONR MUSIC 2 to cool down to room temperature before reuse or charging.



Always wipe SONR MUSIC 2 dry after use.

To extend service life, it is recommended to keep the device dry.



Do not store SONR MUSIC 2 fully discharged.

If the device has been stored for an extended period, fully charge it before use. To maintain battery health, recharge the device at least once a year.

DO NOT PRESS THE SPEAKER'S RUBBER MEMBRANE!

EXCESSIVE PRESSURE ON THE RUBBER MEMBRANE MAY DAMAGE THE BONE-CONDUCTION SPEAKER.



LED STATUS INDICATIONS



Power ON:

The LED emits three progressively brighter white pulses. Then, the LED lights in the current mode color: MP3 mode – white; Wireless mode – blue.



Power OFF:

The LED emits three progressively brighter white pulses, then turns off. If playback is paused, the device automatically powers off after 20 minutes.



Wireless Device Search:

The LED blinks blue.



Wireless Connected:

The LED lights solid blue for 3 seconds.



Switching Wireless → MP3:

The LED lights blue, then smoothly transitions to white.



Switching MP3 → Wireless:

The LED lights white, then smoothly transitions to blue.



Shuffle Mode:
LED blinks twice.



Error:
LED alternates between
white and red.

Battery Level

LED blinks according to the battery level:

- | | | | |
|----------|---|--|--|
| 100%-50% | → | | High battery: Green LED blinks; solid green when fully charged. |
| 49%-20% | → | | Medium battery: Yellow LED blinks. |
| 19%-0% | → | | Low battery: Red LED blinks. |

Low Battery Alerts:

When the battery level is low, a voice prompt “Low Battery” is played. The prompt is repeated three times at predefined charge levels: 20%, 10%, and 0% (just before shutdown).

Standby Mode:

The LED blinks once every 10 seconds, indicating that the device is powered on. The device automatically powers off after 20 minutes.

LISTENING MODES

MP3 Mode

MP3 mode allows playback of audio files stored in device memory. To switch modes, press PLAY twice (••). Playback resumes from the last played track. Files are played in the order they were transferred. To play tracks in random order, enable Shuffle mode. After the playlist ends, playback restarts from the beginning.

Wireless Mode

Wireless mode allows audio streaming from a phone or other compatible device. To switch between MP3 and Wireless modes, press the PLAY button twice (••).

After switching, SONR MUSIC 2 automatically searches for and connects to an available device.

To connect to a different device, disable Bluetooth connection on the currently paired device. Once disconnected, SONR MUSIC 2 returns to pairing mode.

Pairing is complete when the LED animation stops.

In Wireless mode, the following controls are available: play/pause, next track, previous track.

MUSIC IMPORT

SONR MUSIC 2 supports the following audio file formats: MP2, MP3, FLAC, M4A, MP4, AAC (WMA, WAV, APE formats can be added upon request).

Connect SONR MUSIC 2 to a computer using the included magnetic cable.

A removable drive named “SONR MUSIC2” will appear on your computer. Open it to add or remove audio files.

By default, 3 demo audio files are preinstalled on the device.

GOGGLE CLIP

The SONR Music goggle clip is an optional accessory and is sold separately. It allows the user to securely attach the device to the strap of their swim goggles. To attach the clip, insert the device into the clip and thread the goggle strap through the side loops of the clip.



The accessory can be purchased at:

<https://music.sonr.pro/shop-music-2#accessories>

SYSTEM UPDATES

To check for new updates and download them, visit:

<https://www.sonr.pro/support>

Before starting the update, make sure the battery level is in the yellow or green range.

1) Download the Firmware File

Connect SONR MUSIC 2 to a computer using the magnetic charging cable. Attach the magnetic end to the device and plug the USB end into the computer. The device will appear as a removable drive named "SONR MUSIC2." Download the latest firmware file from the website. Copy the firmware file to the "SONR MUSIC2" drive.

Safely eject the device from the computer. Disconnect the cable.

2) Start Update Mode

Make sure the device is powered off. Press and hold the "-" button. While holding "-", press the PLAY button. When the LED lights purple, release both buttons. The device will automatically detect the firmware file and begin the update. During the update, the LED blinks purple.

3) Update Status

Update successful: The LED blinks green three times.

 
Update failed: The LED blinks red.

CHARGING SONR MUSIC 2

Before charging, make sure the magnetic connector is clean and dry. Wipe it dry if necessary.

To start charging, attach the magnetic USB cable to the corresponding magnetic connector on SONR MUSIC 2, ensuring that it is securely aligned.

Connect the other end of the USB cable to a computer or a power adapter that meets the following specifications: 5V, min. 0.5 A. During charging, the LED blinks in a color corresponding to the current battery level. Once fully charged, the LED remains solid green.

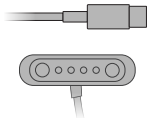

TECHNICAL SPECIFICATIONS

- Battery life: Up to 8 hours
- Charging time: 2 hours
- Charger: 5V - 0.5A
- Weight: 40 g
- Memory: 16 GB
- 4 pin magnetic charging cable
- Dimensions:
2.44 × 0.67 in (62 x 17 mm)
- Buttons: 3 physical buttons
- Wireless audio connectivity.
Supports SBC and AAC codecs.
- Waterproof standard:
IPX8 (Waterproof)
- Indication: 1 RGB LED indicator
- Supported playback formats:
MP2, MP3, FLAC, M4A, MP4,
AAC

TRANSFERRING MUSIC FILES TO MUSIC2 VIA USB TYPE-C

SONR MUSIC 2 supports direct audio file transfer when connected to a smartphone via USB Type-C. The device is recognized as external storage.

Requirements:

- Smartphone with USB Type-C port
- OTG support

Connection to Android Devices

- 1) Connect SONR MUSIC 2 to the smartphone.
- 2) Confirm access to the external storage if prompted.
- 3) Open the file manager application.
- 4) Copy audio files to the «SONR Music2» storage.
- 5) Safely eject the device.
- 6) Disconnect the cable.

Connection to iPhone / iPad (USB-C)

- 1) Connect SONR MUSIC 2 to the device.
- 2) Open the “Files” application.
- 3) Select the connected external drive.
- 4) Copy audio files to «SONR Music2» storage.
- 5) Safely eject the device.
- 6) Disconnect the cable.

Notes

- Do not disconnect the device during data transfer.
- If the device is not detected, verify the cable and OTG support.

WARRANTY INFORMATION

SONR MUSIC 2 is covered by warranty for 1 year after delivery of the product. The warranty is activated automatically from the day you receive the device.

A The warranty case may be considered only when complying with the following terms of use:

- Read the instruction manual and use SONR MUSIC 2 strictly for the intended purpose;
- Keep away from direct sunlight;
- Do not drop, avoid hitting the device;
- Do not open SONR MUSIC 2;
- Do not leave the device in the water unnecessarily;
- Do not wipe the device with liquids containing alcohol.

ATTENTION!

- Do not charge SONR MUSIC 2 when it is wet;
- Wipe it dry after use;
- Be careful when transporting so as not to damage the device.

All rights reserved.

The image, design, trademark, name, and components that were used to manufacture the SONR MUSIC 2 product, as well as its appearance, are protected by international intellectual property laws. The use of any of the above materials without the consent of the copyright holder will be prosecuted.