 


User Manuel

DPG Desk Panels and
Desk Control App

Product List	Pg 2
Operation of DPG1M/1B	Pg 3
Erasing memory position	Pg 4
Connecting Bluetooth	Pg 4
Reminder Feature	Pg 5
LED Reminder	Pg 6
Desk Top App	Pg 7
Downloading the app	Pg 8
Onboarding Flow	Pg 9
Pairing Bluetooth	Pg 10
How to use the app	Pg 11
App Setting	Pg 12
Reminder Notifications	Pg 13

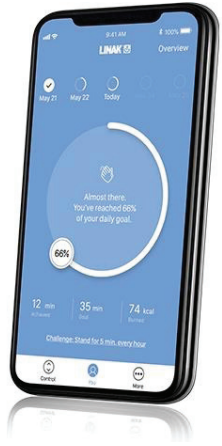

Desk Control App

- Auto-connect to desk
- Available for iOS and Android



DPG1M

- Up/Down Drive
- Intuitive adjustment



DPG1B

- Up/Down Drive
- 2 memory positions
- Light strip reminder
- Bluetooth



DPH

 
- Up and Down Arrow
- White and Black option

HEIGHT ADJUSTABLE CONTROL


OPERATION & SETUP

Operation of the DPG1M/1B Series Controller

The desk is operated by tilting the controller up or down. Tilt and hold the DPG up to make the desk drive up, press and hold the DPG down to make the desk drive down. Release the DPG when you reach your requested position.

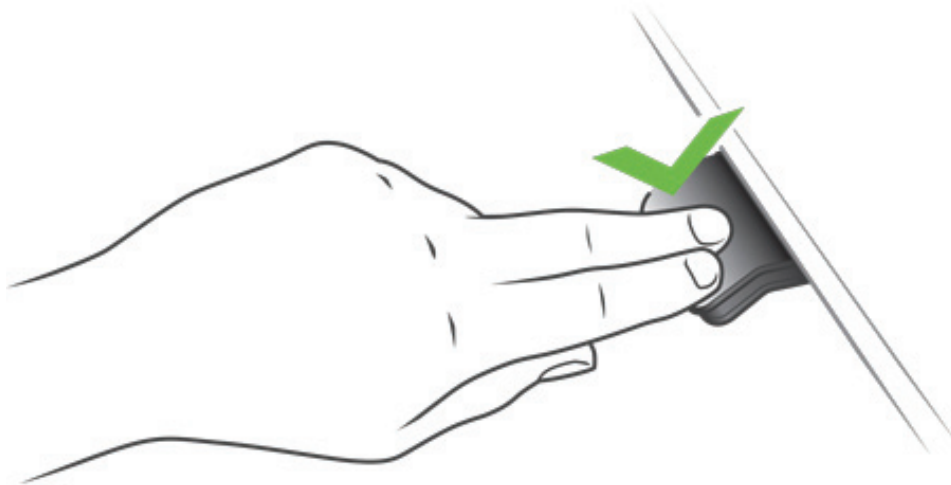

Press and hold to make desk move down.

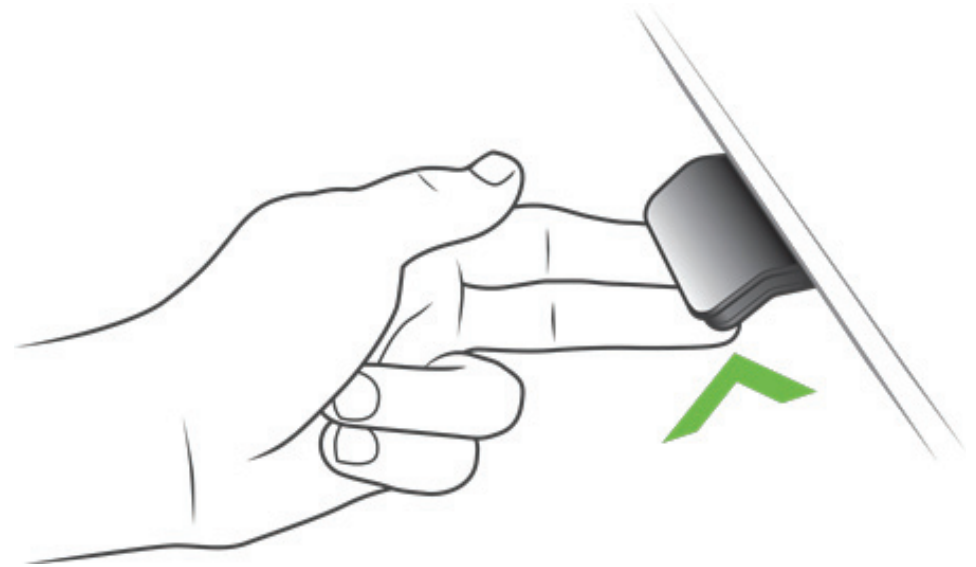

Press and hold to make desk move up.

HEIGHT ADJUSTABLE CONTROL

OPERATION & SETUP

 
Erasing memory position

When erasing the saved memory positions press and hold the memory button for 8 seconds. When the red LED/Light strip flashes the action is complete.



Connecting Bluetooth

Pressing the bluetooth button in the middle of the controller for 2 seconds will enable the pairing mode.

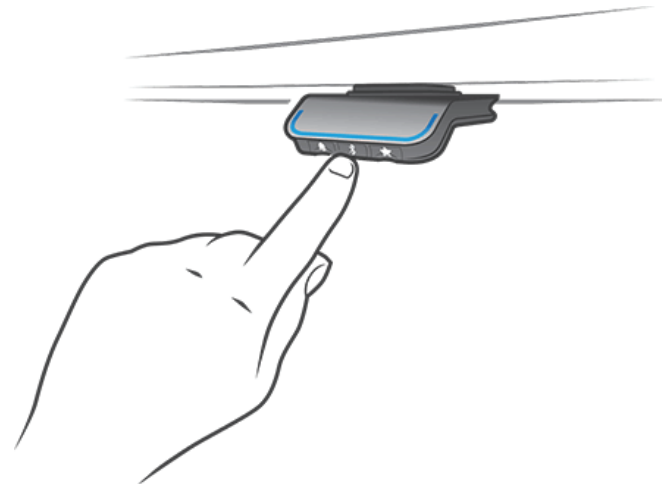

****Download the desk control app suited for your device in the Google Play or Windows store and pair with device.**


Setting the reminder interval. The DPG1B/DPG1M has a reminder button to the left with a Bell symbol. Pressing this button will adjust the interval of how often to get reminders to change position. The system has 3 intervals settings

Interval 1: Reminder after 55 minutes seated.
Interval 2: Reminder after 50 minutes seated.
Interval 3: Reminder after 45 minutes seated.


Reminder Reset

It is possible to reset the reminder to default values by pressing the bell symbol for 8 seconds.

 DPG1M

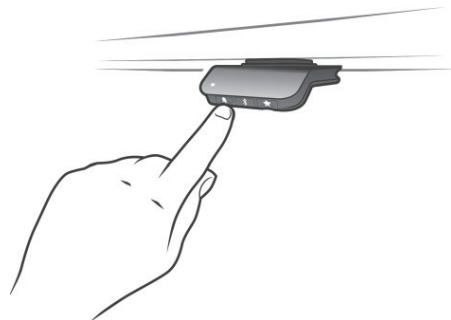


Setting reminder interval

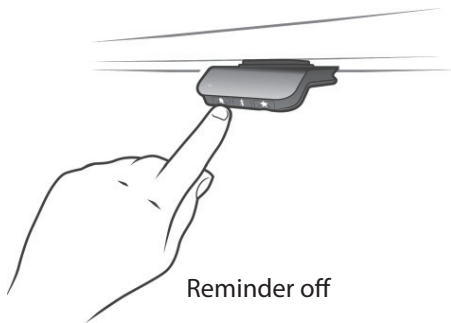 


Reminder off

 
DPG1B

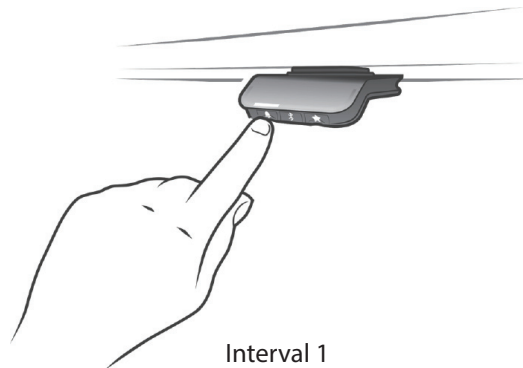

Interval 1

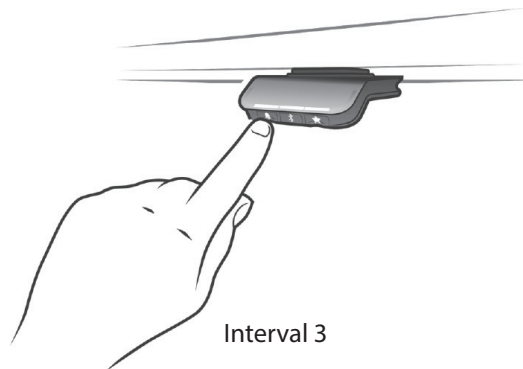 

Interval 3

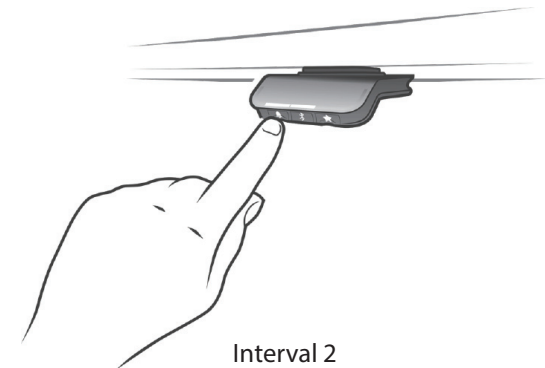 

Interval 2



Reminder off

HEIGHT ADJUSTABLE CONTROL

OPERATION & SETUP

LED Reminder

Your desk panel has an integrated LED in the lower left corner, reminding you to change position during your working day.

Green light: A green light indicates that you do not need to move.

Orange light: When the green light changes to a pulsating or a static orange colour, it is time for you to move.

Factory Reset

Pressing and holding the memory and reminder buttons for 8 seconds will set the reminder function back to factory reset. The LED will flash red 3 times.



Green indicates everything is okay



Orange indicates user needs to change position





Downloading apps

The apps are called "Desk Control™" and have the following app logo in iTunes and Apple App store and Google Play store:



How to download the App for iOS

- Step 1:** Use your iPhone or iPad to log into Apple App store
- Step 2:** Type "Desk Control" in the search column
- Step 3:** Select the "Desk Control" app
- Step 4:** Click install to download the app to your device

 
How to download the App for Android


- Step 1:** Use your Android device to log into Google Play Store
- Step 2:** Type "Desk Control" in the search column
- Step 3:** Select the "Desk Control" app
- Step 4:** Click install to download the app to your device

An onboard flow will show to guide the user to the first time use of the app.

Two main purposes of the onboarding flow is to inform the user of the benefits of changing posture during the work day.


Pressing connect to your desk at the bottom of the screen will lead to the Pairing Bluetooth guide.

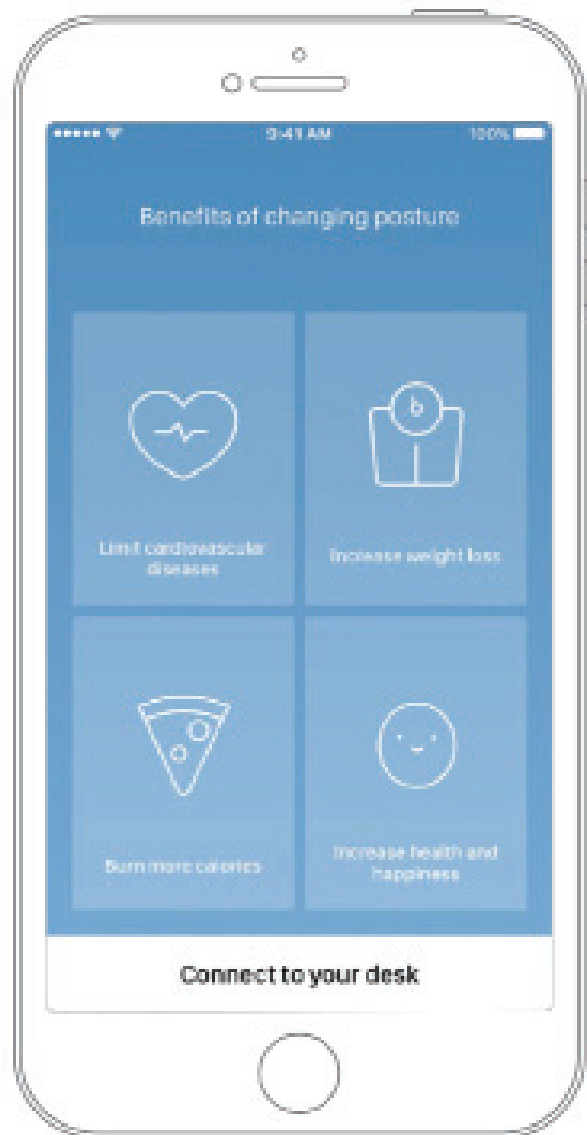

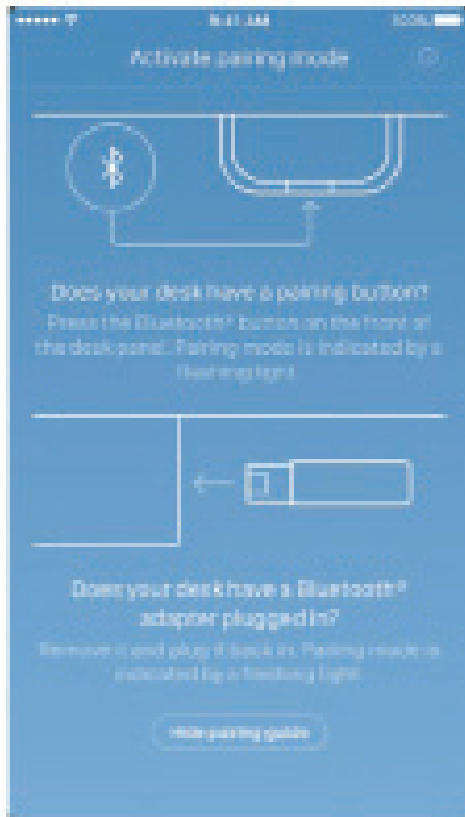

The bluetooth adaptor should be plugged into the DESKLINE Control box and blinking blue and be in the pairing mode for 3 minutes.

To set the DPG1M/1B in pairing mode, the bluetooth button in the front of the desk panel must be pressed for 2 seconds and the light strip or light LED will blink blue to indicate that it is in pairing mode.

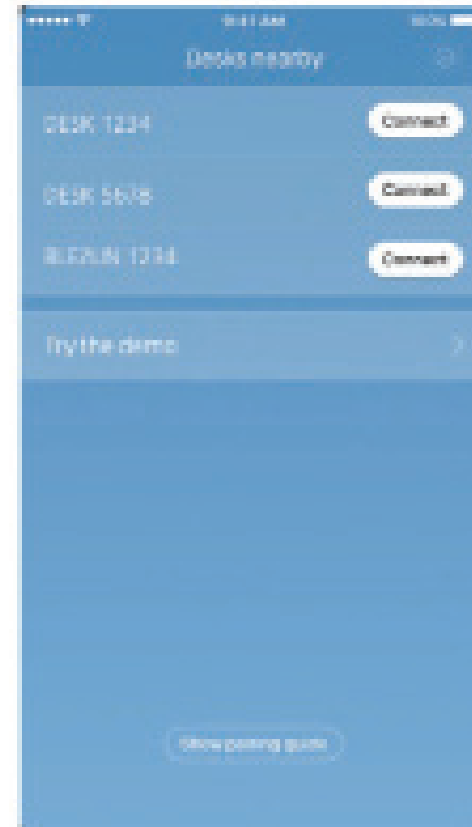

When Pressing Hide Pairing Guide the screen with the list of devices in pairing mode will appear. press the Connect Button to the right of the device to pair.

All bluetooth Adapter IDs are named BLE2LIN followed by a 4 digit number.

All DPG desk panel bluetooth IDs are named desk followed by a 4 digit number.

After pressing the Connect button and the connection has been established successfully, the user will be lead to the Control page.

- Control

Adjustment of the desk
(if supported by connected devices)
- You

 
Statistics of the usage for your desk
- Settings

All settings

Below is the landing page for that helps you to control your desk height via the bluetooth connection.

The screen below is when the app is connected to the full version of a DPG or Bluetooth adapter. When the connection is with a limited version of the DPG or Bluetooth Adapter; the adjustment of the desk trough the app will not be possible and the memory positions will only be for saving the positions not adjusting to them via the app.

Bluetooth device leads back to desk nearby and lets the user connect to another product in pairing mode

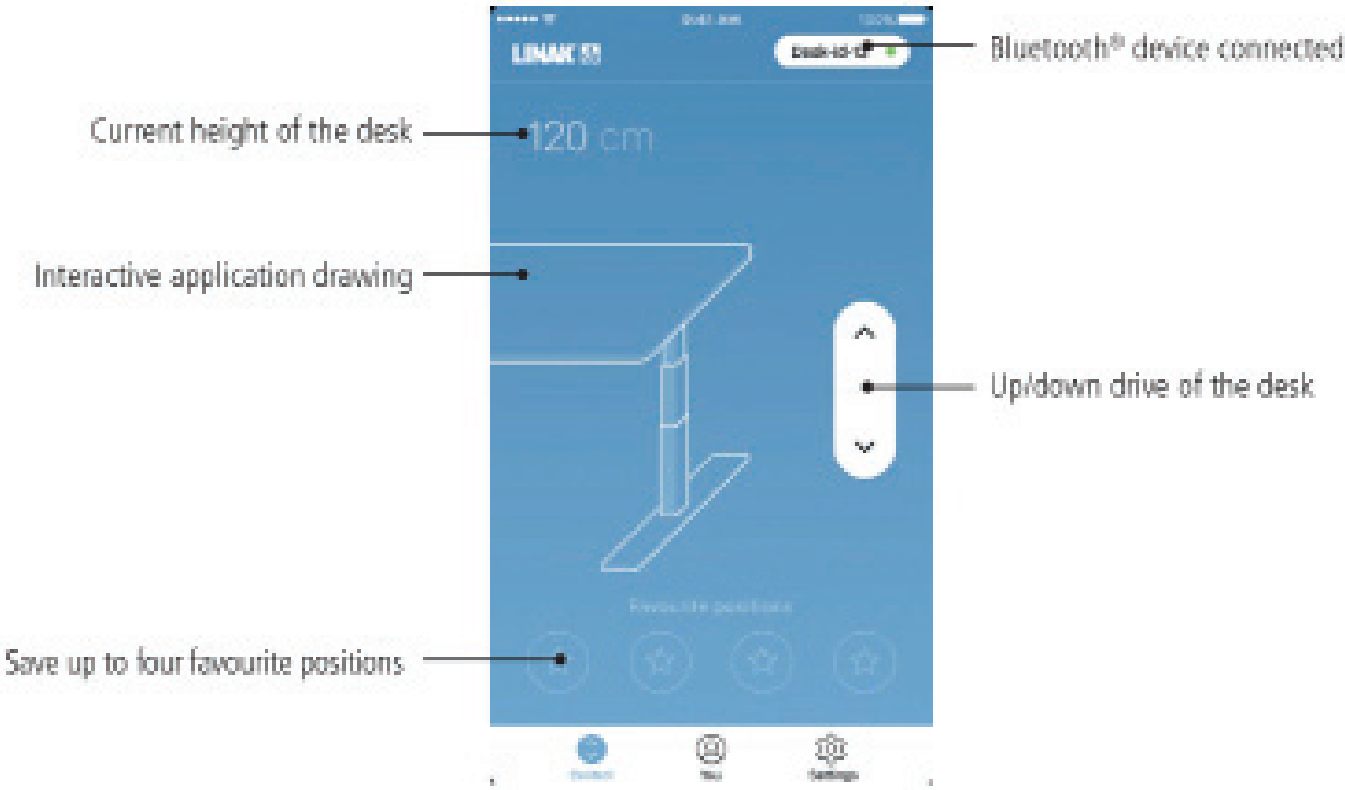

HEIGHT ADJUSTABLE CONTROL

OPERATION & SETUP

App Settings

Change the favorite positions

The favourite positions are stored through the control page. If the user wants to change the height of the stored positions, it can be through this menu.

Ways to be reminded


Enable or disable reminder notifications as pop-ups on computers and smartphones. If supported by the connected product, e.g The DPG1B, enable or disable the light strip as a reminder function.

Set desk name

Change the name of the connected product. the renaming will only affect the local name in the smartphone or computer not in the DPG or Bluetooth adapter.

Set desk height

set the current height of the desk. an illustration guide the user on how to measure. Choose which units the height of the table will be shown in: cm or inches.

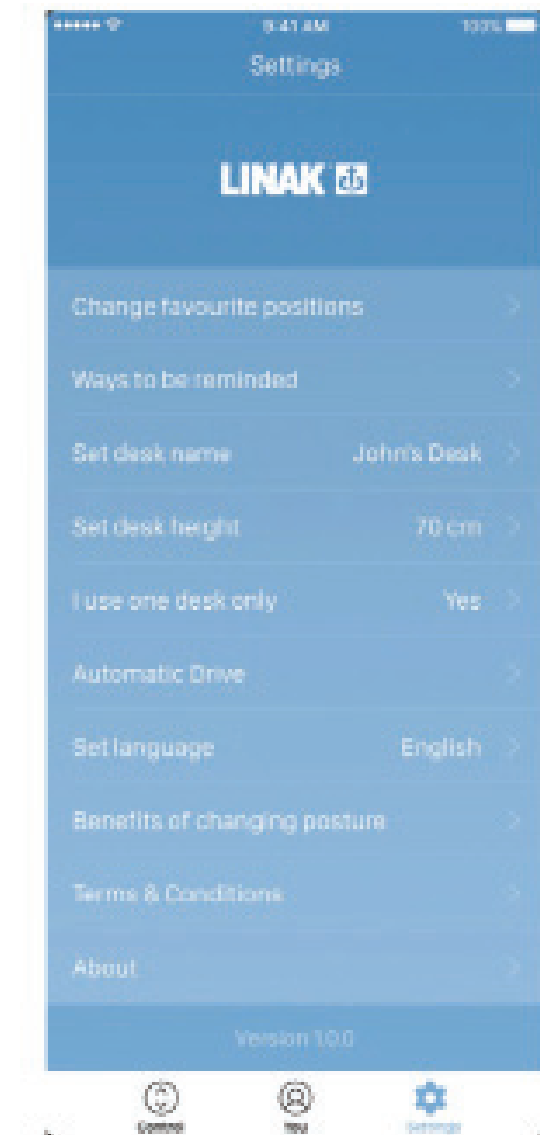

When reminder notifications are enabled on the smart device, pop-ups will occur to help guide the user when there is a need to change position. The reminders will appear based on your settings.

Snooze the reminder: the notification will pop up one hour later

Disable reminders for today: the notifications will stop for the day, but they will be enabled again the next day.

Open app: opens the app allowing the user to adjust the desk.

