



Top attached to base folding arms with 8 bolts (1/4-20 bolts).

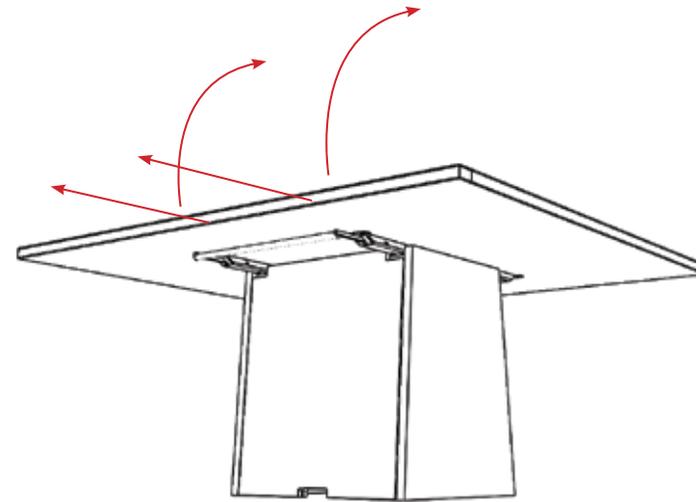


To fold up the table top, pull on the bar handle under the table top and lift top into place.

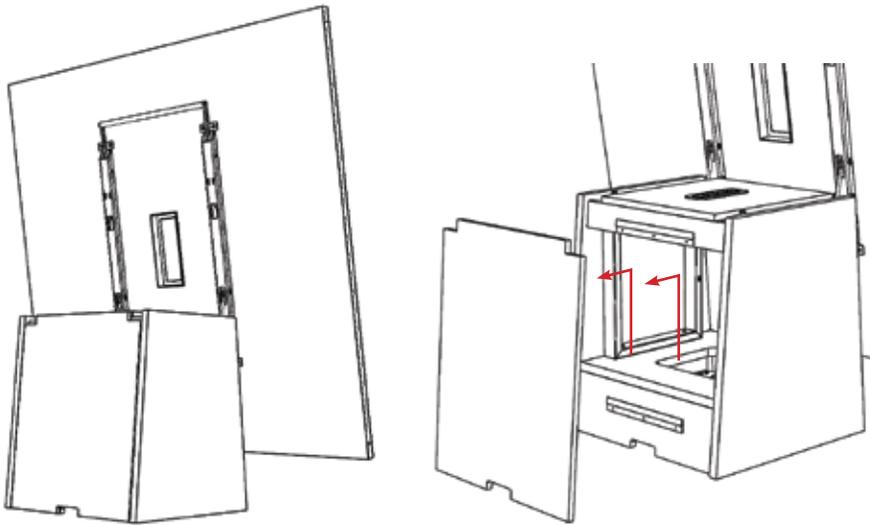


With table top folded up, you can now remove the front panel to access the power units on the interior.

For information on daisy chaining tables see page 5
*Tables only come with cables if specified with purchase.
Tables cannot be retrofitted with hardware.
Batteries require charging every 6 months.*

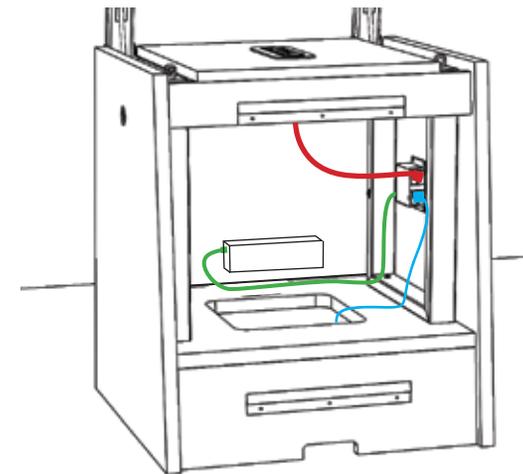


Place Simple forum unit in top of base and pug (red line) into the duplex power unit located inside the base. Pug (green line) the control box for the lifting system into the duplex power. Then pug (blue line) the duplex power feed into floor monument. The battery charges every time the duplex is plugged in.

4 mega flip tables 60" square folded and nested in a row

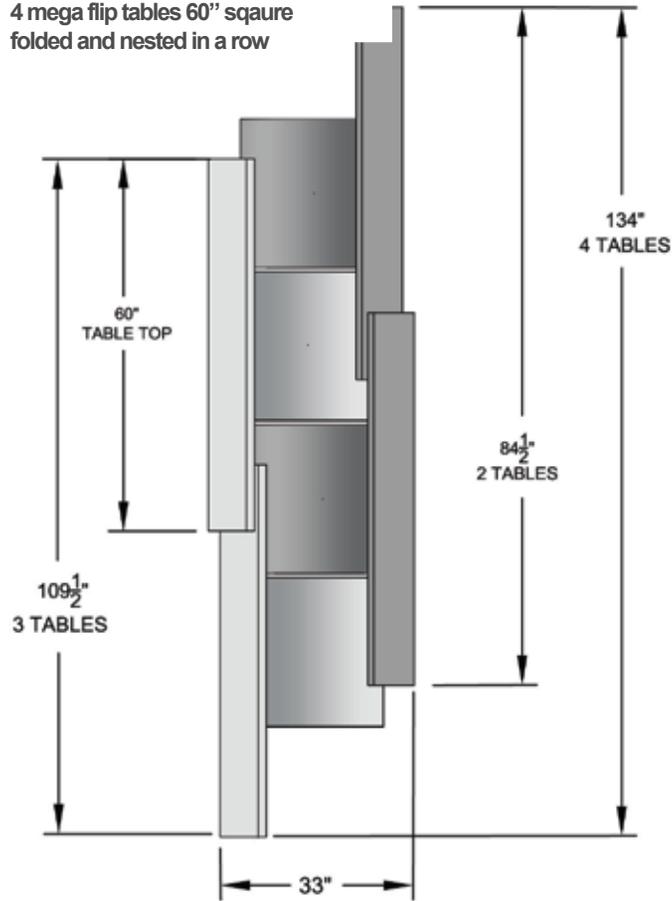

iSO Nesting configuration

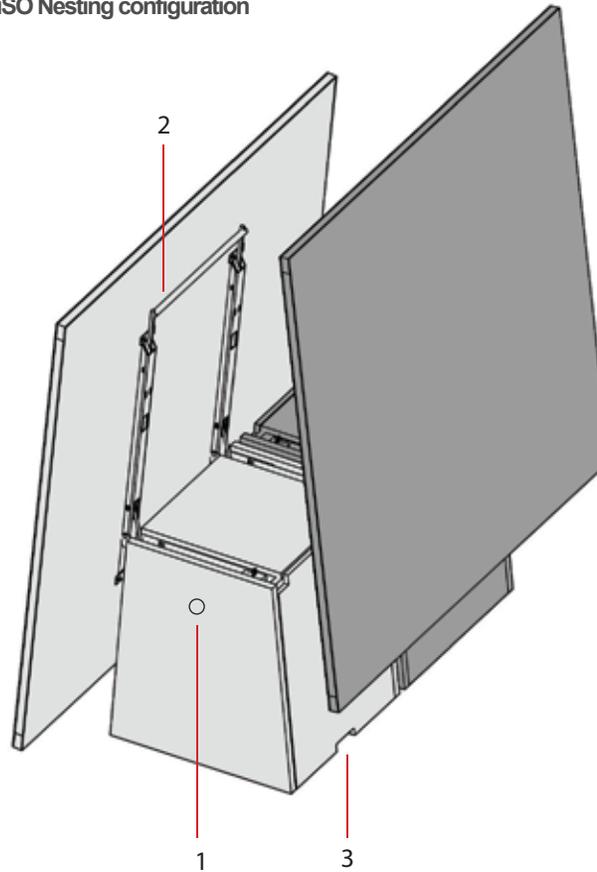

1. Pull on handle mounted on underside of table to unlock .

2. Fold table into vertical position.

3. Push the up arrow to raise table onto casters for ease of moving around.

4. When table is in position push the down arrow to lower table.






5. Fold table top down until you hear a click. (Table top is lock in place)

1. Up and down arrow for base adjustment

2. Handle to disengage table top lock

3. Casters



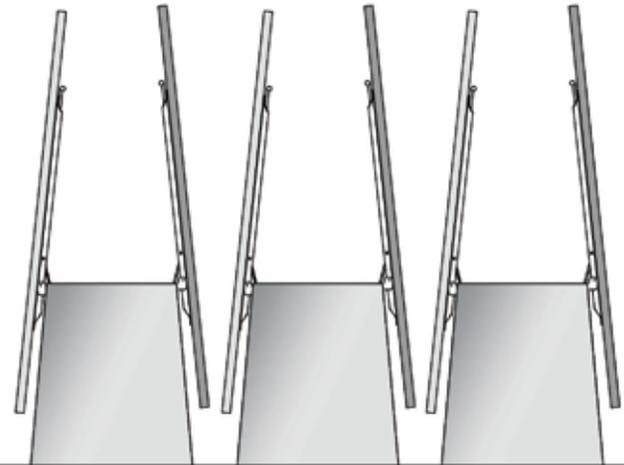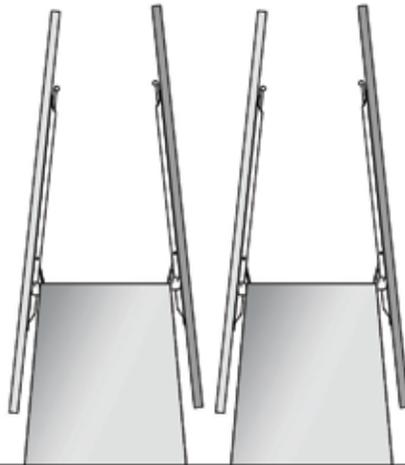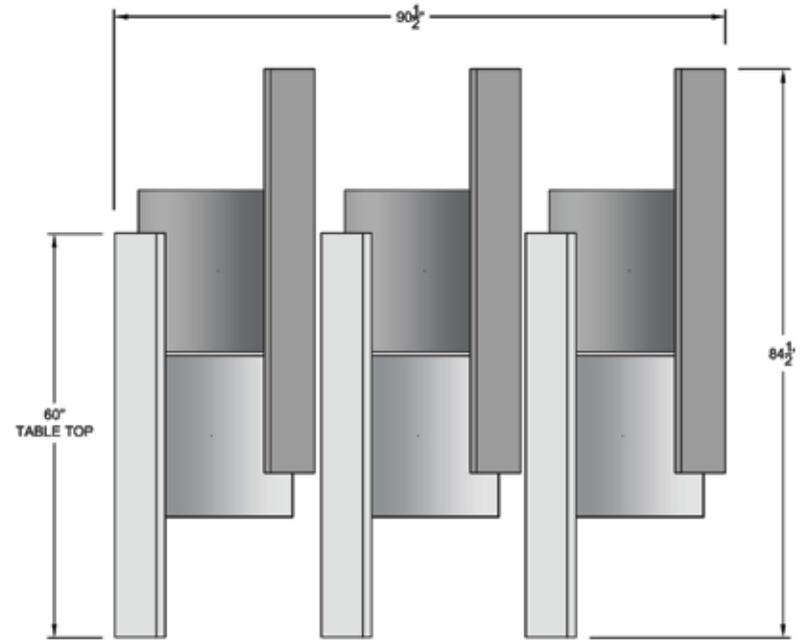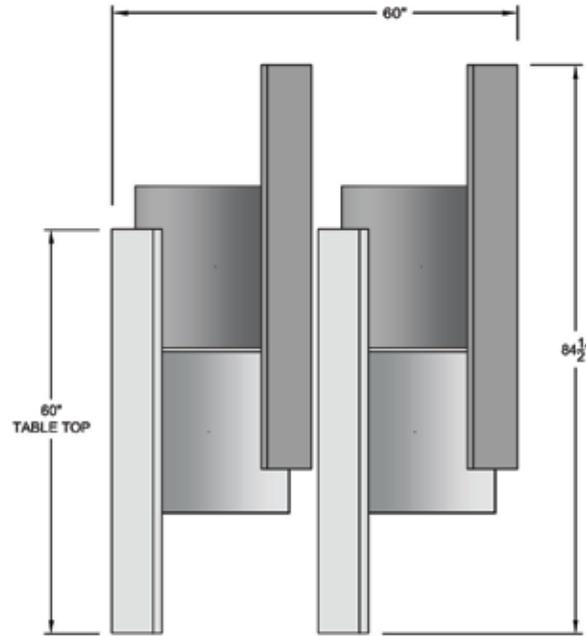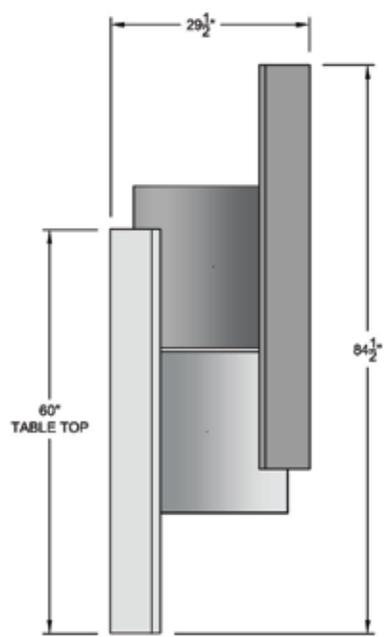

2 Mega Flip tables 60" square folded and nested.

4 Mega Flip tables 60" square folded and nested.

6 Mega Flip tables 60" square folded and nested.

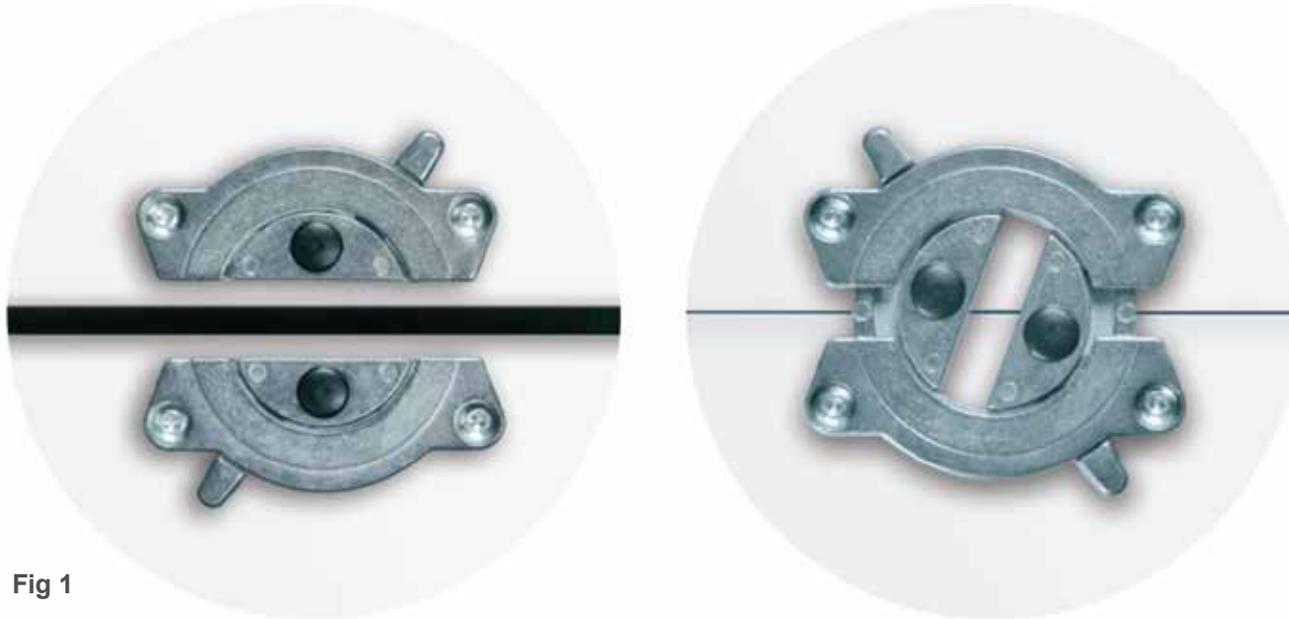


Fig 1

- When the table tops are folded down, place tops together so that the ganging clips are as seen in Fig 1.

- Twist handles as seen in Fig 2 to engage ganging clips.

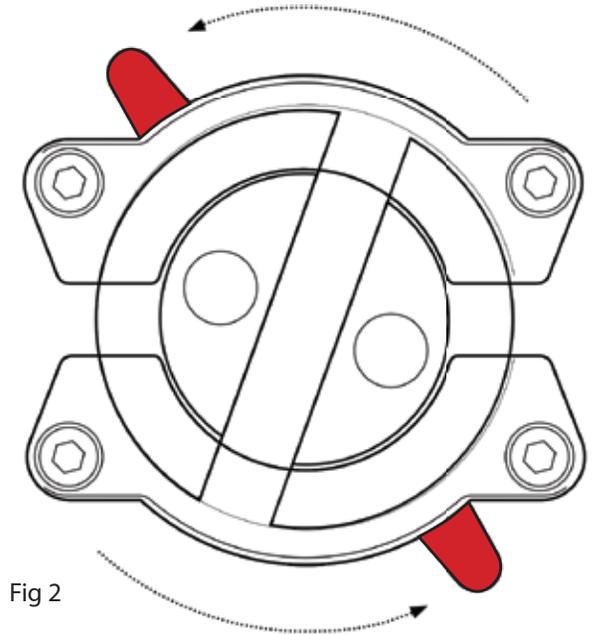


Fig 2

