




Miniexcavators – Undercarriages – Minidumpers – Skid Steer Loaders – Aerial Platforms

ATTENTION: THIS BOOKLET DOESN'T SUBSTITUTE THE OPERATION AND MAINTENANCE MANUAL. IT'S NECESSARY TO READ CAREFULLY AND UNDERSTAND THE OPERATION AND MAINTENANCE MANUAL BEFORE CARRYING OUT ANY MANOEUVRE WITH THE MACHINE.

QUICK INSTRUCTIONS FOR HINOWA LIGHTLIFT 15.70 & 13.70 PERFORMANCE

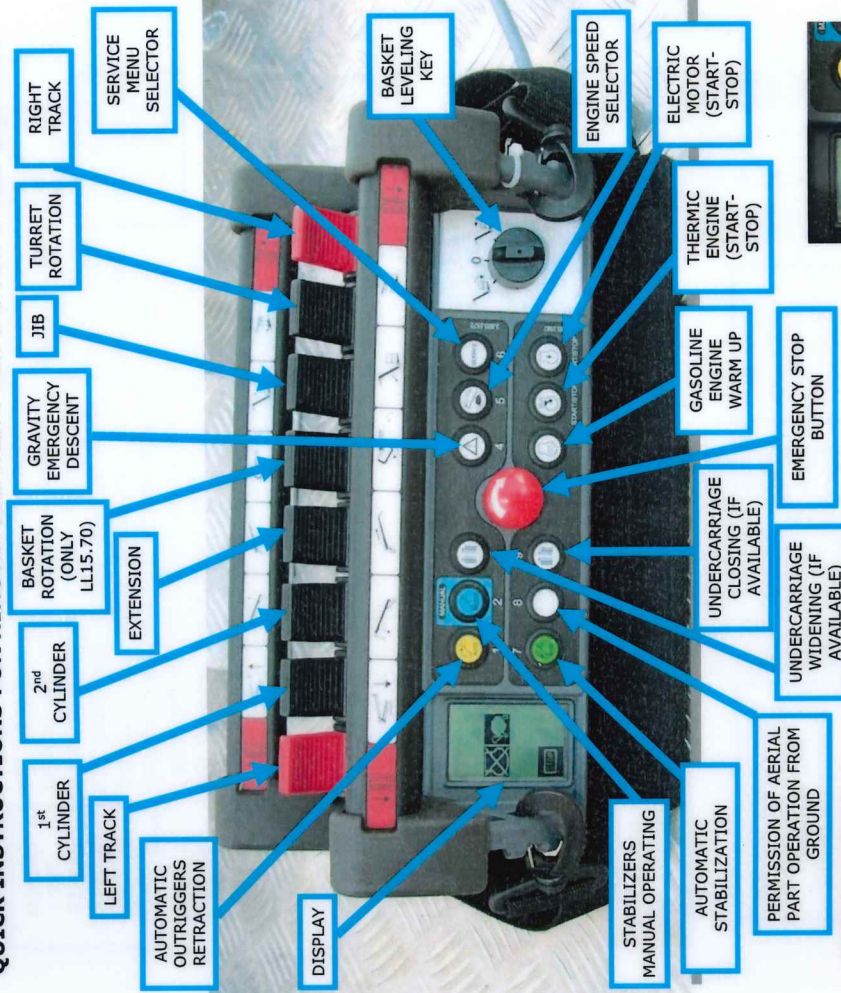

To start the machine battery cutter and main key must be turned ON, then the remote control emergency STOP button must be pressed and released, as reminded by the icon here on the right side. While all the emergency stop buttons are released, engine or electric motor could be ignited by pressing the relevant buttons on the remote control (see picture above).



FIPE131521701

After work is finished close carefully and completely all the arms and perfectly align the turret looking at the yellow arrows. Then the outriggers could be lifted and the tracks moved.

LIST OF DISPLAY ICONS

Note1: On gasoline machine when the engine is cold, once it's ignited, it's possible to warm it up pressing the "WARM Up" button on the remote control, engine will run faster for 20 seconds.

TRACKS MOVEMENTS

All the outriggers must be raised from the ground to move the tracks, otherwise the icon here on the left side will be displayed. When jib is closed the tracks could be moved operating from the ground or form the basket, otherwise it's possible to move them even if jib is opened but in this case the basket must be unloaded from its support (LL1570), or be kept empty (LL1370) as reminded by the picture here on the right side. In this case, operator must drive from the ground keeping the remote control on his hands.



RAISE THE
OUTRIGGERS
FROM THE
GROUND

UNLOAD
THE
BASKET
FROM ITS
SUPPORT
(LL1570)



BASKET MUST
BE EMPTY
(LL1370)


To move the tracks press the red joystick on the remote control.
To open the jib (with basket off in the LL15) press the jib joystick.
To change the speed it has to be used button n.5 of remote control.

Note2: Jib must be close to allow outriggers' movements.

Note3: In particular conditions, tracks' speed could be automatically limited by speed control which prevent unsafe translations.

OUTRIGGERS MOVEMENTS

Machine must be perfectly closed and aligned to permit to move the outriggers, so all the arms and the jib closed and aerial part rotated as indicated by the alignment arrows (see picture here aside). The MACHINE CLOSED AND ALIGNED icon (see the picture below) indicates the closed and aligned condition. To move the outriggers the remote control could be in the basket support or operator can keep it in his hands also standing at the ground.

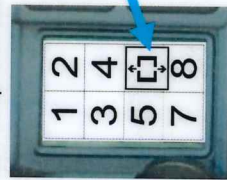

MACHINE
CLOSED AND
ALIGNED
ICON ON THE
DISPLAY




ALIGNMENT
ARROWS

PHOTOCELLS SYSTEM
DETECTS THE CLOSE
AND ALIGNED
CONDITION OF THE
MACHINE

AUTOMATIC STABILIZATION:

To stabilize the machine automatically the machine must be closed aligned. Keeping pressed the green button (n.7) on the remote control the machine starts the automatic stabilization procedure. That procedure will be complete only when the display will show the OK with the MACHINE STABILIZED icon as

shown by the example that follows. The stabilization is the necessary condition to allow aerial part movements.

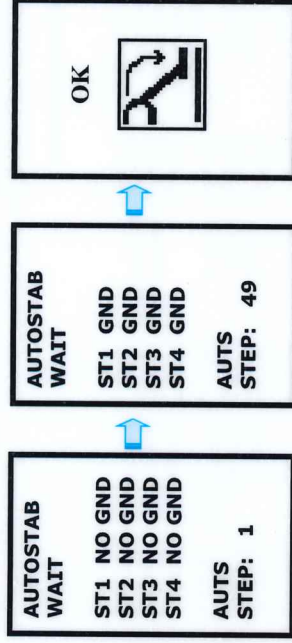

MANUAL STABILIZATION:

It's also possible to move the outriggers one by one pressing the blue button (number 2) and following the indications given on the display. Once all the outriggers are touching the ground, automatic stabilization remains the recommended procedure.

AUTOMATIC OUTRIGGERS RETRACTION:

To put the machine in transport configuration aerial part must be closed and aligned, then, keeping pressed the yellow button (number 1), all the outriggers should be completely lifted until the end of their stroke.

AERIAL PART MOVEMENTS

To move the aerial part the remote control must be positioned in its basket support. Aerial part movements are possible only when the machine is stabilized and therefore when the MACHINE STABILIZED icon appears in position 5 of the display. If one stabilization condition is missing, when a joystick is moved the display indicates the missing condition with "FAIL" as follows.

- ST"X" FAIL indicates that outrigger n. "X" is not touching the ground.
- INCL FAIL means that the machine is not levelled within the inclination clearance.
- LOAD FAIL means that basket is overloaded (more than 230Kg into the basket so more than about 280 Kg read by the input menu).
- BASKET FAIL means that the remote control is not properly placed on its basket support (it does not feel the remote control support magnet).
- PEDAL (OPTIONAL) FAIL means that pedal option is activated and pedal is not properly pressed in order to allow the movement.
- AUTOST FAIL means auto-stabilization procedure not complete properly.



ERROR



ST1
INCL
FAIL
FAIL



ERROR



BASKET FAIL



MACHINE
STABILIZED
ICON ON
THE
DISPLAY