


DATE

《SUPER CHERRY MASTER》

[EDGE CONNECTOR 72pin]				
Parts Side		Solder Side		
Video	Red	1	Video	Green
Video	Blue	2	Video	Sync.
Speaker		3	SP. Gnd.	
		4		
		5		
		6		
		7		
SW	Service In	8		
P1 SW	Start	9		
P1 SW	Small/Odds	10		
P1 SW	Bet	11		
P1 SW	Take Score	12		
P1 SW	Double Up	13		
		14		
		15		
P1 SW	Big	16		
		17		
SW	Coin In	18	SW	Key In
		19	SW	Token In
SW	Analyzer	20	SW	Confirm
SW	Payout	21	SW	Key Down
SW	Hopper Empty	22	SW	Hopper Micro
Counter	Coin In	23		
Counter	Key In	24		
		25		
Counter	Token In	26		
Counter	Hopper Out	27	Counter Lack of Hopper	
Counter	Key Down	28		
Lamp	Start	29		
Lamp	Small/Odds	30		
Lamp	Bet	31		
Lamp	Take Score	32		
Lamp	Double Up	33		
Lamp	Big	34		
		35		
Gnd.		36	Gnd.	

DATE

《SUPER CHERRY MASTER》

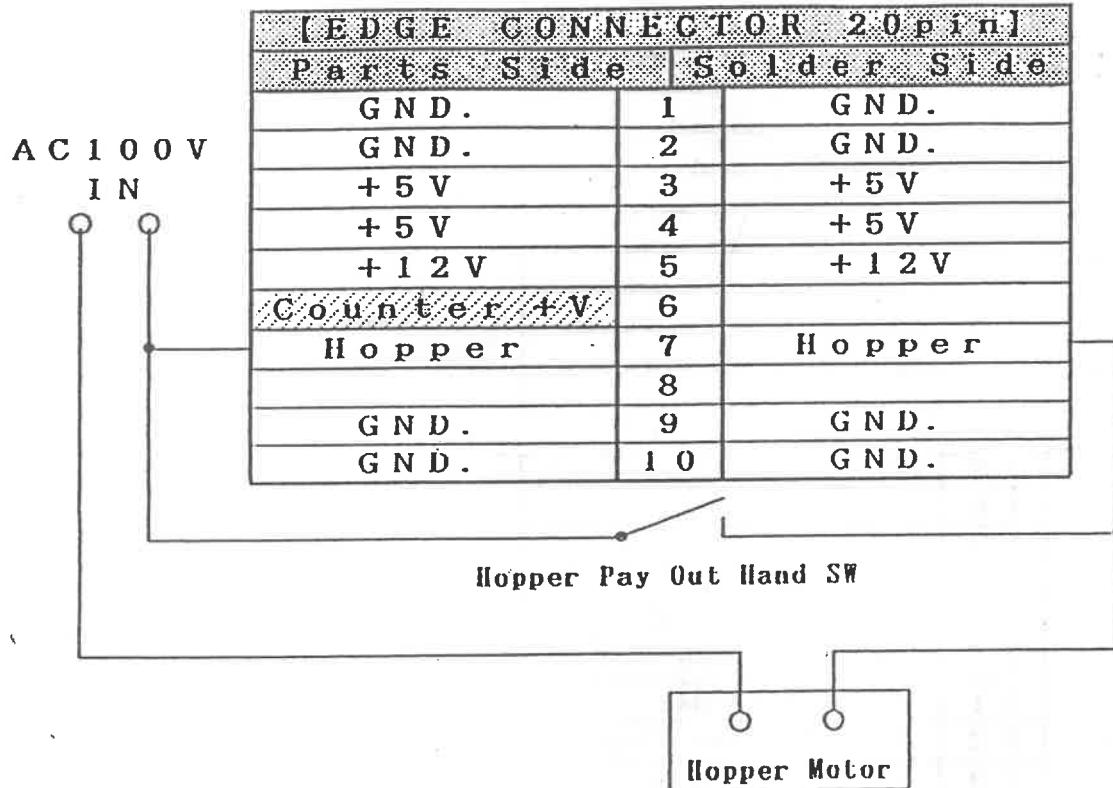

▼ Counter +V depends on Spec. of voltage, Please connect +5V or +12V.

《SUPER CHERRY MASTER》

DIP SW [No. 1]		1	2	3	4	5	6	7	8
Not Used		ON							
		OFF							
Double Up Game	On		ON						
On/Off	Off		OFF						
Double Up Game <7>	Even		ON						
Player Value	Loss		OFF						
Double Up Game	Displayed		ON						
Girl Display	Undisplayed		OFF						
Payout Type	Payout SW		ON						
	Automatic		OFF						
Reel Speed	High		ON						
	Low		OFF						
Hopper Out	Active High		ON						
Micro Switch	Active Low		OFF						
Odds Over 100	On		ON						
Sound necessary	Off		OFF						

DIP SW [M.2]		1	2	3	4	5	6	7	8
Main Game Payout Ratio	55 %	ON	ON	ON					
	60 %	OFF	ON	ON					
	65 %	ON	OFF	ON					
	70 %	OFF	OFF	ON					
	75 %	ON	ON	OFF					
	80 %	OFF	ON	OFF					
	85 %	ON	OFF	OFF					
	90 %	OFF	OFF	OFF					
Double Up Game Payout Ratio	80 %				ON				
	90 %				OFF				
Bet Max.	8 Bet					ON	ON		
	16 Bet					OFF	ON		
	32 Bet					ON	OFF		
	64 Bet					OFF	OFF		
Bet Limit For Any Bonus	8 Bet							ON	
	16 Bet							OFF	
Bet Limit For Center Super 7	Unlimited								ON
	Limited				Number set Dip No. 2-7				OFF

《SUPER CHERRY MASTER》

DIP SW [M.3]			1	2	3	4	5	6	7	8
C o i n A R a t i o	①	1coin 1 credit	ON	ON	ON					
	②	1coin 2 credit	OFF	ON	ON					
	③	1coin 4 credit	ON	OFF	ON					
	④	1coin 5 credit	OFF	OFF	ON					
	⑤	1coin 8 credit	ON	ON	OFF					
	⑥	1coin 10 credit	OFF	ON	OFF					
	⑦	1coin 20 credit	ON	OFF	OFF					
	⑧	1coin 25 credit	OFF	OFF	OFF					
Key In Ratio *** Times by Coin A Ratio		X 5				ON	ON			
		X 10				OFF	ON			
		X 20				ON	OFF			
		X 50				OFF	OFF			
C o i n C R a t i o *** Times by Coin A Ratio		X 5						ON		
		X 10						OFF		
C o i n D R a t i o *** (Only for Use Token)		X 1							ON	
		X 2								OFF
Not Used										

*** List of Detail

COIN A	X 2	X 5
① 1coin 1 credit	1coin 2 credit	1coin 5 credit
② 1coin 2 credit	1coin 4 credit	1coin 10 credit
③ 1coin 4 credit	1coin 8 credit	1coin 20 credit
④ 1coin 5 credit	1coin 10 credit	1coin 25 credit
⑤ 1coin 8 credit	1coin 16 credit	1coin 40 credit
⑥ 1coin 10 credit	1coin 20 credit	1coin 50 credit
⑦ 1coin 20 credit	1coin 40 credit	1coin 100 credit
⑧ 1coin 25 credit	1coin 50 credit	1coin 125 credit

★ Example

① Coin A
1 Coin 10 Credit
② Key In
1 Note 100 Credit
③ Coin C
1 Coin 50 Credit
④ Coin D
1 Token 10 Credit

X 10	X 20	X 50
① 1coin 10 credit	1coin 20 credit	1coin 50 credit
② 1coin 20 credit	1coin 40 credit	1coin 100 credit
③ 1coin 40 credit	1coin 80 credit	1coin 200 credit
④ 1coin 50 credit	1coin 100 credit	1coin 250 credit
⑤ 1coin 80 credit	1coin 160 credit	1coin 400 credit
⑥ 1coin 100 credit	1coin 200 credit	1coin 500 credit
⑦ 1coin 200 credit	1coin 400 credit	1coin 1000 credit
⑧ 1coin 250 credit	1coin 500 credit	1coin 1250 credit

《SUPER CHERRY MASTER》





DIP SW [N.4]		1	2	3	4	5	6	7	8
Credit Limit	Unlimited	ON	ON	ON					
	100,000	OFF	ON	ON					
	50,000	ON	OFF	ON					
	40,000	OFF	OFF	ON					
	30,000	ON	ON	OFF					
	20,000	OFF	ON	OFF					
	10,000	ON	OFF	OFF					
	5,000	OFF	OFF	OFF					
Credit Limit Display	Displayed				ON				
	Undisplayed				OFF				
Coin In Limit	20,000				ON	ON			
	10,000				OFF	ON			
	5,000				ON	OFF			
	1,000				OFF	OFF			
Hopper Limit	Unlimited						ON	ON	
	1,000						OFF	ON	
	500						ON	OFF	
	300						OFF	OFF	

DIP SW [N.5]		1	2	3	4	5	6	7	8
Panel Type	Type A	ON	ON						
	Type B	OFF	ON						
	Type C	ON	OFF						
	Type D	OFF	OFF						
Skill Stop On/Off	Used			ON					
	Not Used			OFF					
All Stop On/Off	Used				ON				
	Not Used				OFF				
Bonus Games Entry Condition	9-5-1				ON				
	12-7-1				OFF				
Not Used					ON				
					OFF				
Not Used						ON			
						OFF			
Not used							ON		
							OFF		

DATE

《SUPER CHERRY MASTER》

PANEL TYPE (DIP SW [No. 5] - 1, 2)

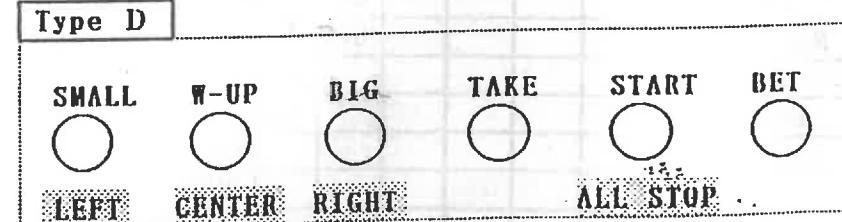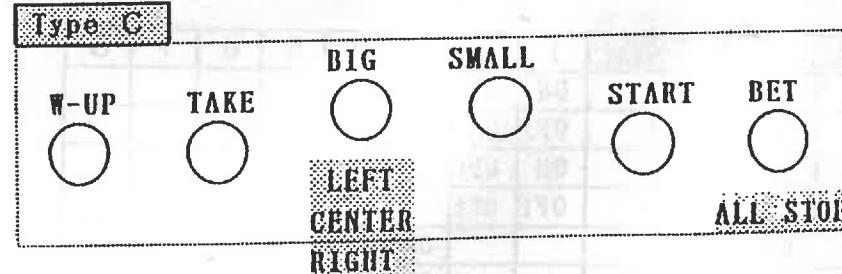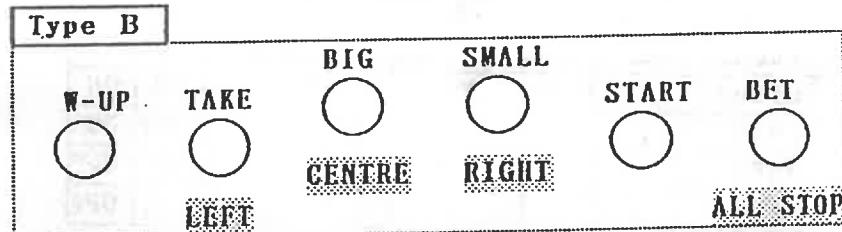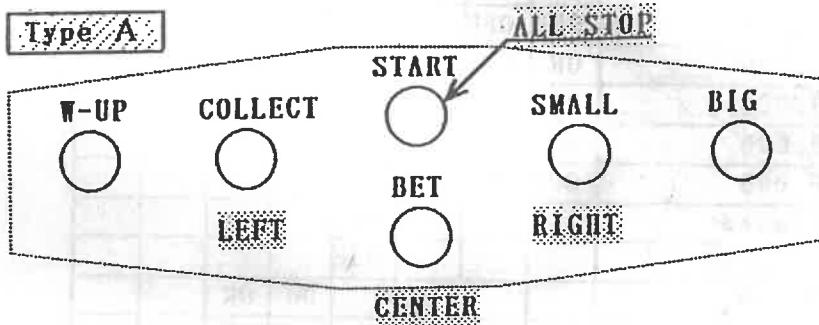

* Setting 'Skill Stop off' (Dip SW 5-3) makes
 'All Stop' Button inactive.