

1(6) P(CB)


116

DIP SWITCH 1		1	2	3	4	5	6	7	8
COIN A 1 COIN	5 CREDIT	OFF	OFF	OFF					
	2	ON	OFF	OFF					
	1	OFF	ON	OFF					
	10	ON	ON	OFF					
	20	OFF	OFF	ON					
	25	ON	OFF	ON					
	40	OFF	ON	ON					
	50	ON	ON	ON					
KEY IN 1 COIN	50 CREDIT				OFF	OFF	OFF		
	40				ON	OFF	OFF		
	25				OF	ON	OFF		
	20				ON	ON	OFF		
	10				OFF	OFF	ON		
	5				ON	OFF	ON		
	60				OFF	ON	ON		
	100				ON	ON	ON		
COIN C 1 COIN	25 CREDIT							OFF	OFF
	10							ON	OFF
	5							OFF	ON
	50							ON	ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
PAYOUT PERCENTAGE OF THE MAIN GAME									
	56% +4	ON	ON	ON					
	60% +3	OFF	ON	ON					
	64% +2	ON	OFF	ON					
	68% +1	OFF	OFF	ON					
	72% ±0	ON	ON	OFF					
	76% -1	OFF	ON	OFF					
	80% -2	ON	OFF	OFF					
	84% -3	OFF	OFF	OFF					
NUDE LADY IN THE SCREEN					ON				
NO NUDE LADY IN THE SCREEN					OFF				
TIED UP TO OFF						OFF	OFF		
TIED UP TO OFF								OFF	

DIP SWITCH 3		1	2	3	4	5	6	7	8
HOPPER LIMIT									
	NO LIMIT	ON	ON						
	1,000	OFF	ON						
	500	ON	OFF						
	300	OFF	OFF						
MAXIMUM OF BET									
	8			ON	ON				
	16			OFF	ON				
	32			ON	OFF				
	64			OFF	OFF				
CREDIT LIMIT									
	NO LIMIT					ON	ON	ON	
	100,000					OFF	ON	ON	
	50,000					ON	OFF	ON	
	40,000					OFF	OFF	ON	
	30,000					ON	ON	OFF	
	20,000					OFF	ON	OFF	
	10,000					ON	OFF	OFF	
	5,000					OFF	OFF	OFF	
TIED UP TO OFF									OFF

DIP SWITCH 4		1	2	3	4	5	6	7	8
CREDIT IN LIMIT									
IN NO LIMIT		OFF	OFF						
	3,000	ON	OFF						
	2,000	OFF	ON						
	1,000	ON	ON						
HOPPER SWITCH									
	N. C.			ON					
	N. O.			OFF					
TIED UP TO OFF					OFF				
COIN D									
1 COIN	1 CREDIT					OFF	OFF	OFF	OFF
1	2					ON	OFF	OFF	OFF
1	3					OFF	ON	OFF	OFF
1	4					ON	ON	OFF	OFF
1	5					OFF	OFF	ON	OFF
1	10					ON	OFF	ON	OFF
2	5					OFF	ON	ON	OFF
2	3					ON	ON	ON	OFF
2	1					OFF	OFF	OFF	ON
3	1					ON	OFF	OFF	ON
3	2					OFF	ON	OFF	ON
4	3					ON	ON	OFF	ON
4	1					OFF	OFF	ON	ON
5	2					ON	OFF	ON	ON
5	1					OFF	ON	ON	ON
10	1					ON	ON	ON	ON

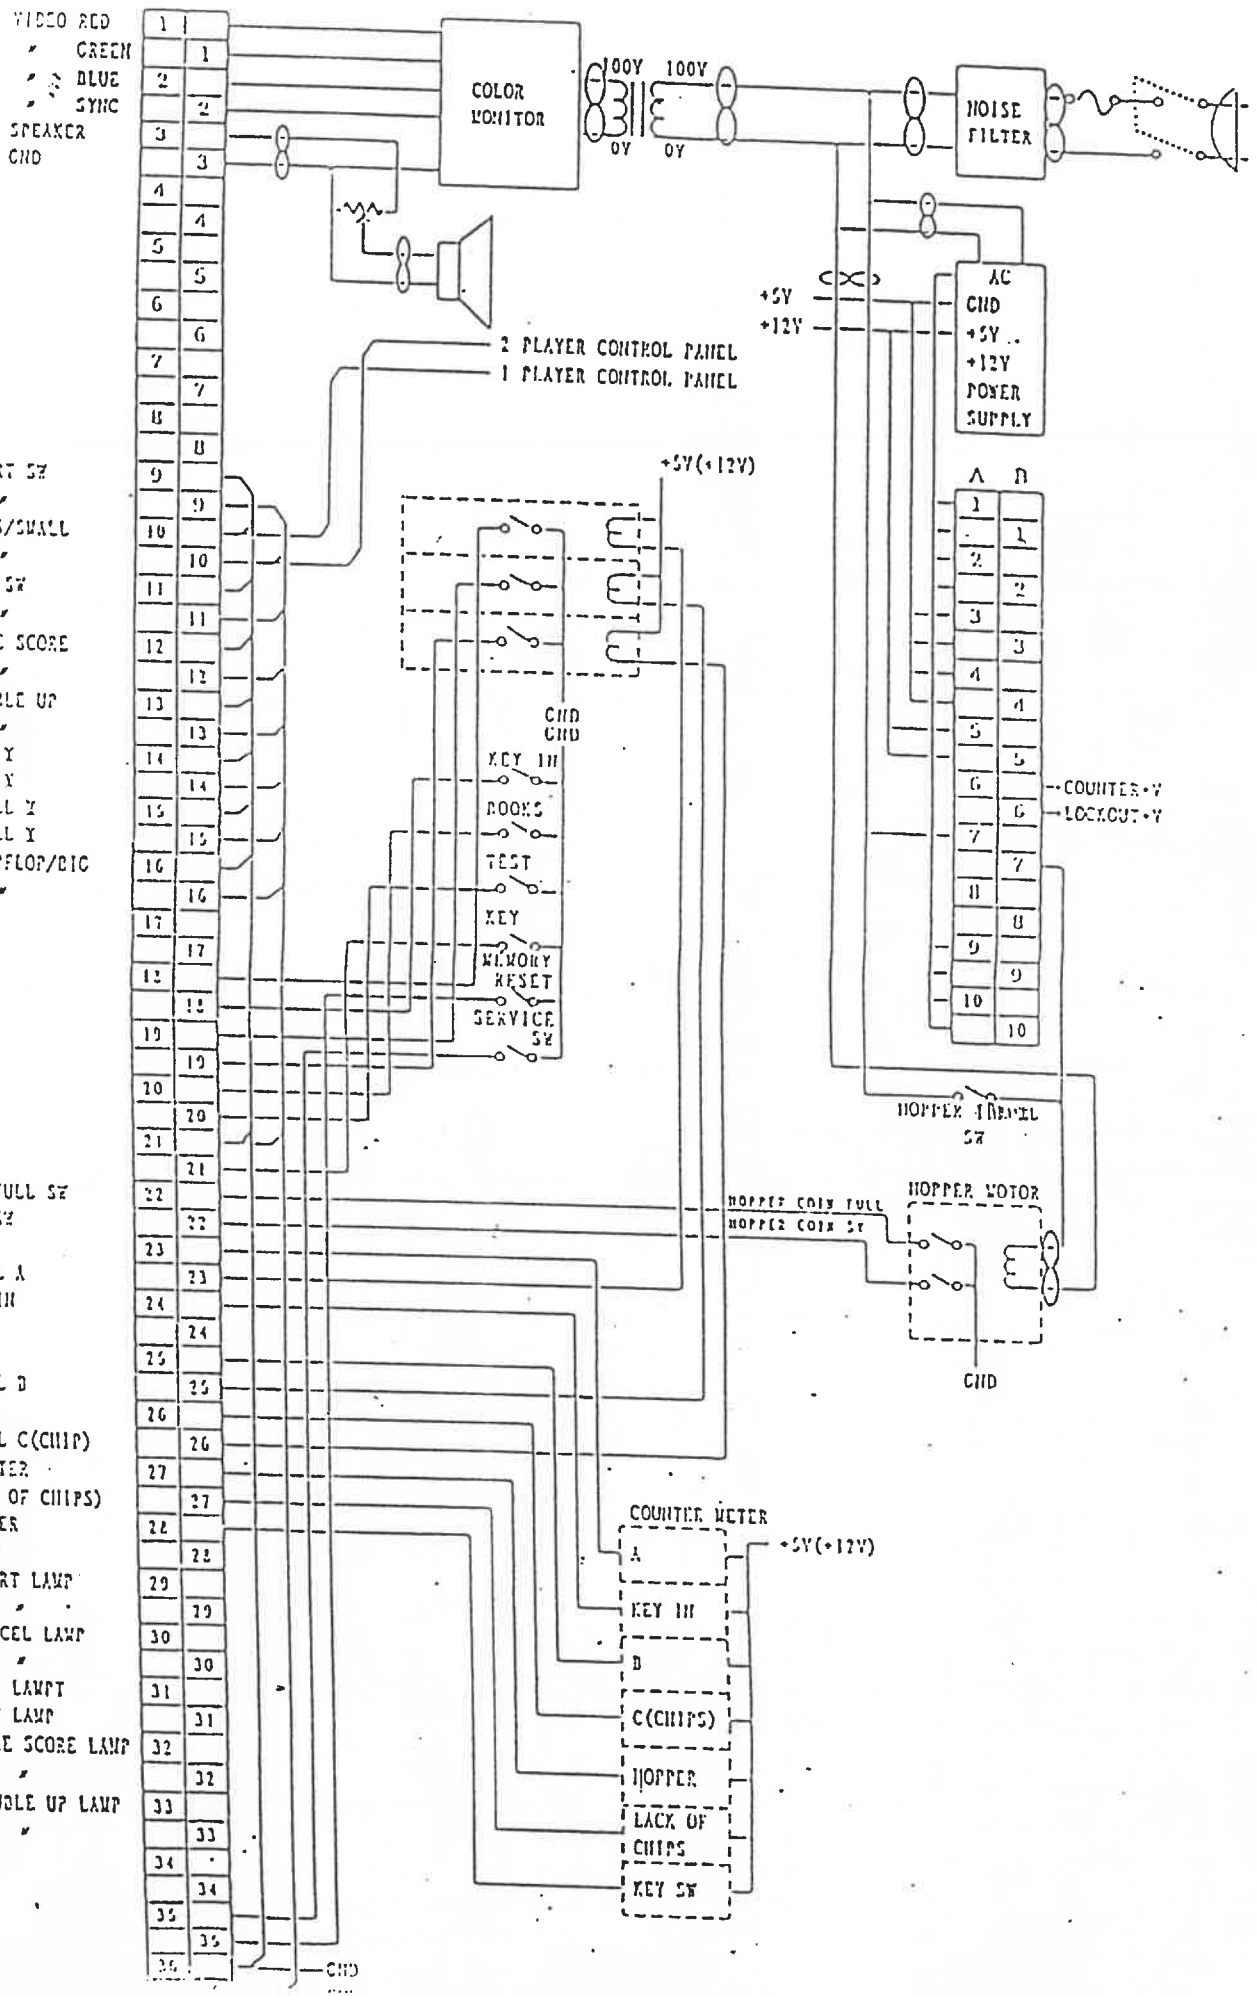


- 1 PLAYER START SW
- 2 PLAYER
- 1 PLAYER ODDS/SMALL
- 2 PLAYER
- 1 PLAYER DET SW
- 2 PLAYER
- 1 PLAYER TAKE SCORE
- 2 PLAYER
- 1 PLAYER DOUBLE UP
- 2 PLAYER
- 1 PLAYER BIG X
- 2 PLAYER BIG X
- 1 PLAYER SMALL X
- 2 PLAYER SMALL X
- 1 PLAYER FLIPFLOP/BIG
- 2 PLAYER

- COIN SW A
- KEY IN SW
- COIN SW B
- COIN SW C
- BOOKS SW
- TEST SW
- PAY OUT SW
- KEY SW
- HOPPER COIN FULL SW
- HOPPER COIN SW
- COUNTER A
- LOCK OUT COIL A
- COUNTER KEY IN
- COUNTER B
- LOCK OUT COIL B
- COUNTER C
- LOCK OUT COIL C(CHIPS)
- HOPPER COUNTER
- COUNTER(LACK OF CHIPS)
- KEY SW COUNTER

- 1 PLAYER START LAMP
- 2 PLAYER
- 1 PLAYER CANCEL LAMP
- 2 PLAYER
- 1 PLAYER DET LAMP
- 2 PLAYER DET LAMP
- 1 PLAYER TAKE SCORE LAMP
- 2 PLAYER
- 1 PLAYER DOUBLE UP LAMP
- 2 PLAYER


CHD

PARTS SIDE A B SOLDER SIDE

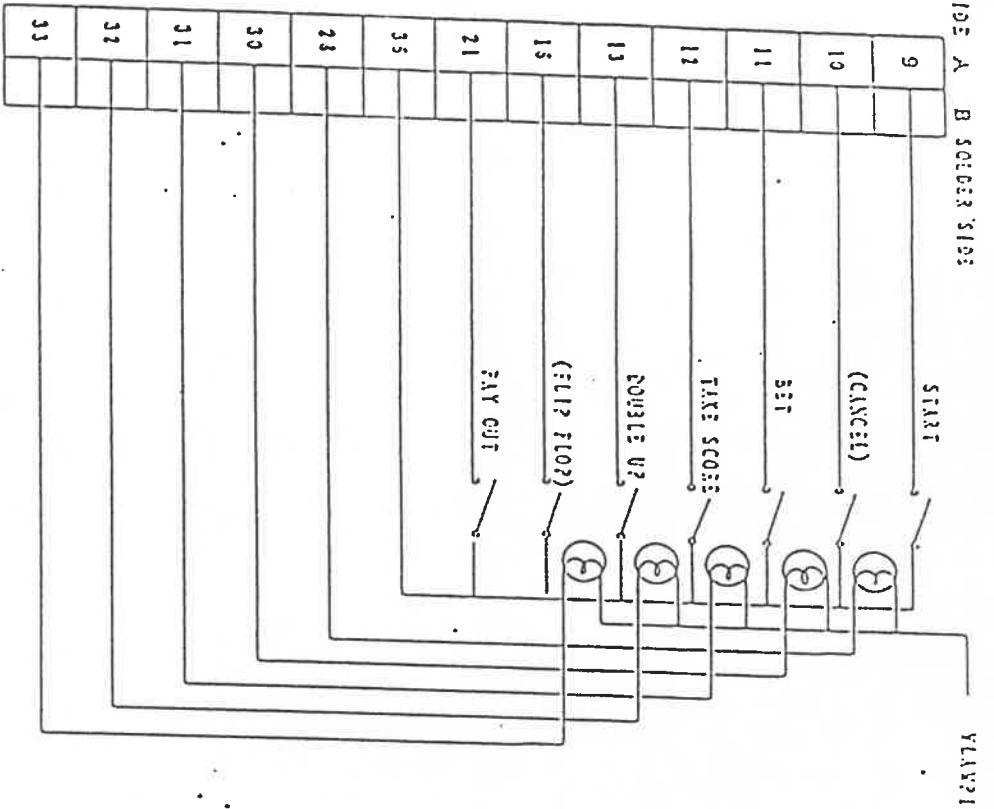

CONTROL PANEL
UPRIGHT OR 1PLAYER USE

PARTS SIDE A B SOLDER SIDE

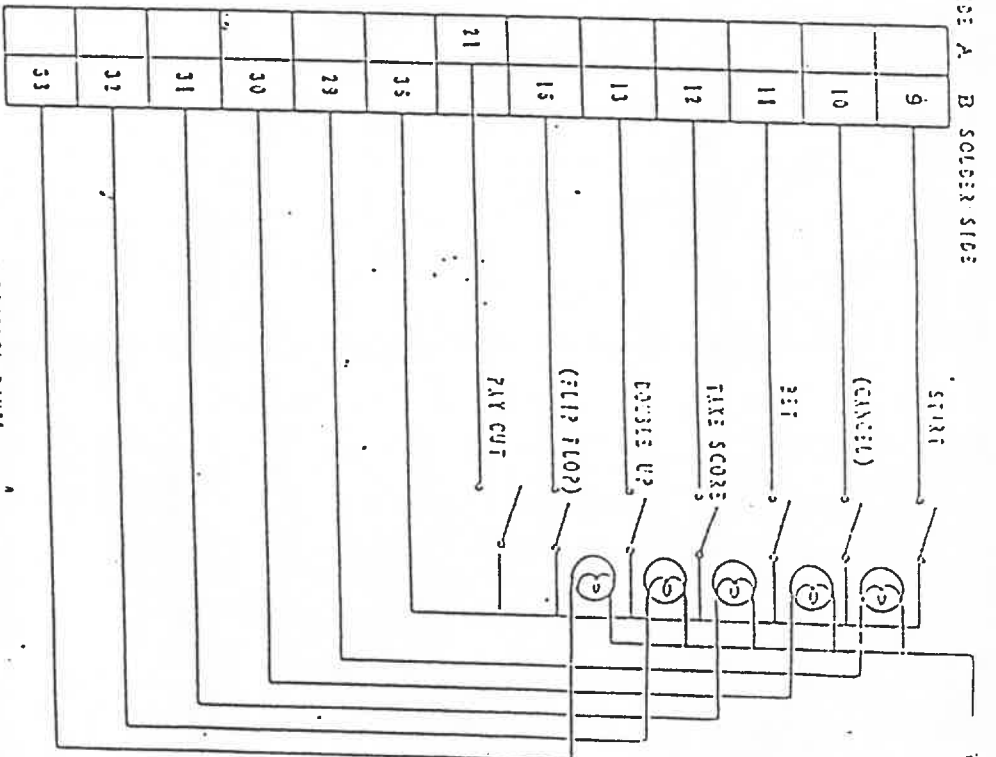

CONTROL PANEL
1PLAYER USE

CONTROL PANEL