

RADIATOR STOP LEAK

No. 943081

Product Description

Seals leaky water coolers and heat exchangers, leaking water pumps and valves, loose connections and cracked coolant hoses without dogging the system.

Application:

Add to the coolant, start the engine and set the heater to heat. After that check the sealing coolant IBV81.



Consumption

300 ml for 5-10 ltr. Capacity



Reaction time

While engine is running