

Sensor Parameter Settings (FESTO)



PARAMETER SETTINGS OF FESTO SPAN-B SERIES SENSORS

SEALING SENSOR

Device Reset : While pressing the A AND B buttons simultaneously, press and release the Edit button once.



Step 1

1- Press the Edit button once.
SPEC text appears on the screen.



Step 2

2- Press the Edit button once.
Fctn to screen text comes.
In this menu, the following icon is selected by pressing the A and B keys.




Step 3

3- Press the Edit button once and
SP.Lo To the menu comes. While in
this menu, **1.00** Bar is set with the
A and B keys.




Step 4

4- Press the Edit button once and
SP.Hi To the menu comes. While in
this menu, **2.50** Bar is set with the
A and B keys.

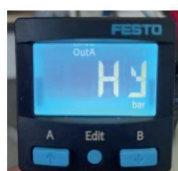

Step 5

5- Press the Edit button once and
Go to Hy Menu. While in this menu,
it is set to 0.00 with the A and
B keys.

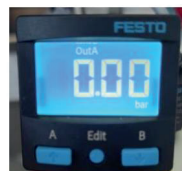

Step 6

6- Press and hold the Edit
button for 3 seconds and return
to the main screen. Pressure
value display



PARAMETER SETTINGS OF FESTO SPAN-B SERIES SENSORS

VACUUM SENSOR

Device Reset : While pressing the A AND B buttons simultaneously, press and release the Edit button once.




Step 1

1- Press the Edit button once. SPEC text appears on the screen.




Step 2

2- Press the Edit button once. Fctn to screen text comes. In this menu, the following icon is selected by pressing the A and B keys.

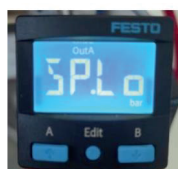


Step 3

3- Press the Edit button once and SP.Lo To the menu comes. While in this menu, -.003 Bar is set with the A and B keys.

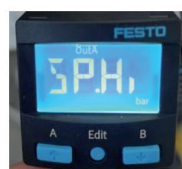


Step 4

4- Press the Edit button once and SP.Hi To the menu comes. While in this menu, 2.50 Bar is set with the A and B keys.

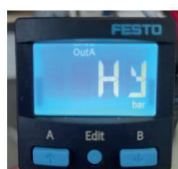

Step 5

5- Press the Edit button once and Go to Hy Menu. While in this menu, it is set to 0.00 with the A and B keys.

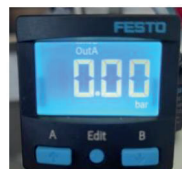

Step 6

6- Press and hold the Edit button for 3 seconds and return to the main screen. Pressure value display