

Attaching the Seat Back to the Musician's Stool



The seat back should come with an L-shaped bar, two threaded knobs, a bracket, two threaded bolts and two washers (see figure 1). You will need a 7/16" wrench to tighten the bolts.



1. Turn your stool upside down and locate the two threaded holes on the underside of the seat (see figure 2).
2. Orient the bracket over the holes so that the longer end is pointing in towards the middle of the stool and the shorter end is pointing out (see figure 3).

3. Slide a washer onto each bolt and use the bolts to attach the bracket to the seat.

4. Screw one of the threaded knobs partway into the center hole of the bracket.

5. Turn the stool right side up and slide the shorter end of the L-shaped bar into the bracket (see figure 4). Use the knob to tighten it in place.

6. Slide the seat back attachment into the top of the L-shaped bar and screw in the other knob to tighten it in place (see figure 4).

7. You can use the knobs to adjust both the height and the lateral position of the seat back.

