





Installation (GB)
 Installation (F)
 Einbauanleitung (D)
 Installazione (I)
 Installatie (NL)
 Instalação (P)
 Instalacion (E)
 Installation (S)
 Montavimo (LT)

Extruder Rupture Disc (ERD)

UK office
 Elfab Limited
 Alder Road, North Shields,
 Tyne and Wear, NE29 8SD
 UNITED KINGDOM
 E: uksales@osecoelfab.com
 T: +44 (0)191 293 1234
osecoelfab.com

CE 0343 [P>0.5Bar]


1

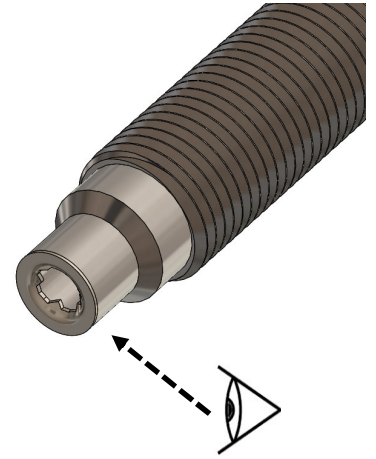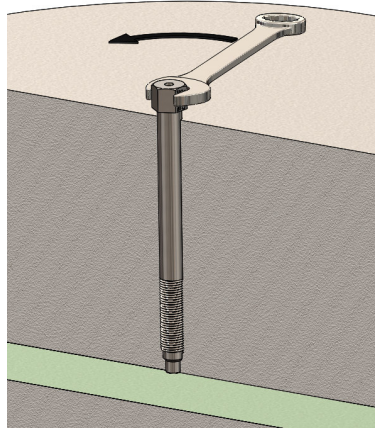


2



3

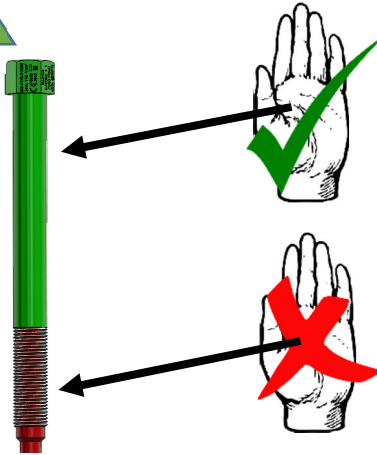


4

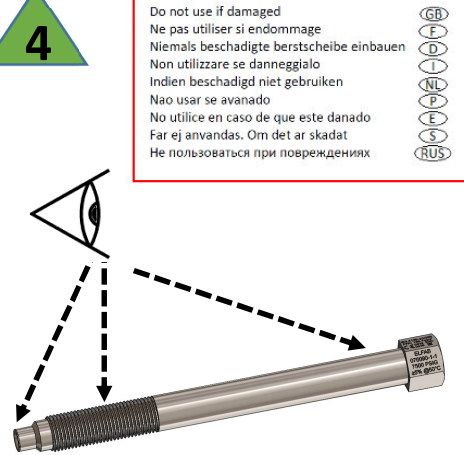


Do not use if damaged
 Ne pas utiliser si endommagé
 Niemals beschadigte berstscheibe einbauen
 Non utilizzare se danneggiato
 Indien beschadigd niet gebruiken
 Nao usar se avanado
 No utilice en caso de que este danado
 Far ej anvandas. Om det ar skadat
 Не пользоваться при повреждениях

(GB)
 (F)
 (D)
 (I)
 (NL)
 (P)
 (E)
 (S)
 (RUS)



5

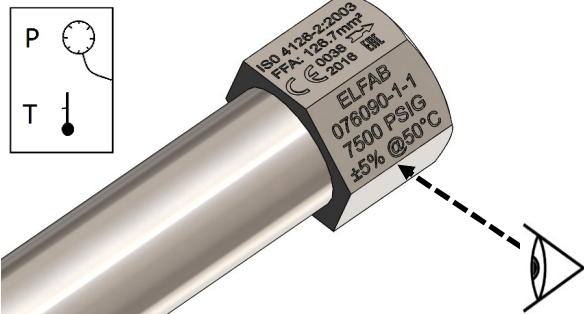

6

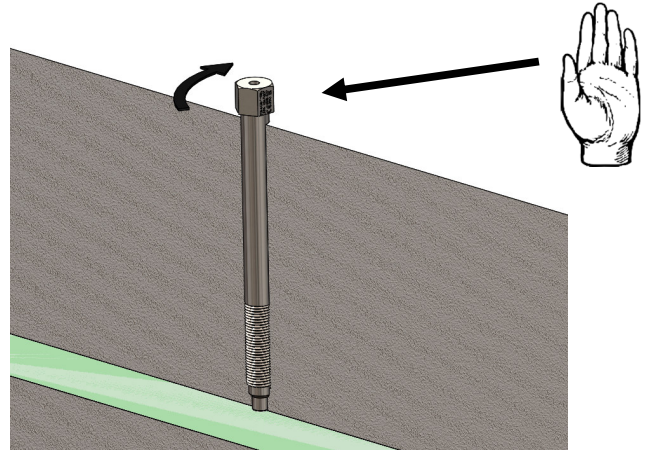

7

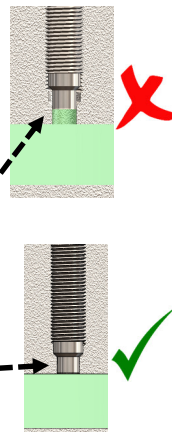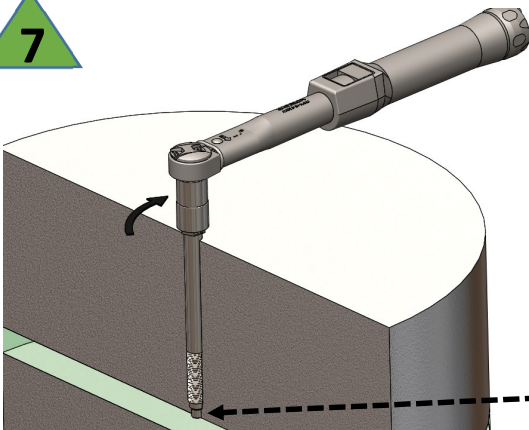

8

Maximum Torque Setting (Nm)

Thread	Torque
½ - 20 UNF - 2A	22