





OE5 Plugs

UK office
Elfab Limited
Alder Road, North Shields,
Tyne and Wear, NE29 8SD
UNITED KINGDOM
E: uksales@osecoelfab.com
T: +44 (0)191 293 1234
osecoelfab.com


Installation (GB)
Installation (F)
Einbauanleitung (D)
Installazione (I)
Installatie (NL)
Instalação (P)
Instalación (E)
Installation (S)
Montavimo (LT)

CE 0343 [P>0.5Bar]

1

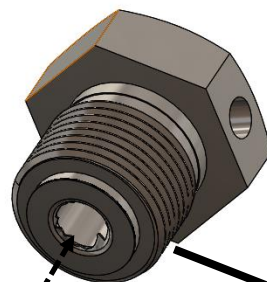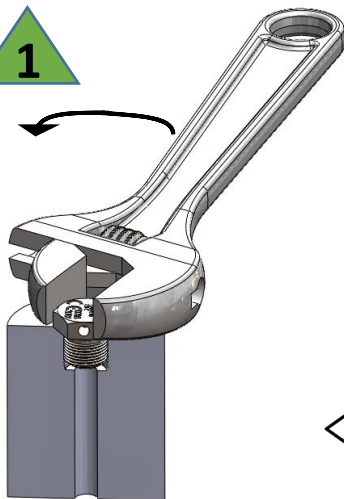


2

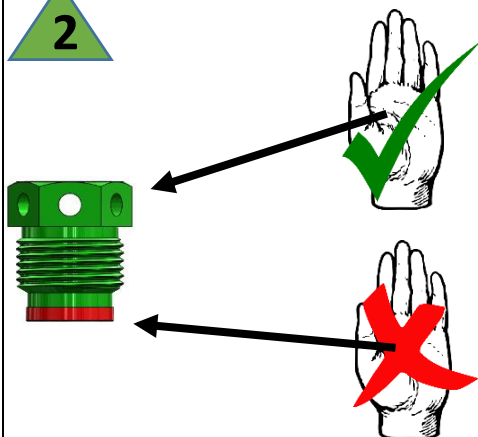


3

Do not use if damaged
Ne pas utiliser si endommagé
Niemals beschädigte berstscheibe einbauen
Non utilizzare se danneggiato
Indien beschadigd niet gebruiken
Nao usar se avanado
No utilice en caso de que este danado
Far ej anvandas. Om det ar skadat
Ne пользоваться при повреждениях

(GB)
(F)
(D)
(I)
(NL)
(P)
(E)
(S)
(RUS)

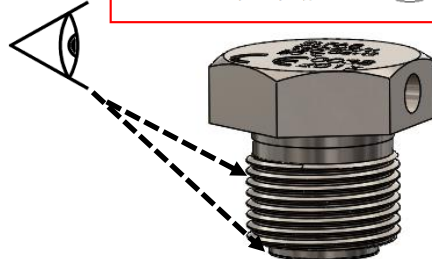


4

 

5a


BSPT/NPT

OR

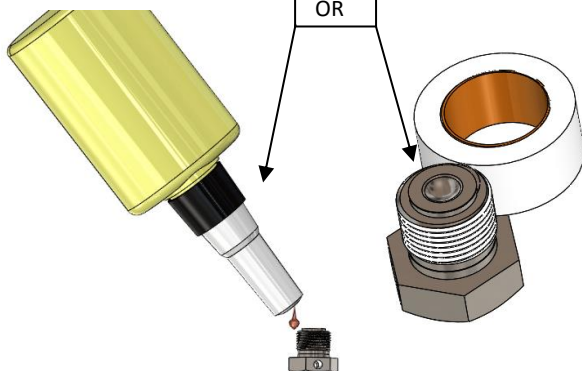


5b

BSPP/ISO METRIC

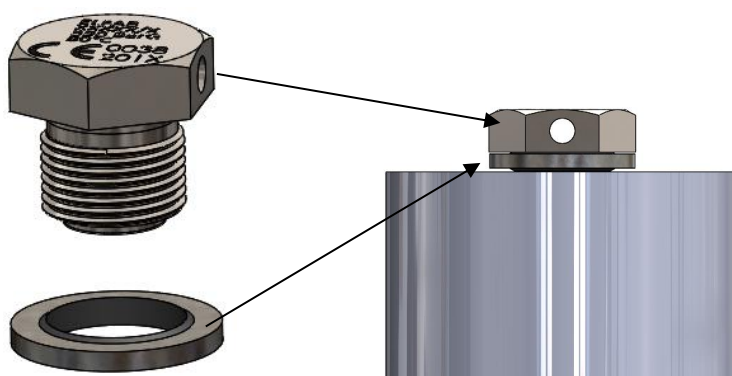

6

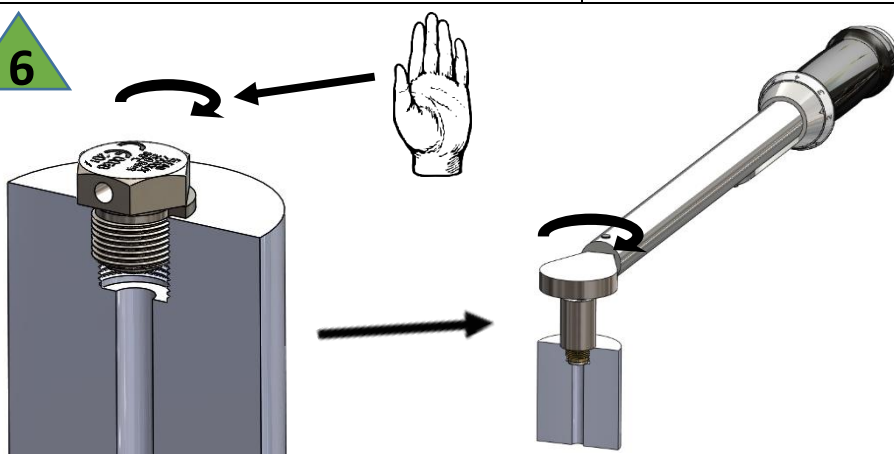

7

Maximum Torque Setting (Nm) (TYPICAL)

Thread	Torque
ISO METRIC	20
1/4" (Inch)	30
3/8" (Inch)	40
1/2" (Inch)	50