





Installation (GB)
 Installation (F)
 Einbauanleitung (D)
 Installazione (I)
 Installatie (NL)
 Instala  a o (P)
 Instalacion (E)
 Installation (S)
 Montavimo (LT)

OE6 Plugs

UK office
 Elfab Limited
 Alder Road, North Shields,
 Tyne and Wear, NE29 8SD
 UNITED KINGDOM
 E: uksales@osecoelfab.com
 T: +44 (0)191 293 1234
 osecoelfab.com

CE 0343 [P>0.5Bar]


1

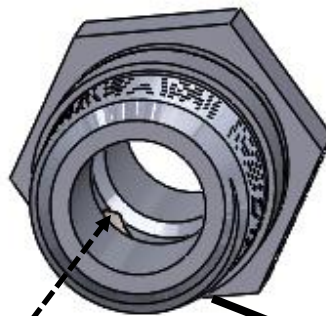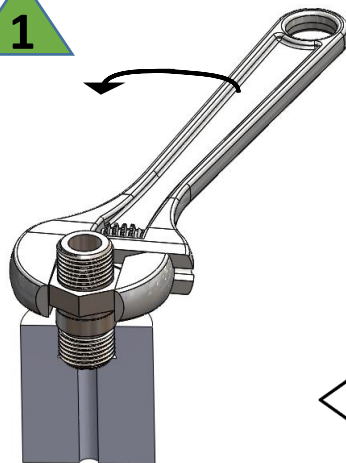


2

Do not use if damaged
 Ne pas utiliser si endommag e
 Niemals besch digte berstscheibe einbauen
 Non utilizzare se danneggiato
 Indien besch digd niet gebruiken
 N o usar se avanado
 No utilice en caso de que este danado
 Far ej anv ndas. Om det  r skadat
 Ne p olʒovats ya pri povrezhdeniy x

(GB)
 (F)
 (D)
 (I)
 (NL)
 (P)
 (E)
 (S)
 (RUS)

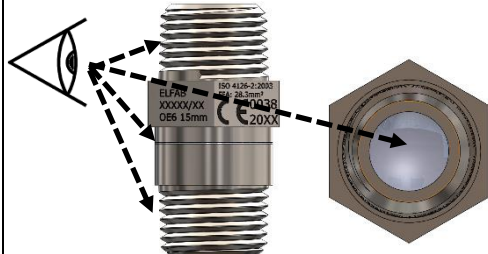

3

 


4a

BSPT/NPT




OR

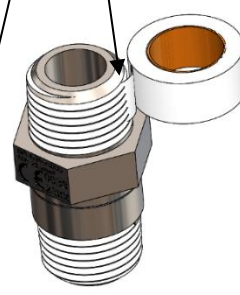


4b

BSPP



OR

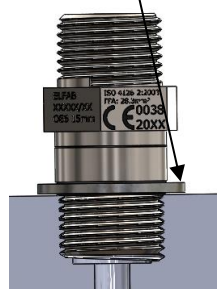

5

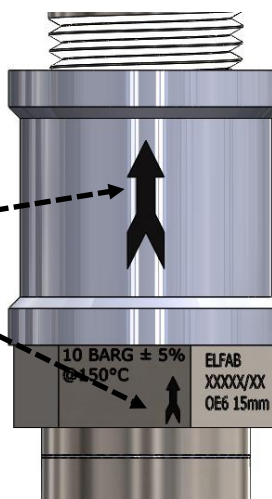

6

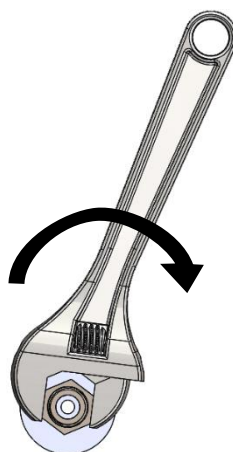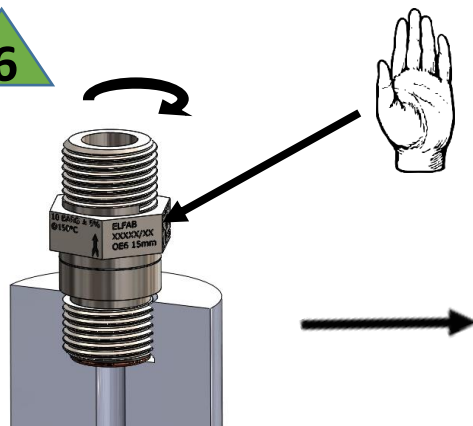

7

Maximum Torque Setting (Nm) (TYPICAL)

Thread	Torque
1/4" (Inch)	30
3/8" (Inch)	40
1/2" (Inch)	50