




- Installation (GB)
- Installation (F)
- Einbauanleitung (D)
- Installazione (I)
- Installatie (NL)
- Instalação (P)
- Instalación (E)
- Installation (S)
- Montavimo (LT)

# Extruder Rupture Disc (ERD)

UK office  
 Elfab Limited  
 Alder Road, North Shields,  
 Tyne and Wear, NE29 8SD  
 UNITED KINGDOM  
 E: uksales@osecoelfab.com  
 T: +44 (0)191 293 1234  
 osecoelfab.com

CE 0343 [P>0.5Bar]


**1**

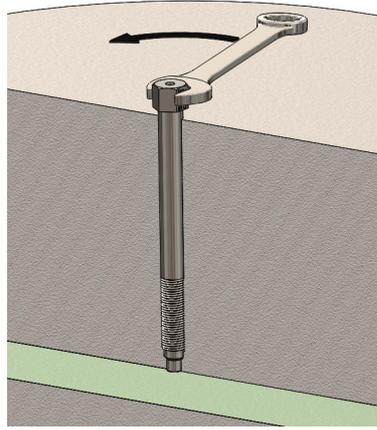

**2**




**3**

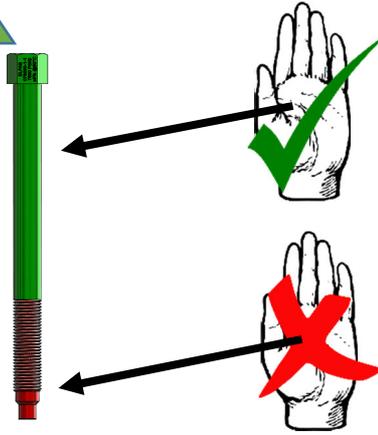


**4**

Do not use if damaged  
 Ne pas utiliser si endommagé  
 Niemals beschadigde berstscheibe einbauen  
 Non utilizzare se danneggiato  
 Indien beschadigd niet gebruiken  
 Não usar se avanado  
 No utilize en caso de que este danado  
 Far ej anvandas. Om det ar skadat  
 Не пользоваться при повреждениях


**5**

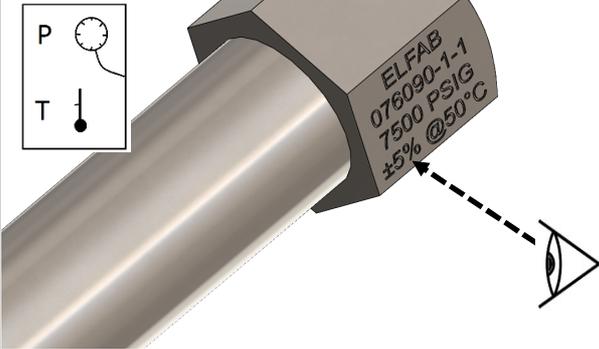


**6**

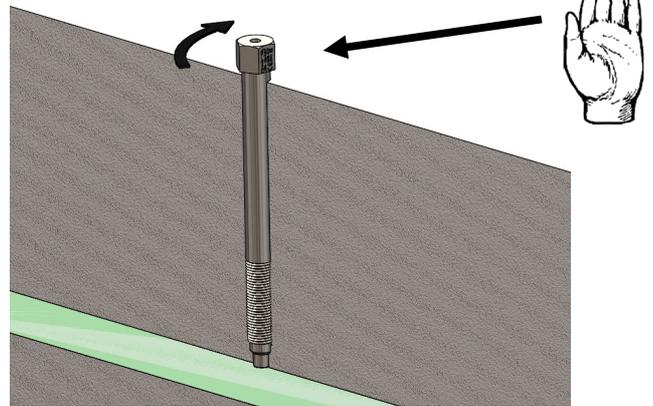

**7**

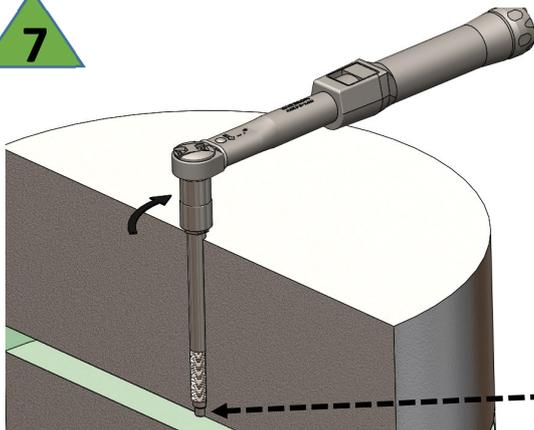

**8**

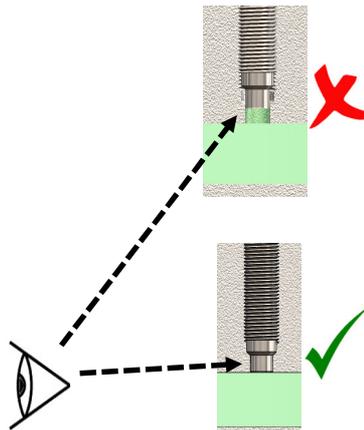

Maximum Torque Setting (Nm)	
Thread	Torque
½ - 20 UNF - 2A	22