

VENOM

User Guide  
VS3607

# PRO CHARGER LED GAMING SURFACE

Venom Ltd. Solution House, Sandon Road,  
Therfield, Hertfordshire SG8 9RE.

Venom is a trademark of Venom Ltd.



# **PRO CHARGER LED GAMING SURFACE**

## **Product: VS3607**

### **Contents**

- 1 x Pro Charger LED Gaming Surface
- 1 x 1.5m USB C to USB C Braided Cable

### **Installation & Use**

1. Unroll your Pro Charger LED Gaming Surface and place on a flat surface
  - a. If your Gaming Surface is not laying completely flat, please allow 24-48 hours for the item to flatten – placing a heavy object on the surface will help
2. Connect one end of the USB C Braided Cable to an appropriate power supply
3. Connect the other end of the cable to the Gaming Surface
4. The Pro Charger LED Gaming Surface will automatically power on – the charging indicator lights will blink red, green and then off.
  - a. LED Lights will initially be red but once changed the Gaming Surface will remember and retain the last colour used if powered on/off

### **LED Lights Control**

1. Simply tap the Venom Icon on the top left side of the Gaming Surface to cycle through the available colours
  - a. Red, White, Blue, Purple, Pink, Green, Orange, Gradient, Rainbow, Off
  - b. Press and hold the Venom Icon for 3 seconds on a certain colour to initiate pulse/glow mode. Press and hold the Venom Icon for 3 seconds to exit

pulse/glow mode

2. The Gaming Surface will store the last colour setting used if powered off

## **Wireless Charger Control**

The Pro Charger LED Gaming Surface also includes wireless charging for a phone and smart watch/earbuds, as well as a Type A Output and Type C Output (not compatible with Samsung Smart Watches)

- Simply place your device onto the wireless charging pad – each pad has a dedicated charging light which will turn red whilst charging

## **Cleaning and Maintenance**

1. Unplug your Pro Charger LED Gaming Surface
2. Use a soft, dry cloth to remove any loose dirt/debris from the gaming surface
  - a. Do NOT use paper towel or similar as this will cause small fragments to break off and therefore cause more dirt/debris to be cleaned from the surface
3. For stubborn stains/marks use a damp cloth with a mild cleaning solution and gently scrub the area
  - a. Ensure your cloth is DAMP and not WET – this will reduce drying times for your Pro Charger Gaming Surface
  - b. Be mindful of the LED trim – excessive or forceful scrubbing can potentially cause damage
4. Use a dry cloth to wipe any remaining moisture
5. Allow the Pro Charger LED Gaming Surface to dry completely before use
6. Re-connect your Pro Charger LED Gaming Surface

## Disposal Notes

- The crossed out wheelie bin logo is used in accordance to the European WEEE directive. As a consumer, you are required to dispose of all electrical and electronic equipment separately from normal household waste. See our website for more details.
- Recycle centres will accept electrical goods and some retailers offer a take back scheme when purchasing a replacement product for free at the end of the devices lifetime.

## Contact

The helpline is a one-to-one service available between the hours of Monday to Friday: 8.30am - 3.00pm

Tel: +44 (0) 1763 284181

Email: [contact@venomuk.com](mailto:contact@venomuk.com)

Website: [www.venomuk.com](http://www.venomuk.com)

To ensure that your call is handled quickly and efficiently, please ensure you have the model number (VS3607) and any other relevant information regarding your product to hand at the time of your call. Please retain these instructions for future use.



The CE logo indicates that we comply with legislation relating to the operational safety and regulatory standards where applicable.