



-P01 MANUAL POSITIONER 4400-580-01

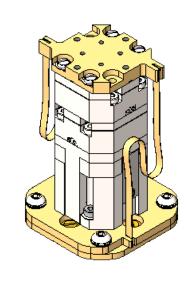


-P11 OPEN LOOP XYZ POSITIONERS 4400-580-11

ROUTE INTERNAL CABLE (NOT SHOWN) TO MICRO-D 25 PORT SIDE PANEL

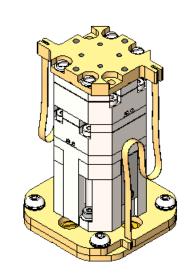

-P12/-P13 CLOSED LOOP XYZ POSITIONERS 4400-580-12 (-P13 IS NON-RACK MOUNT VERSION 4400-580-13)

ROUTE CABLE (NOT SHOWN) TO MICRO-D 25 PORT SIDE PANEL

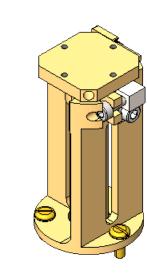


-P04 DAMPED MANUAL POSITIONER 4400-580-05

SHOWN WITH INCLUDED SPACER FOR TOP WINDOW APPLICATIONS.

4100-2253


POSITIONER:

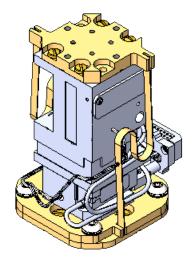

-P28


THE ROOK - CLOSED LOOP XYZ POSITIONERS - 10X10X5MM 4400-580-28

ROUTE INTERNAL CABLE (NOT SHOWN) TO MICRO-D 25 PORT SIDE PANEL

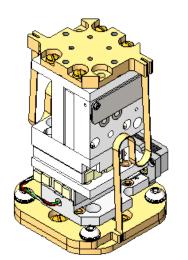

-P14 THE ROOK - OPEN LOOP XYZ POSITIONERS 4400-580-14


ROUTE INTERNAL CABLE (NOT SHOWN) TO MICRO-D 25 PORT SIDE PANEL

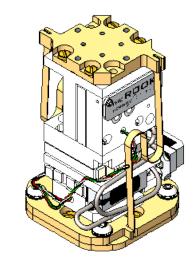

-P19

THE ROOK - CLOSED LOOP XYZ POSITIONERS 4400-580-19

ROUTE INTERNAL CABLE (NOT SHOWN) TO MICRO-D 25 PORT SIDE PANEL

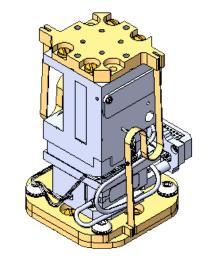

-P27

THE ROOK - OPEN LOOP XYZ POSITIONERS - 10X10X5MM 4400-580-27

ROUTE INTERNAL CABLE (NOT SHOWN) TO MICRO-D 25 PORT SIDE PANEL





ORIENTATION REFERENCE FOR INSTALLATION

POSITIONING (-P__)

