SUPERWIN

Superwinch Wireless Remote Control Kit

Providing more freedom to control your winch up to 50 metres away, whether inside the vehicle, beside the boat trailer, or from a better vantage point, the Superwinch wireless control delivers effortless convenience.

Works on all winches with a solenoid, and features a textured hand grip with safety strap, and an automatic shut-off timer and protection against accidental power-ups. The Superwinch Wireless Remote is easy to use and tough to withstand knocks and drops.





- · For winches with a solenoid
- IP69 receiver
- · Large buttons, easy to use.
- Instant operation
- Includes lanyard and belt clip
- 1M wiring loom (receiver)
- Traxion 1 Year Warranty



Part No.	Voltage
2277R	12V
2278R	24V

Wireless Remote Control Wiring and Operating Instructions

Wiring Connections

Disconnect the winch from the battery before beginning.

Check winch voltage (12V or 24V) matches Wireless Remote Control voltage.

Receiver Wire	Solenoid Terminal Connection	т
IVECEIACI AAIIC		٠,
RED	Red stud terminal on solenoid	В
BLACK	Centre spade terminal on solenoid	В
BLUE	Outside spade terminal on solenoid	٨
WHITE	Outside spade terminal on solenoid	/\

Termain Function

Battery +ve positive Battery -ve negative

Nb: Blue and White wires may be swapped to suit winch direction.

Once above connections are made, re-connect the battery. Freespool approximately 2m of rope off the winch drum and carefully test the wireless.

Remote Control Operation

Simultaneously press and hold the IN and Out buttons for 3 seconds. The remote LED will glow solid RED. Turn ON Turn OFF Simultaneously press and hold the IN and Out buttons for 3 seconds. The RED remote LED will go out.

IN/OUT The winch will run while the corresponding button is held depressed. The remote LED will flash RED rapidlyAuto OFF

Auto OFF The wireless will shut down automatically after 2 minutes without operation.

Remote Control Battery

The remote control uses 1 x CR2450, 3v lithium button battery.

To change the battery, remove the 4 x cover screws, slide the battery out of the holder using a non-metallic rod.

Push the replacement battery into the holder with the positive side facing up. Reinstall the cover.

Auto Off The wireless will shut down automatically after 2 minutes without operation.



