


Pairing Instructions: Mini Series. Transmitter to Receiver.

This process enables a 10 second pairing period.

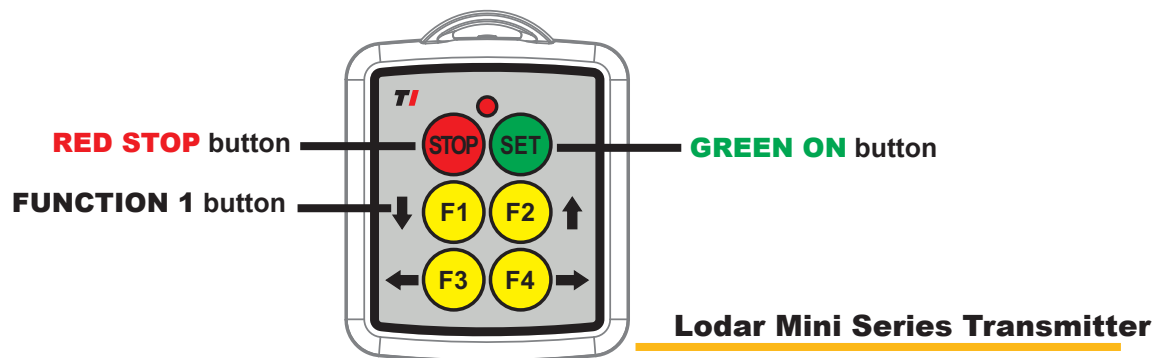

To pair a Mini Transmitter (Remote) to its Receiver :

- 1 Disconnect the +ve power to the Receiver.
- 2 Press the **RED STOP** button.
- 3 Press and Hold both the **RED STOP** button and the **GREEN ON** buttons until the LED turns off. Release the buttons and the LED will start to flash
(The flash pattern is Flash pause....., Flash pause..... Flash pause.....)
- 4 To pair one Transmitter >
 - a Reconnect the +ve power to the Receiver.
 - b Within 10 seconds press and HOLD the **GREEN ON** button until the Transmitter LED remains on, or until the Receiver Status LED is continuously on.
- 5 To pair a second Transmitter, first change the memory location from 1 to 2, or from 2 to 1.
 - a To change memory location.
Press and release the **GREEN ON** button to move up one memory location, or press and release the **RED STOP** button to move down one location.
Do not press the **GREEN ON** ,or the **RED STOP** buttons.
 - b The LED identifies memory location 1 as: Flash pause, Flash Pause,....
The LED identified memory location 2 as: Flash Flash pause, Flash Flash pause,....

Note - Two transmitters do not operate simultaneously. Only one transmitter can be active at a time.