



## JB Model "4" Early Version or Prototype (No Tone Control)

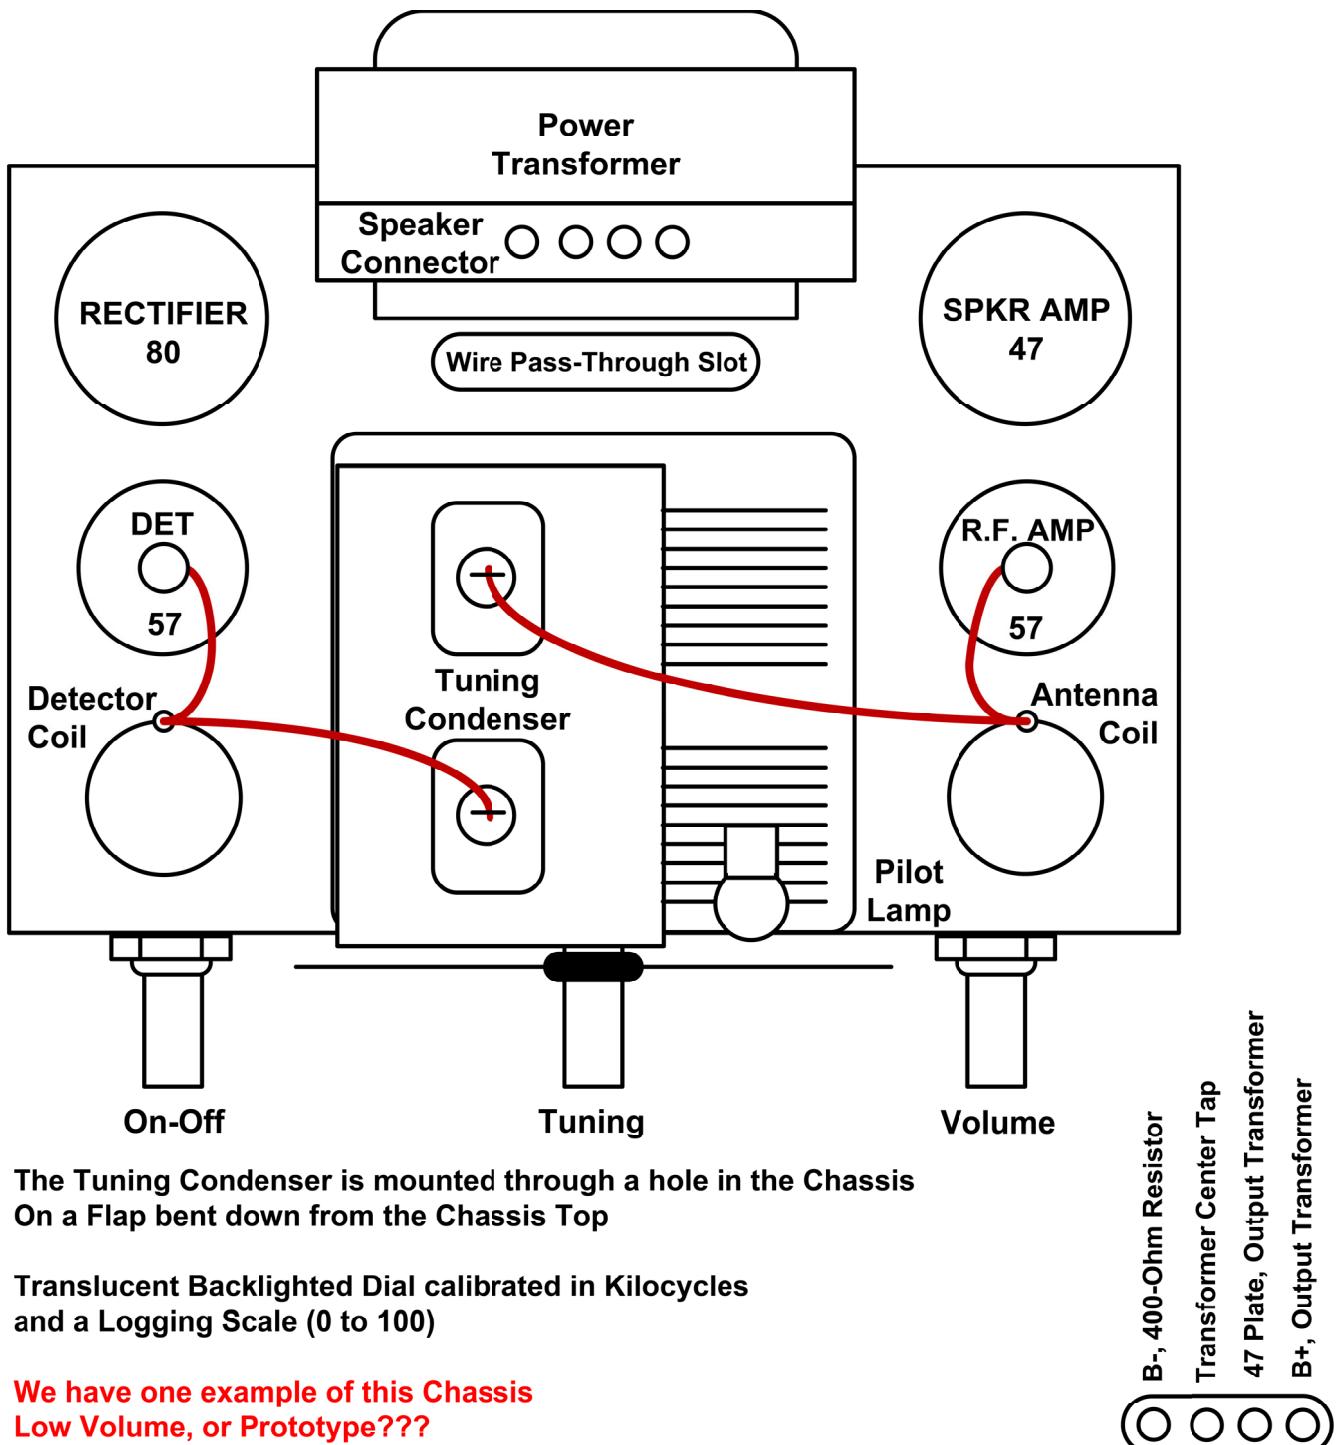

B-, 400-Ohm Resistor  
Transformer Center Tap  
47 Plate, Output Transformer  
B+, Output Transformer  
Speaker Connector

# JB “Model 4 with Tone Control” Later/Production Versions


Image of Peter Pan on the Schematic Diagram Label

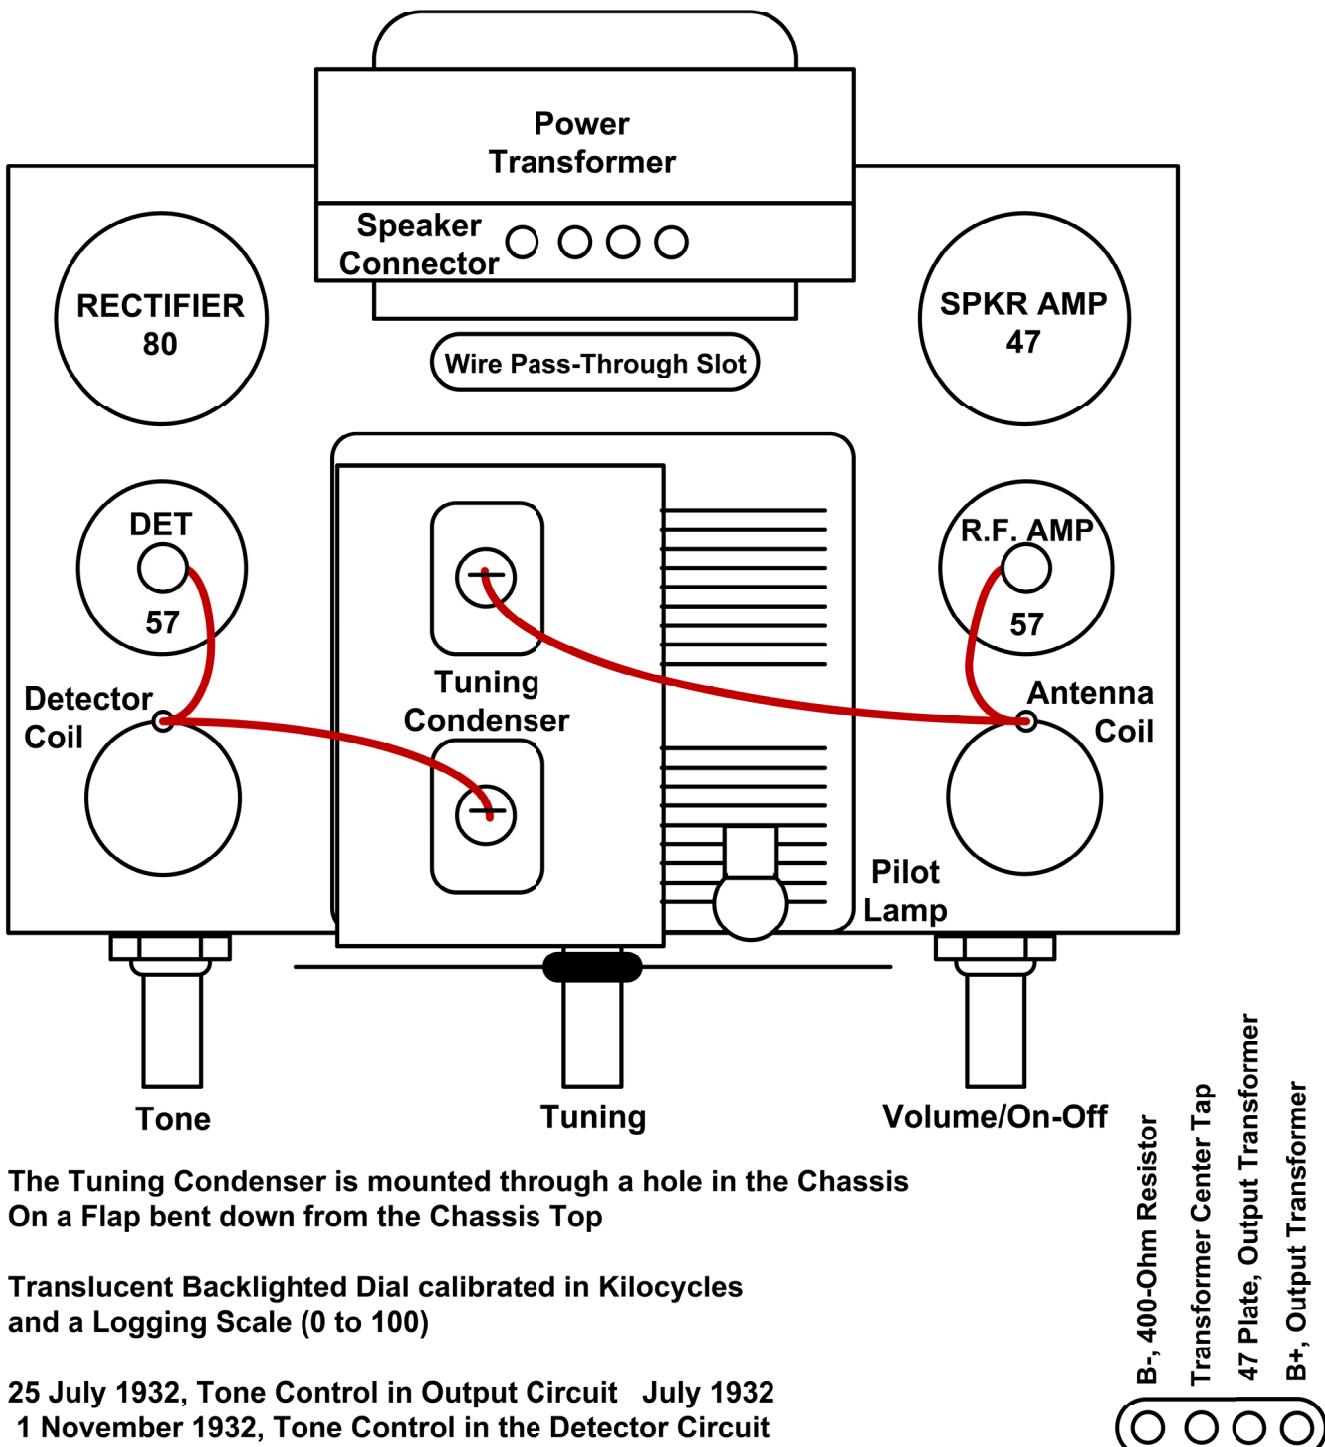

B-, 400-Ohm Resistor  
 Transformer Center Tap  
 47 Plate, Output Transformer  
 B+, Output Transformer  
 ○ ○ ○ ○  
 Speaker Connector

PRESUMABLY THERE WAS A MODEL 4 WITHOUT A TONE CONTROL!

I HAVE THIS CHASSIS SAME AS BELOW WITH ONLY THE .006 UF IN THE PLATE OF THE 47 OUTPUT TUBE

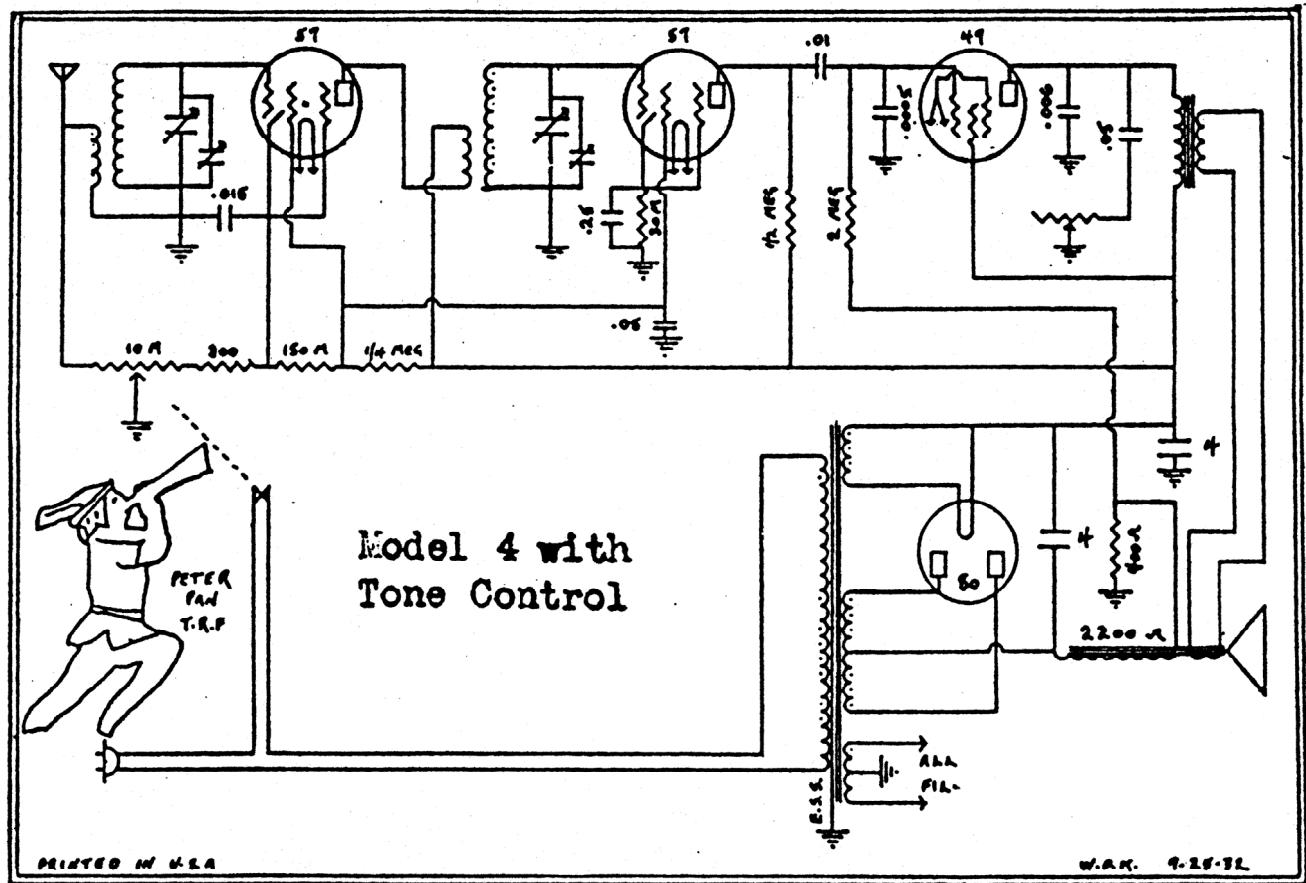


JACKSON-BELL MODEL 4 WITH TONE CONTROL

Early Version 1, 25JUL1932

PETER PAN


# SCHEMATIC DIAGRAM

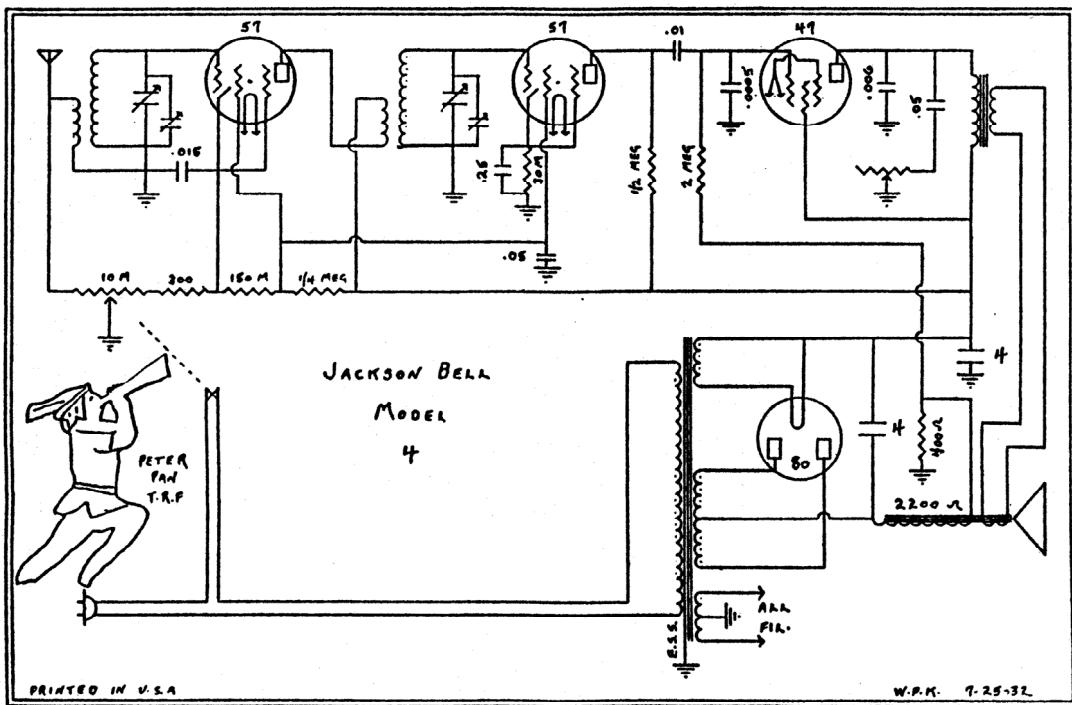


Version 1, 25JUL1932

JACKSON BELL  
MODEL 4  
T. R. F.  
PETER PAN

## Schematic on Cabinet Bottom

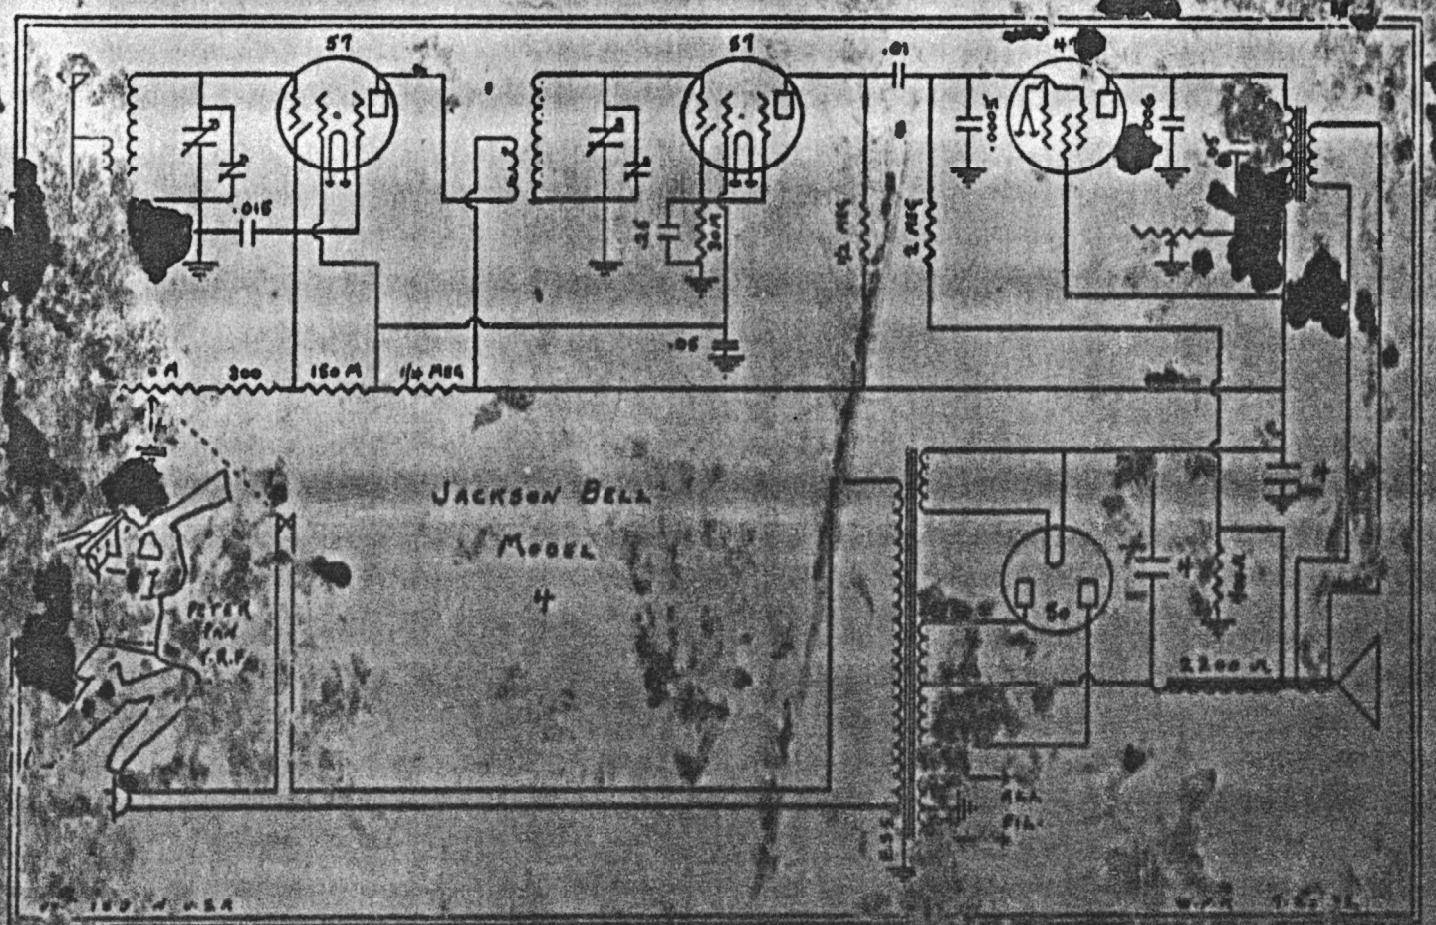

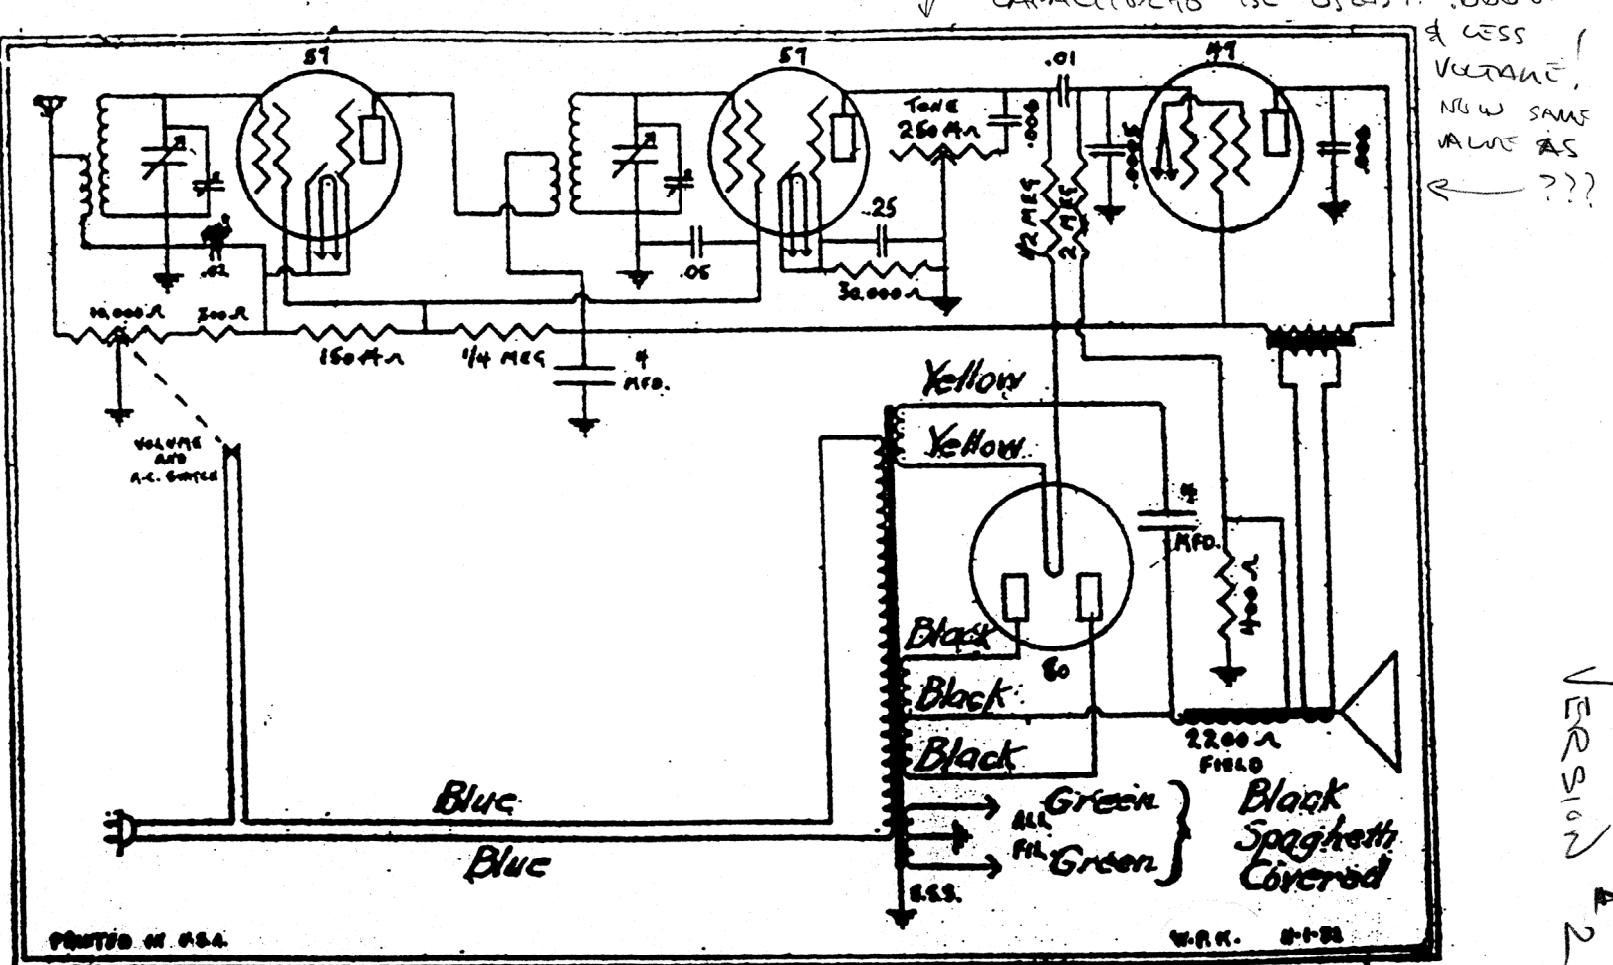


JACKSON BELL

MODEL 4

VERSION 2

VOLUME.

ON-OFF  
SWITCH

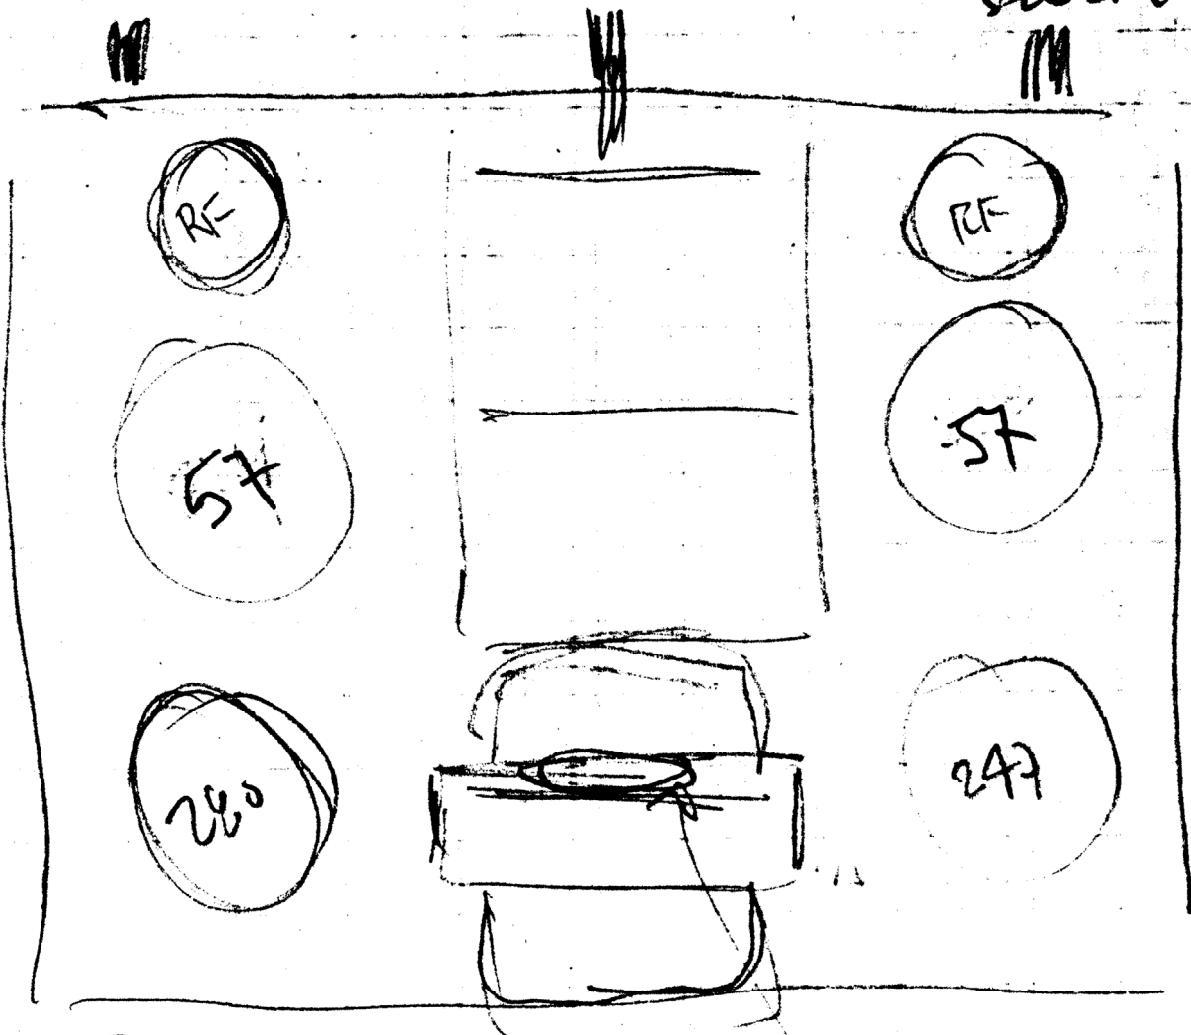

Hand Sketch  
Circa 1993 RAG

JB JK

SPKR  
PUSH