



## STEGO™ CRETE CLAW™ TAPE INSTALLATION INSTRUCTIONS

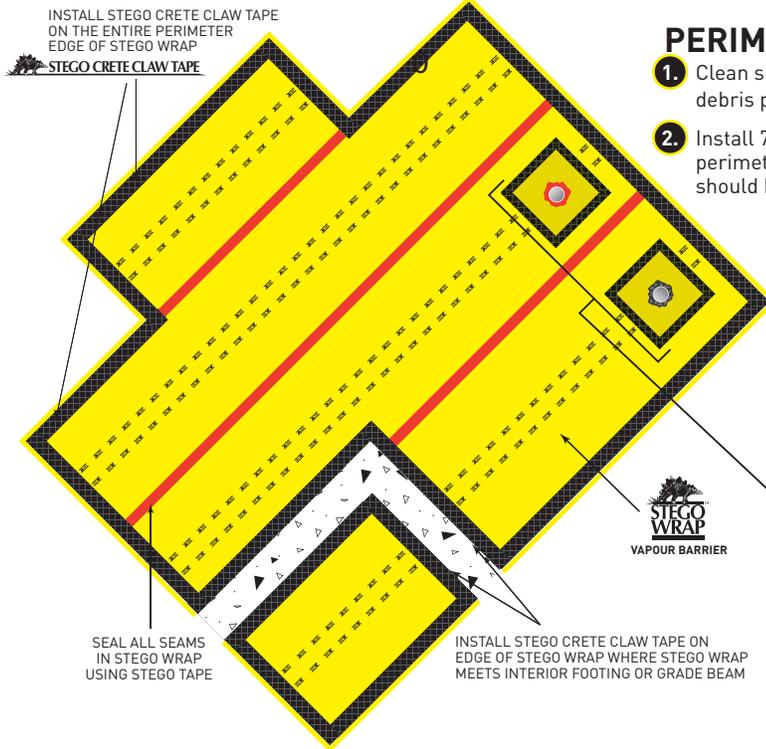

### PERIMETER SEAL TO SLAB

1. Clean surface of Stego Wrap to ensure that it is free of moisture and debris prior to the installation of Stego Crete Claw Tape.
2. Install 75 mm or 150 mm Stego Crete Claw Tape on the entire perimeter of the Stego Wrap installation. Stego Crete Claw Tape should be completely on Stego Wrap.

SEAL ALL PENETRATIONS WITH STEGO TAPE AND/OR STEGO MASTIC. STEGO CRETE CLAW TAPE IS NOT MEANT FOR REPAIRING PENETRATIONS.

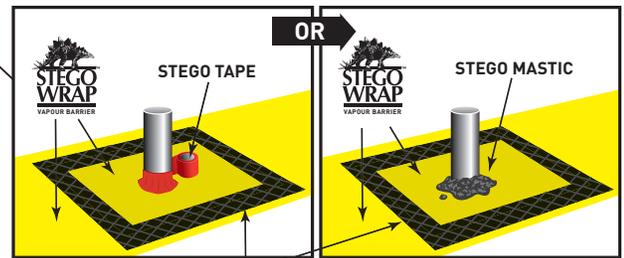


STEGO CRETE CLAW TAPE CAN BE USED TO SEAL SEAM AROUND DETAIL PATCH FOR ADDED PROTECTION.

### SECURING STEGO WRAP TO THE BOTTOM OF THE SLAB

1. Clean surface of Stego Wrap to ensure that it is free of moisture and debris prior to the installation of 150 mm wide Stego Crete Claw Tape.
2. Overlap seams a minimum of 150 mm (6"). Seal all seams in Stego Wrap using Stego Crete Claw Tape.
3. Install 150 mm wide Stego Crete Claw Tape on the entire perimeter of the Stego Wrap Installation. Stego Crete Claw Tape should be completely on Stego Wrap.
4. Install additional Stego Crete Claw Tape if required. Lab and simulated field tests have shown that if 150 mm wide Stego Crete Claw Tape is installed on all seams and around the perimeter, then it is more than strong enough to support Stego Wrap. If determined by the architect or engineer, additional Stego Crete Claw Tape may be specified.
5. Prior to the placement of concrete, ensure that Stego Crete Claw Tape is free of dirt or debris to ensure maximum bond to the concrete.

These are general instructions. Installation requirements may change on a project-by-project basis.

**IMPORTANT** - For the application of securing Stego Wrap to the bottom of the slab, always use 150 mm wide Stego Crete Claw Tape.

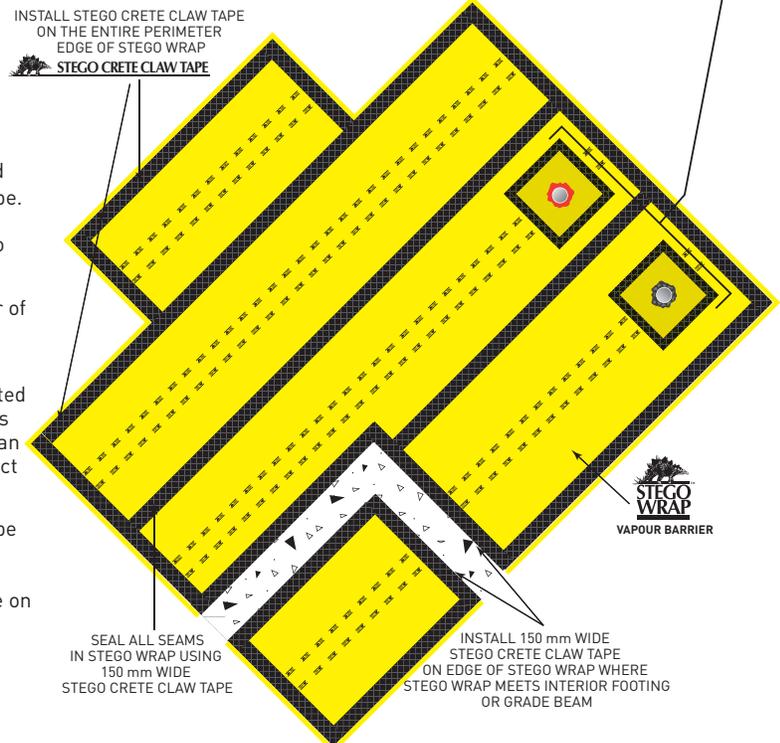

**NOTE:** Stego Industries, LLC's ("Stego") installation instructions are based on ASTM E1643 - *Standard Practice for Selection, Design, Installation, and Inspection of Water Vapour Retarders Used in Contact with Earth or Granular Fill Under Concrete Slabs*. These instructions are meant to be used as a guide, and do not take into account specific job site situations. Consult local building codes and regulations along with the building owner or owner's representative before proceeding. If you have any questions regarding the above mentioned installation instructions or Stego products, please call us at +1 877-464-7834 for technical assistance. While Stego employees and representatives may provide technical assistance regarding the utility of a specific installation practice or Stego product, they are not authorised to make final design decisions.