



MyGlassTruck



VICTORY



Installation instructions for Sliding Glass Rack

MyGlassTruck.com

1-844-364-4022

SECTION 1

Please Read This Carefully

Thank You for Choosing MyGlassTruck.com | North America's Glass Rack Leader

This document's purpose is to provide a qualified installer with the steps necessary to perform a safe and correct installation. Before beginning installation read this guide and all other instructions provided by MyGlassTruck.com, third party component providers and vehicle providers to ensure you are familiar with the installation procedure, rack and vehicle. If you have questions, please call MyGlassTruck.com at **1-844-364-4022**. Our qualified personnel will gladly provide answers.

CAUTION

Victory Truck Body, Inc., parent company of MyGlassTruck.com, has provided within this document detailed installation instructions for the installer of the Sliding Glass Rack provided by MyGlassTruck.com. Failure to follow these instructions or failure to follow safe shop and workplace practices could result in injury or death of the installer or end user of this equipment. PLEASE read this instruction manual thoroughly before beginning the installation process. If you do not understand any step or procedure that is outlined in the manual, immediately call the Victory Truck Body, Inc. engineering department at 1-844-364-4022. Hours of operation are 8 am to 5 pm EST, Monday through Friday.

DO NOT PROCEED WITH ANY INSTALLATION PROCEDURE IF YOU ARE NOT CERTAIN OF ITS CONTENT, INTENTION AND DESCRIPTION.

IMPORTANT

When installed, this glass rack and any other components must not alter or prevent vehicle compliance to existing state or federal standards. The finished rack and vehicle should comply with all vehicle manufacturer guidelines.

DO THIS BEFORE YOU START

Before beginning installation, please review this manual and locate each hardware bag and component of your rack. If anything is missing or you have questions please call **1-844-364-4022**. We will be happy to assist you.

Required Tools:

Drill with 13/32" Bit

9/16" Socket

9/16" Wrench

Supplied Hardware	Qty.
3/8" x 2.5" Bolt	8
3/8" Nut	8
Washer	16

SECTION 2

Installing Your Sliding Glass Rack

- The Sliding Glass Rack will arrive loose on slider base.
- Remove bolts connecting glass rack to slider base, and remove glass rack and base plate from the slider base.
- The base mounts to the vehicle in eight (8) locations using the pre-drilled holes in the base.
- Per the manufacturer's guidelines, a minimum of (6) mounting points in the slider base should be used.
- In some cases you may have to drill new holes in the base to accommodate obstacles underneath the vehicle.



- Remove the bolts connecting glass rack to slider base



- Position the slider base inside the van, ensuring mounting locations don't interfere with components beneath the floor (fuel tank, brake lines, spare tire, exhaust, etc.).
- Confirm rack placement considering equipment, rack size, and available floor mounting points.
- Verify the rack can fully slide back into its locked position and that doors/tailgate close properly.
- Mark floor mounting locations, ensuring they won't puncture or damage fuel/brake lines or wiring.
- Check clearance around wheel wells, jack, fuel tank/filler, brake lines, and wiring harness.



- Use a 13/32" drill bit to drill through the slider base and through the van floor once the position is verified.
- Repeat this for the remaining mounting locations.



- Install the 3/8" hardware through the slider base and van floor, tighten nuts underneath van to 25 ft lbs.
- Repeat this for the remaining mounting locations.

SECTION 2

Installing Your Sliding Glass Rack

- Extend the slider out of the base and out of the back of the van to make installing the glass rack portion easier.
- Place the glass rack and base plate on the extended slider and install with 3/8" bolts removed in step 1. Tighten to 25 ft lbs.



SECTION 3

How To Operate The Sliding Glass Rack

- To operate the Slider, use the red handle to lock / unlock the rack. **PULL** the handle to open and **PUSH** the handle to close.
- Operate the rack slowly, **DO NOT SLAM** it into the open or closed positions.
- **DO NOT REMOVE** the stop on the Slider's base this will prevent the slider from locking and potentially cause injury or damage.



- Slider in the fully extended position

- Red locking handle located at the front of the base.