


## ado Jut Installation Instructions




1. Mount housing on studs, blocking or into cutout in existing wall & run CL2P wire to remote power supply. (See power supply instructions for wiring diagram).



2. Install drywall, skim coat and paint wall surface.

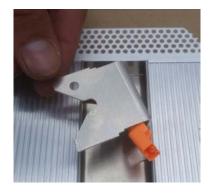

3A. After w

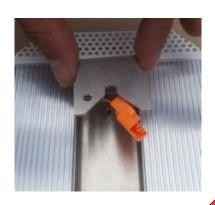


4A. Connect wall and bottom LED panels to quick-connect plugs within the wall housing.



4B. Push wires back into housings and insert wall LED panel. Insert side opposite the wire harness first then slide back to center and secure with clear plastic screws.



5A. Connect Jut section to remaining quick connect plug & gently tuck wires back under the tongue depressor.

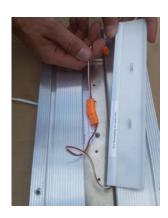

5B. Slide Jut section onto bracket



5C. Insert hex head screw through barrel nut, install into Jut, & tighten with 9/64" Allen/Hex wrench to secure.








## dado Jut Installation Instructions



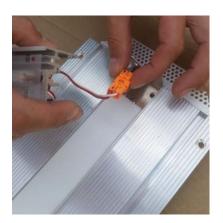



on ribs in Jut.



7A. Press the snap-fit lenses (wall section first) into the housings.



7B. To remove lens: Insert flat blade along side near end to cause lens to bow; then pull lens free.









Phone: 1-877-323-6584 Fax: 1-877-323-6584

Email: info@dadolighting.com

www.dadolighting.com