 
 


Overview and Package list

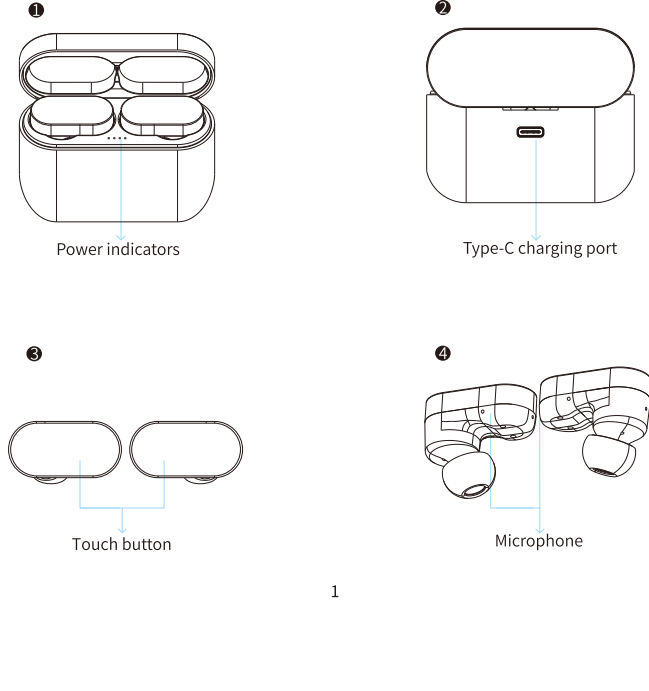

1



Bluetooth Pairing

 
- 1.Put the earbuds into the charging case and keep the charging case opening, then step into the pairing mode
- 2.The indicator alternately flashes between orange and blue light for 1.5s under pairing mode
- 3.Open your Bluetooth of smartphone, refresh the Bluetooth device list, choose MOONDROP Alice, and click pairing

Note: For the first time, please put the earbuds into the charging box, close the case lip and charge the earbuds via USB-C port

Automatic power-on reconnection

Disconnect and there is the paired device, just open the charging case and it can achieve automatically reconnection.

2

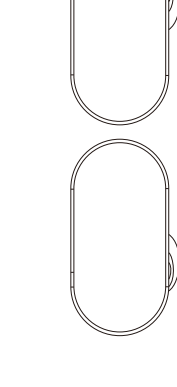


Over-distance disconnection automatic reconnection

The connected smartphone will be disconnected if beyond the effective working distance, and the smartphone will be automatically re-connected when it reenters the effective working distance within 3 minutes. It needs to be connected manually in the Bluetooth list if the earbuds can't be automatically re-connected.

Disconnect the paired device

In the non-working state, long press the binaural touch button 3S to disconnect the currently connected device. Re-enter the device pairing mode.

 3

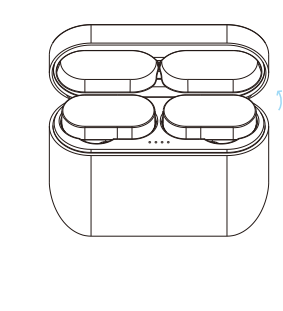

Restore factory settings

Open the Bluetooth paired device list, delete the paired MOONDROP Alice, then put the earbuds into the charging case, keep the charging box opening, click both touch button 5 times to clear the pairing information, and then re-enter pairing mode.

Prompt: Due to the connection characteristics of Bluetooth signal, there may be intermittent disconnection or silence occasionally in places with dense electromagnetic signal interference at 2.4GHZ.

4

Charging

The power of charging box < 5%, the indicator flashes once every 1.5s, goes out after 3 times
5% < the power of the charging box < 25%, the LED1 flashes once every 1.5s
25% ≤ the power of the charging box < 50%, the LED1 LED2 flashes once every 1.5s
50% ≤ the power of the charging box < 75%, the LED1 LED2 LED3 flashes once every 1.5s
75% ≤ the power of the charging box ≤ 100% LED1 LED2 LED3 LED4 flashes once every 1.5s

 
Charging the charging case by plugging the USB-C or putting it on the wireless charging board. Refer to the above-mentioned charging status, the indicators will be always on after full charging, and the indicators will go out after stopping charging.

Put the earbuds into the charging case for charging


During charging, orange indicator is always on.

After full charging, the orange indicator goes out.

Low battery, orange indicator flashes once every 3s

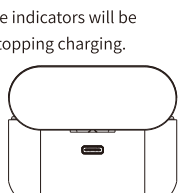


5

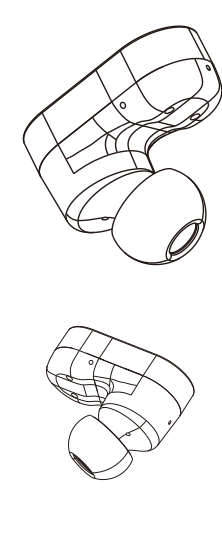 

Function introduction

1. Voice prompt, click the left/right earbud 3 times to start when a smartphone has been connected
2. Play/pause, click the left/right earbud when a smartphone has been connected.
3. Previous/NEXT, double-click the left earbud for the previous song, and the right earbud for the next song.
4. Click the left/right earbud for answering a call.
5. Long press left/right earbud 2s for refusing a call.
6. Click the left/right earbud in a call to hang up
7. Click the left/right earbud to answer the other call when holding the call.
8. VDSF+ sound affect button, long press the left earbud 2s to switch the VDSF+sound when a smartphone has been connected. The prompt "Enable" is on and "disable" is off.

 6

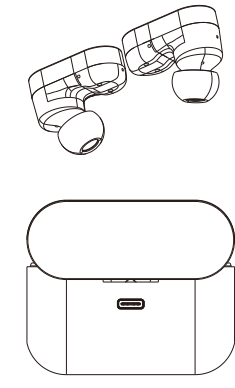

Specifications

Model: ALICE True Wireless Stereo

Bluetooth version: 5.2

Bluetooth Protocol: A2DP/AVRCP/HFP/HSP/SBC/AAC / APTX/APTX ADAPTIVE

Charging port: Type-C

Impedance: 32Ω + 15%Ω@1kHz

Working distance: about 15m (barrier-free open environment)

Charging case input: 5V-500mA

Charging time of charging case: about 3 hours

Charging time of earbuds: 1.5 hours

Battery Life of earbuds: about 8 + 40 hours

7

After-sales

This product can enjoy a seven-day replacement and a 12-month warranty service if there is a non-human-caused failure from

the date of shipment. If there is accident or faulty caused by improper use, payment will be provided according to the failure situation

If this product fails and meets the warranty conditions, please contact the merchant or email to support@moondroplab.com,

and send the product back under the guidance of the merchants customer service.

- This product is a precision electronic product. Please avoid placing this product in a humid, dusty, high temperature, or low-temperature environment and avoid pulling, bumping or squeezing this product to prevent unnecessary damage. The malfunction caused by the above situation does not enjoy the seven-day replacement and the 12-month warranty service
- Failures caused by broken wires, deformed shells, water ingress, dust or corrosion, broken plugs, rupture of tuning materials or units are not covered by the warranty.
- If we cannot provide maintenance services due to product replacement during the warranty period, our company will provide replacement services as appropriate and the replaced product does not enjoy warranty services.
- If the warranty of the product has expired and cannot be repaired due to product replacement, our company will not be able to provide paid repair services.
- If the product shell or core components are severely deformed due to external forces, our company will not be able to provide paid maintenance services.
- The after-sales maintenance cycle generally ranges from 7-20 working days (excluding shipping days), depending on the situation of the After-Sale department.

8

Warranty Card

*For after-sales service, please refer to [After-sales Terms].

Faulty content: _____

Customer Name: _____

Customer Phone: _____

Made by MOONDROP in China
Designed by MOONDROP
MOONDROP Technology Co., Ltd
Website: www.moondroplab.com

9