 



HIFI高音质真无线耳挂式解码耳放模块
HiFi True Wireless Ear-hook DAC & AMP
User Manual

Overview

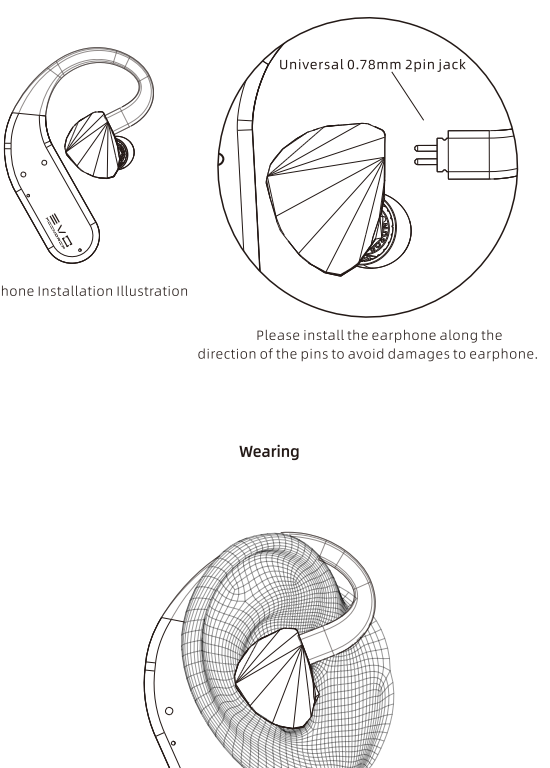


Installation

 The earphones in the diagrams are for demonstration only and are not included in the product's package.

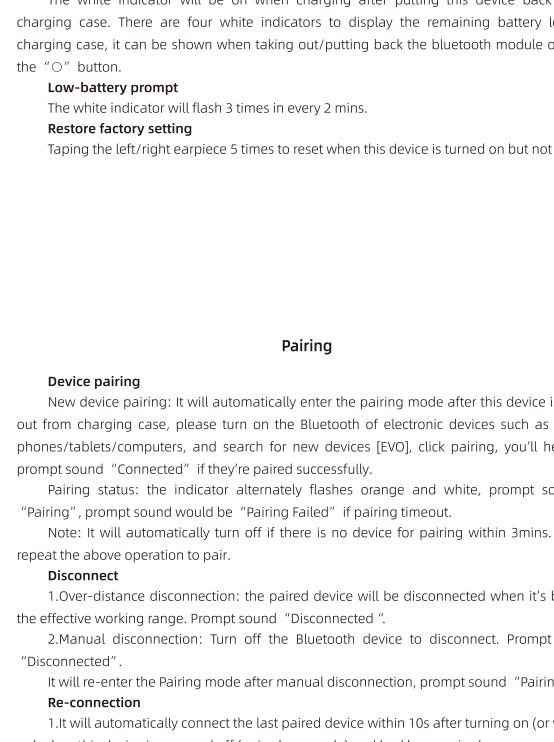

Please install the earphone along the direction of the pins to avoid damages to earphone.

 Wearing

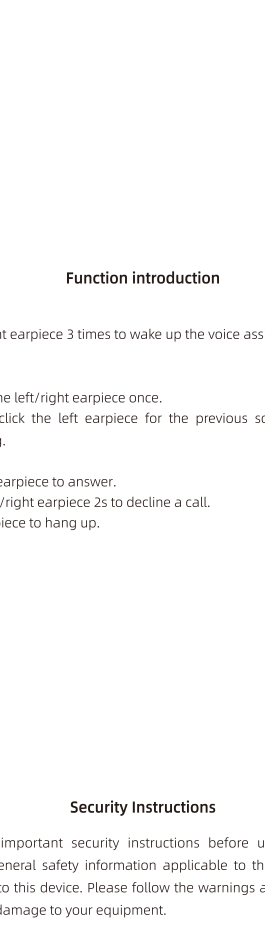

Operation

Power on

In sleep mode, taking out the device from charging case will automatically turn it on.

In power-off status, click the left/right earpiece, the white indicator flashes and you'll hear the prompt sound "Power on", indicating the device is turned on successfully.

*Power-off status: This device will automatically turn off when the battery is lower than the minimum value (3V) or it doesn't receive the Bluetooth signal for more than 3 mins.

Charging

The white indicator will be on when charging after putting this device back in the charging case. There are four white indicators to display the remaining battery level of charging case, it can be shown when taking out/putting back the bluetooth module or press the "O" button.

Low-battery prompt

The white indicator will flash 3 times in every 2 mins.

Restore factory setting

Tapping the left/right earpiece 5 times to reset when this device is turned on but not paired.

Pairing

Device pairing

New device pairing: It will automatically enter the pairing mode after this device is taken out from charging case, please turn on the Bluetooth of electronic devices such as mobile phones/tablets/computers, and search for new devices [EVO], click pairing, you'll hear the prompt sound "Connected" if they're paired successfully.

Pairing status: the indicator alternately flashes orange and white, prompt sound is "Pairing", prompt sound would be "Pairing Failed" if pairing timeout.

Note: It will automatically turn off if there is no device for pairing within 3mins. Please repeat the above operation to pair.

Disconnect

1. Over-distance disconnection: the paired device will be disconnected when it's beyond the effective working range. Prompt sound "Disconnected".

2. Manual disconnection: Turn off the Bluetooth device to disconnect. Prompt sound "Disconnected".

Re-connection

1. It will automatically connect the last paired device within 10s after turning on (or waking up) when this device is powered off (or in sleep mode) and had been paired.

2. Over-distance automatic reconnection: It will be automatically reconnected when it reenters the effective working-distance range within 3mins. Please pair it manually if it cannot

Pairing

automatically reconnect.

This device will automatically turn off if there are no Bluetooth devices for more than 3mins. Please re-pair then.

Tips

Due to the connection characteristics of Bluetooth signal, intermittent disconnection or silence may occur in places with dense electromagnetic signal interference at 2.4GHz.

Function introduction

Voice assistant

Tapping the left/right earpiece 3 times to wake up the voice assistant if this device is paired with a smartphone.

Song

Play/pause: click the left/right earpiece once.

Next/Pre: double-click the left earpiece for the previous song, double-click the right earpiece is for next song.

Call

Click the left/right earpiece to answer.

Long-press the left/right earpiece 2s to decline a call.

Click left/right earpiece to hang up.

Security Instructions

Please read this important security instructions before using the equipment. This information contains general safety information applicable to this device and may include content not applicable to this device. Please follow the warnings and cautions to avoid injury to yourself or others or damage to your equipment.

Warning

Failure to comply with safety warnings and regulations would result in serious injury or death.

Do not use damaged power cord or plug or loose power socket

Unsafe connections can cause electric leakage or fire.

Do not use wet hands or other wet body parts to touch.

Touch the device, power cord, plug or power socket, otherwise it may cause electric shock.

When unplugging the power cord, do not use too much force, otherwise it may cause electric shock or fire.

Do not bend or damage the power cord, otherwise it may cause electric leakage or fire.

Do not operate the device with wet hands while it is charging, otherwise it may cause electric shock.

Do not directly connect the positive and negative terminals of the charger together, otherwise it may cause a fire or cause serious injury.

Security Instructions

Do not use the device outdoors during a thunderstorm, otherwise it may cause electric shock or equipment failure.

Use batteries, chargers, accessories and supplies approved by the manufacturer.

Using universal batteries or chargers may shorten the life of the battery or cause the device to malfunction. They may also cause a fire or cause the battery to explode.

Only use chargers and data cables specially designed for equipment and approved by MOONDROP. Incompatible chargers and data cables may cause danger or damage the device.

When customers use accessories or supplies not approved by MOONDROP/MOONDROP is not responsible for the customers' safety.

Do not put the device in the back pocket or hang it on the waist

Excessive force may damage the device, might cause explode or fire.

If you hit or fall, you may be injured.

Do not poke the device or subject it to strong impact

Otherwise, it may damage the device or battery, cause the device to fail to work normally, or shorten the device life.

It may also cause overheating, burning or other dangers.

Handle and dispose of equipment and chargers carefully

Do not throw battery or device into fire.

Do not place batteries or devices in or on heating devices (such as microwave ovens, ovens, or radiators). The device may explode if overheated.

Security Instructions

When disposing of used battery or device, please comply with local regulations.

Do not squeeze or pierce the device.

Do not sit on the device to extend internal high voltage, otherwise it may cause internal short circuit and overheating.

Protect equipment, batteries and chargers from damage.

Avoid exposing the device and battery to extremely cold or extremely hot temperatures. Extreme temperature can damage the device, reduce the charging capacity of the device, and shorten the service life of the device and battery.

Do not use the data cable with the skin peeled off or damaged, and the charger with damaged or not working properly.

Do not use device near or in water heaters, microwave ovens, hot cooking equipment, or high-pressure containers

The battery may leak.

The equipment may overheat and cause a fire.

Do not use or store the device in areas where dust or aeolian materials are concentrated

Dust or foreign objects may cause device damaged, fire or electric shock.

Prevent the charger socket and the smaller end of the charger from contacting conductive materials such as liquid, dust, metal powder, or pencil lead.

Do not touch with sharp tools. Charger socket; do not bump the charger socket

Security Instructions

Conductive materials may short-circuit or corrode the contacts, which may cause explosion or fire.

When using a wireless charger, do not place metal objects, magnets, and magnetic stripe cards between the device and the wireless charger.

The device may not charge properly or may overheat.

Do not bite or suck the device or battery

Otherwise, it may damage the equipment or cause an explosion or fire.

Children or animals can suffocate by swallowing small parts.

When children use this device, please make sure they use it correctly.

Do not poke the device or its accessories into your eyes, ears or mouth, otherwise it may cause suffocation or serious injury.

Do not use damaged or leaking batteries. For safe disposal of battery, please contact the nearest authorized service center.

The device and some accessories (sold separately) contain magnets. The American Heart Association and the British Medicines and Health Products Administration also warned that magnets will affect implantable pacemakers, heart rhythm converters, defibrillators, insulin pumps or other electronic medical devices (collectively referred to as "medical devices") within 15 cm. operating. If you are a user of any of these medical devices, please do not use this device and some accessories (sold separately) before consulting a doctor.

Note

Failure to comply with safety precautions and regulations can lead to personal injury or property damage

Do not use the device near other electronic devices

Security Instructions

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Equipment with speakers is particularly susceptible to interference.

Do not use your device in places that may be interfered by radio frequency such as hospitals, airplanes or cars

If possible, use the device beyond 37cm of the pacemaker to avoid interference with the pacemaker.

In order to minimize the interference of the device to the pacemaker, please use the device on the side of opposite to the pacemaker.

If you use medical equipment, please contact the medical equipment manufacturer before using this device to determine whether it will be affected by the radio frequency emitted by this device.

During air flight, the use of electronic equipment will interfere with the airplane's electronic navigator. Follow the airline's regulations and the instructions of the "aircraft crew. If the equipment is allowed, please always use the flight mode."

The electronic equipment of the car may malfunction due to radio interference from the equipment. For details, please contact the manufacturer.

Do not place the device in a place with dense smoke or fog

Otherwise, the surface of the device may be damaged or the device may malfunction.

Security Instructions

If you use hearing aids and cochlear implants, please contact the manufacturer for information about radio interference.

The radio frequencies emitted by this device may interfere with certain hearing aids and cochlear implants. Before using this equipment, please contact the manufacturer to determine whether the equipment will be affected by the radio frequencies emitted by this equipment.

Do not use the device near radio frequency devices or instruments (such as audio systems or radio antenna towers)

Radio frequency may cause device malfunction.

Turn off the device in a potentially explosive environment

Always operate in accordance with regulations, instructions and signs in an explosive environment.

Do not use the equipment in gas stations or near flammable materials, chemical agents and explosive areas.

Do not store or carry flammable liquids, gases or explosive materials in boxes containing device or accessories.

If any part of the device is damaged, smokes, or smells of burning things, please stop using the device immediately. The equipment can not be reused until being repaired by the MOONDROP Service Center.

Broken glass may hurt your hands and face.

Security Instructions

If the device emits smoke or the smell of burning things, it may cause the battery to explode or burn.

Please observe all safety warnings and regulations regarding the use of equipment while driving.

Driving safely is your primary responsibility while driving. If prohibited by law, please do not use the device while driving. For the safety of you and others, please follow the safety warnings and relevant regulations and remember the following tips:

Do not sit on the device in an easy-to-access location. No need to look away from the road to get the wireless device.

In order to avoid danger, pause the call in traffic jams or bad weather conditions (rain, sleet, snow, ice). Rain and sleet, snow, ice and heavy traffic can cause danger.

Do not record voice memos. Recording a language memo while driving prevents you from focusing on the primary responsibility of driving safely.

According to the traffic situation, decide whether to answer the call reasonably. Answer calls when not moving forward or in traffic jams. Try to call after parking.

Do not engage in nervous or excited conversations to avoid distraction. Please let the caller know that you are driving.

Properly maintain and use equipment

Keep the equipment dry

Moisture and liquid can damage equipment parts or circuits.

Do not turn on the device when it is wet. If the device is turned on, turn it off (if the device cannot be turned off, please maintain the status quo). Then dry the equipment with a towel and contact the local MOONDROP service center.

Security Instructions

Water damage to the equipment will invalidate the manufacturer's warranty. This equipment is equipped with a built-in liquid indicator.

The device should be stored on a flat ground. If the device falls, it will be damaged.

The device can be used where the atmosphere temperature is between 0°C and 35°C. You can store the device where the ambient temperature is between -20 °C and 50 °C. Using or storing the device outside the recommended temperature range may cause damage to the device or shorten battery life.

Do not store the device in extremely hot areas, such as in a car in summer, otherwise, the equipment may be damaged or the battery may explode.

Do not expose the device to direct sunlight for a long time, such as on the dashboard of a car.

The device may be scratched or malfunction.

If the battery contacts come in contact with metal objects, it may cause a fire.

Do not store the device near magnetic fields

When exposed to a magnetic field, the device may malfunction or the battery may discharge.

Magnetic stripe cards (including credit cards, phone cards, bank books and boarding cards) may be damaged by magnetic fields. Avoid contact with the device when it is overheated. Otherwise it may cause low temperature burns, redness and skin pigmentation

Security Instructions

After using the device for a long time, pay attention to the heating of the device and avoid contact with the skin for too long.

Do not sit on the device, or keep in direct contact with your skin for a long time while the device is charging or connected to the power source.

High temperature resistance varies from person to person. Please pay special attention when using it by children, the elderly, protect hearing and ears when using earplugs

Excessive exposure to strong sounds can cause hearing loss.

Contact with strong sounds while walking may distract you and cause accidents.

Always turn down the volume before using earplugs, and use only the lowest volume required to listen to conversations or music.

If there are foreign objects on the earplugs, and you wear the earplugs for a long time, it may cause ear infections. Please keep the earplugs dry and clean.

In a dry environment, static electricity may accumulate in the earplugs. Avoid using this earplug in a dry environment, or touch metal objects to discharge static electricity before using the earplug.

Do not use headphones while driving or riding a horse. Otherwise, it may distract you and cause accidents. Depending on your area, this may also be illegal.

Precautions for using the device during walking or moving.

Always pay attention to your surroundings to avoid harming yourself or others.

Do not paint or paste paper on the equipment

Security Instructions

If you are allergic to the paint or metal parts of the device, it may cause itching, eczema or swelling of the skin. When the above situation occurs, please stop using the device and consult a doctor.

Install the device cautiously

Do not place equipment and accessories in or near the airbag deployment area. If the equipment is improperly placed, the airbag inflates rapidly, which can cause serious injury.

Do not drop the device or cause collision

The device may be damaged or malfunction.

If the device is bent or deformed, it may damage the equipment or cause parts malfunction.

Ensure the longest service life of the battery and charger

If the battery is not used for a long time, the battery may malfunction.

The equipment will discharge if left unused for a long time, and must be recharged before use.

When the equipment is not in use, disconnect the power supply.

The battery can only be used for the designated purpose.

Follow all the instructions in this manual to ensure the longest service life of the device and battery. The manufacturer will not provide warranty for damage or poor performance caused by failure to follow the warnings and instructions.

Security Instructions

The equipment may wear out over time. Although some parts and repairs are guaranteed during the validity period, damage or deformation caused by the use of unapproved accessories is not covered by the warranty.

Do not disassemble, modify or repair the equipment

Any changes or modifications to the equipment will cause the manufacturer to not guarantee the equipment. For repairing, please contact your local MOONDROP authorized dealer.

Do not disassemble or pierce the equipment, as this may cause an explosion or fire.

Do not disassemble or reuse the battery.

When cleaning the equipment, please follow the following advices

Use a soft and dry cloth to wipe the device, use a brush or other tools to remove the earwax or dirt on the earpiece.

Clean the battery contacts with a dry cloth.

Do not use chemicals to clean the devices. Otherwise, the surface of the equipment may be discolored or corroded, and it may also cause electric shock or fire.

Prevent the equipment from contact with dust, sweat, ink, oil, and chemical products (such as cosmetics, antibacterial sprays, hand sanitizers, detergents and insecticides). Otherwise, the internal and external parts of the device may be damaged, or the performance may deteriorate. If the device comes into contact with any of the above-mentioned substances, please wipe it with a soft, lint-free cloth.

Security Instructions

Do not use the device for any purpose other than the designated purpose

The device may malfunction.

Avoid disturbing others when using the device in public places

Only qualified personnel are allowed to repair the device

If the equipment is repaired by unqualified personnel, the equipment may be damaged and the warranty will not be provided.

Do not distribute copyrighted content

Do not distribute copyrighted material without the permission of the content owner. This behavior violated copyright law. The manufacturer is not responsible for any legal problems caused by any illegal actions by users against copyrighted content.

Disclaimer

All content and services available through this device belong to third parties and are protected by copyright, patents, trademarks and other intellectual property laws. Such content and services are only for personal non-commercial use. Without the permission of the content owner or service provider, you may not be able to use any content or service. In addition to the above restrictions, unless you have the explicit permission of the application content or service provider, you may not be able to modify, copy, republish, upload, post, transmit, translate, or repost, any content or service provided through this device. sell, create new derivative works, develop or distribute in any way.

Security Instructions

"Third-party content and services are provided. For any purpose, MOONDROP Company does not provide any express or implied guarantees for the content or services provided. MOONDROP Co. expressly declares that it does not assume any implicit guarantees. Or through regulations, common law, or other means [including but not limited to marketability or applicability for specific purposes] recognized terms or conditions. In any case (including negligence), any content or service provided through this device, Even if it has been notified in advance that there is a possibility of such damage, whether it is in contract or tort, any direct, indirect, accidental, special or corresponding loss or damage compensation costs, attorney fees, various expenses or the results caused by you or any third party using any content or service, MOONDROP Co. does not guarantee for its accuracy, validity, timeliness, legality or completeness."

Third-party services may be stopped or interrupted at any time, and MOONDROP Co. is not responsible or guarantees for any content or the time period during which the service is available. The content and services are transmitted by third parties through networks and transmission equipment outside the control of MOONDROP. In addition to the generality of the exemption clause, MOONDROP also expressly stated that it does not assume any responsibility or obligation for any interruption or delay of any content or service applicable to this device.

Security Instructions


MOONDROP Co has neither responsibility nor obligation for customer service involving content and services. Any service requirements related to content or services should be directly borne by the content and service providers.

Security Instructions

Content of hazardous substances in products

Name	Hazardous substances and elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Poly Aromatic Hydrocarbons (PAHs)
Circuit components	X	O	O	O	O	O
Metal parts	O	O	O	O	O	O
Plastic parts	O	O	O	O	O	O
Speaker	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Annex	X	O	O	O	O	O

 This form is compiled in accordance with SJ/T 11364.
O: Indicates that the amount of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572-2011, X: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572-2011, and there is currently no mature alternative in the industry. Please handle such parts or substances properly to avoid impact on the environment and human.

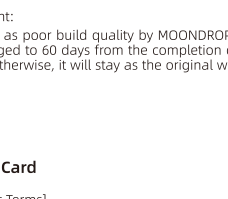

After-sales terms

If the product has a non-man caused failure from the date of shipment, it can be returned within 7 days, replaced within 15 days and repaired free of charge within 12 months. If the damage is caused due to improper use, paid repair service will be provided depending on the condition.

If this device is damaged and meets the warranty conditions, please contact the seller to return it under the guidance of the seller by completing the device after-sales list, and attaching it to this device, package, and purchase receipt.

This device is a precise electronic product, please avoid putting it in damp, dust and high/low temperature as well as avoid pulling, collision, and squeezing, to prevent unnecessary damage, which will invalidate the warranty.

Cable breakage, shell deformation, water damage, dust, corrosion or pins broke, tuning material, and unit damage, are out of warranty.

If the repair can not be provided due to product upgrades within the warranty, we will provide replacement service depending on the condition, and won't enjoy the warranty after replacement.

If the product has expired the warranty period, and due to product replacement, our company may not be able to provide repair service.

We will not be able to provide repair service if the device shell or core parts are seriously deformed due to external force.

The after-sales service period is generally 7-20 days (excluding transportation time), depending on the repair department.

About warranty period after repair/replacement:

If the cause of the product issue is confirmed as poor build quality by MOONDROP after-service center, the warranty period will be prolonged to