

NEKOCAKE

True Wireless Stereo

 
Introduction

Introducing & Packing list


(The pictures are for reference only, please refer to the actual products.)




Charging Case*1

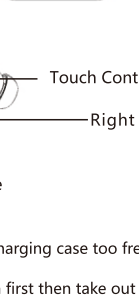

Earphones * 1 pair

 

Charging cable *1

 

Eartips *3 pairs

 


Manual *1

Product Description



Indicator light

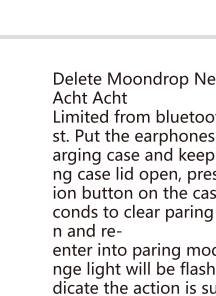

Function Button



 
Charging Port



Left earbud



Right earbud



Microphone

Notes

- 1.It is not recommended to open and close charging case too frequently for daily usage.
- 2.It is recommended to turn on the Bluetooth first then take out earphones.

Connection

Connecting with new device

- 1.Put the earphones into charging case and keep the lid open.
- 2.Long press the function button on the charging case for 3 seconds till the indicator light flash white 3 times and green 1 time, the earphones are in pairing mode.(If the indicator flash white 7 times means the action is fail)
- 3.Turn on the bluetooth, after the list is refreshed click the Moondrop Nekocake Acht ACHT Limited on the list for pairing.

*When first time using the Nekocake, please put the earphone in the charging case, close the lid, connect the USB-C charging cable, and charge

the earphone.

Automatically connection

When the earphone is turned on, it will automatically connect to the last connected device which has bluetooth pairing record if it is in range.

Out of distance disconnect ion and auto reconnection

When the device is connected with earphones, if it disconnected by over bluetooth effective range. The earphones will try connect back to the device within 3 minutes when it is in connection range.

*If the earphones cannot be automatically connected to the

Connection

device, it needs to be manually connected in the Bluetooth list of the device.

Disconnect the current connected device

When is in using: Make sure the earphones are in the charging case and keep the charging case lid open. Pressing the function button on the case for 3 seconds. The earphones will be disconnected from the current device and enter the pairing mode.

When is not in using: Press and hold both touch area on the earphones for 3 second at same time to disconnect current device and enter pairing mode.

Factory Reset

Tip: Due to the connection characteristics of Bluetooth signals, in places where 2.4GHz electromagnetic signals are intensively disturbed, there may be occasional intermittent disconnection or no sound.

Usage

Charging

Put the earphones in the charging case and it will automatically start charging.

*When the battery of charging case is more than 10%, the green indicated light will be always on until the earphones is fully charged

*When the battery of charging case is lower than 10%, the orange indicated light will be always on unless the earphones is fully charged or the case is out of power.

Charging the case

Plug in the charging cable. The orange indicated light will be flashing when is charging. The green indicated light will be

flashing for 3 seconds after the case is fully charged then goes out.

Check battery

To check remaining battery of the charging case, press the function button on the charging case. The indicated light will flash once with dedicated colour.

Green Light: The battery is more than 10%
Orange Light: The battery is less than 10%

Low battery alarm for charging case

Open the lid of the charging case and short press the function button, the orange indicated light

Usage

will flash 10 times.(Now the orange indicated light won't be flashing, the earphones won't be charging and the case only will keep the earphones shutting down)

Turn on

The earphone is in the charging case, when open the charging case lid, the earphones will be on automatically.

Turn off

Double-click to the left to the previous track/Double-click to the right to the next track

Calling
Answer: Click any side of earphones
Reject: Press any any side of earphones for 1.5 seconds
Hang-up: Click any side of earphones



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area

will flash 10 times.(Now the orange indicated light won't be flashing, the earphones won't be charging and the case only will keep the earphones shutting down)

Turn on

The earphone is in the charging case, when open the charging case lid, the earphones will be on automatically.

Turn off

Double-click to the left to the previous track/Double-click to the right to the next track

Calling
Answer: Click any side of earphones
Reject: Press any any side of earphones for 1.5 seconds
Hang-up: Click any side of earphones



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area

will flash 10 times.(Now the orange indicated light won't be flashing, the earphones won't be charging and the case only will keep the earphones shutting down)

Turn on

The earphone is in the charging case, when open the charging case lid, the earphones will be on automatically.

Turn off

Double-click to the left to the previous track/Double-click to the right to the next track

Calling
Answer: Click any side of earphones
Reject: Press any any side of earphones for 1.5 seconds
Hang-up: Click any side of earphones



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area



Touch Control Area

