

Humie Humidity & Temperature Sensor

Wall Mounted Installation

! Humie requires a Sensor Relay communication hub to connect to the AlertAQ™ platform. Ensure you have a Sensor Relay installed nearby with a green LED.


! **Installation Best Practices**

When placing or securing Humie, consider sources of heat gain/loss or other obstructions that may lead to inaccurate readings. If placing Humie on a flat surface (e.g., on a shelf), it is recommended to place it approximately 4 ft. (1.2 m) off the floor. If installing on a wall with provided wall anchor, hang Humie at the midway point between the floor and ceiling (similar to a thermostat). Humie can also be securely fastened to the wall with an Alert Labs mounting bracket (sold separately) to help prevent it from being moved.

1 Add sensor and see install instructions at: alertaq.com/addsensor


If you have purchased Professional Services to pre-register your sensor, skip to step 2.

2 When ready to install, pull the tab to activate the batteries

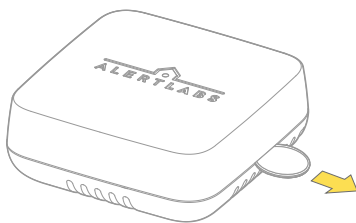

3 Confirm the LED is green


See [troubleshooting](#) if it is not.

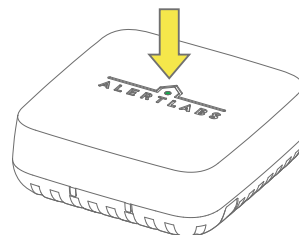

- GREEN - Connected
- RED - No Signal
- YELLOW - Low Battery
- MAGENTA - Upgrading

4 Prepare anchor point

Choose the appropriate anchor for the wall you are mounting Humie to. Place the screw into the back of Humie and slide the device down to lock in place.

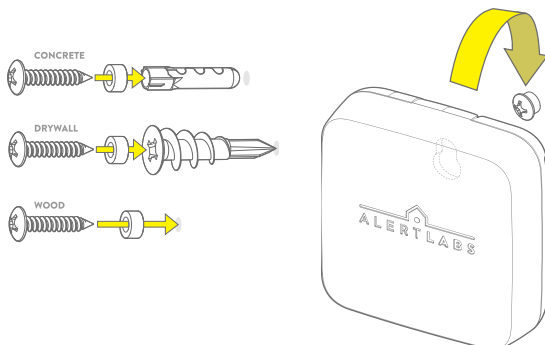

5 Upload a photo of the installation to the sensor details page in AlertAQ™

To get to the details section of the sensor, select the name of the sensor from the [Sensors page](#). [See help article.](#)

If your sensors were not pre-registered, update the sensor name based on its installation.

