

Flowie O Water Flow Sensor

Standard Installation



Flowie O requires a Sensor Relay communication hub to connect to the AlertAQ™ platform. Ensure you have a Sensor Relay installed nearby with a green LED.



Important!

Please read important information about [compatibility, accessories and calibration](#) before installing.


1

Add sensor and see install instructions at: alertaq.com/addsensor

If you have purchased Professional Services to pre-register your sensor, skip to step 2.

2


Open the Flowie O, insert the 2 D cell batteries and close the housing

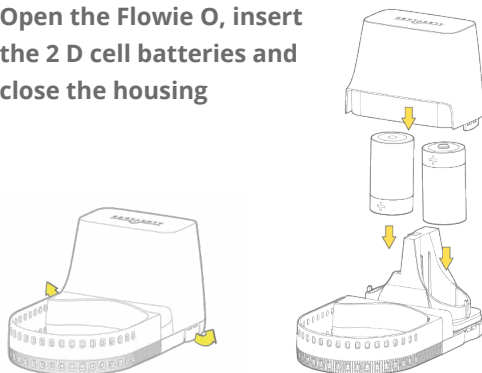

3

Confirm the LED is green

See [troubleshooting](#) if it is not.

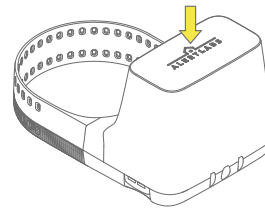


- GREEN - Connected
- RED - No Signal
- YELLOW - Low Battery
- MAGENTA - Upgrading

4

Strap onto the water meter

It should be low, snug, and centered.

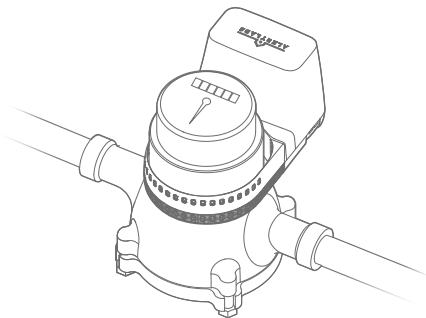

5

Upload a photo of the installation to the sensor details page in AlertAQ™

To get to the details section of the sensor, select the name of the sensor from the [Sensors page](#). [See help article.](#)

If your sensors were not pre-registered, update the sensor name based on its installation.

6

Begin calibration of the device

In order for your Flowie O to provide accurate data, you must calibrate the device.

Visit the [calibration](#) page to learn more.



Important! Do not skip this step.

