

Floodie Flood Sensor & Water Leak Detector

Wall Mounted Installation



Floodie requires a Sensor Relay communication hub to connect to the AlertAQ™ platform. Ensure you have a Sensor Relay installed nearby with a green LED. Floodie should not be installed on conductive metal


1

Add sensor and see install instructions at: alertaq.com/addsensor

If you have purchased Professional Services to pre-register your sensor, skip to step 2.

2


When ready to install, pull the tab to activate the batteries

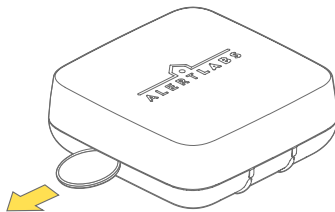

3

Confirm the LED is green

See [troubleshooting](#) if it is not.

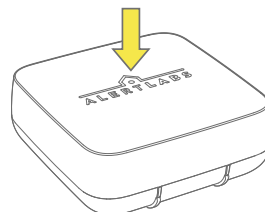


- GREEN - Connected
- RED - No Signal
- YELLOW - Low Battery
- MAGENTA - Upgrading

4

Choose and install the appropriate anchor


Partially insert the screws into the wall, leaving a small gap. Install near the floor, so the metal contacts on Floodie sit nearly flush with the floor once mounted.

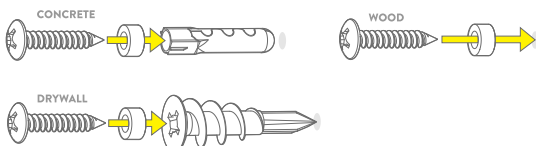

5

Place the sensor into the mounting bracket

The logo should be upright and visible. Fit the bracket's keyhole slots onto the screws' heads. Slide the bracket down and tighten the screws until snug.

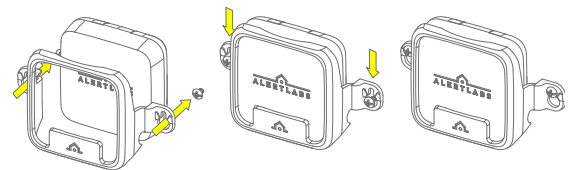

6

Upload a photo of the installation to the sensor details page in AlertAQ™

To get to the details section of the sensor, select the name of the sensor from the [Sensors page](#).
[See help article.](#)

If your sensors were not pre-registered, update the sensor name based on its installation.