

Floodie Flood Sensor & Water Leak Detector

Standard Installation



Floodie requires a Sensor Relay communication hub to connect to the AlertAQ™ platform. Ensure you have a Sensor Relay installed nearby with a green LED. Floodie should not be installed on conductive metal

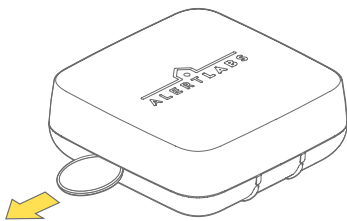
1

Add sensor and see install instructions at: alertaq.com/addsensor

If you have purchased Professional Services to pre-register your sensor, skip to step 2.

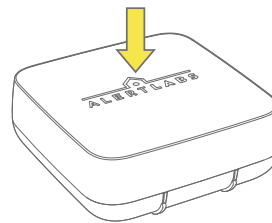
2

When ready to install, pull the tab to activate the batteries

**3**

Confirm the LED is green

See [troubleshooting](#) if it is not.

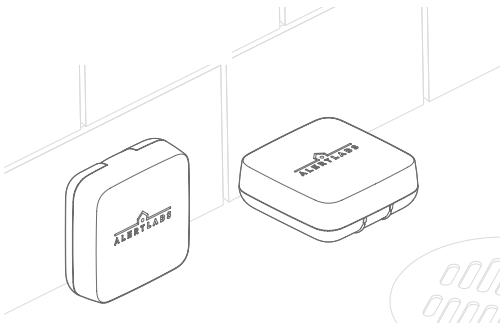


- GREEN - Connected
- RED - No Signal
- YELLOW - Low Battery
- MAGENTA - Upgrading

4

Place in the desired location within 500ft. (150 m) of the cellular sensor

Horizontally or vertically, but the metal contacts should be nearly touching the floor

**5**

Upload a photo of the installation to the sensor details page in AlertAQ™

To get to the details section of the sensor, select the name of the sensor from the [Sensors page](#). [See help article.](#)

If your sensors were not pre-registered, update the sensor name based on its installation.

