

Humie Humidity & Temperature Sensor

Standard Installation

! Humie requires a Sensor Relay communication hub to connect to the AlertAQ™ platform. Ensure you have a Sensor Relay installed nearby with a green LED.


! **Installation Best Practices**

When placing or securing Humie, consider sources of heat gain/loss or other obstructions that may lead to inaccurate readings. If placing Humie on a flat surface (e.g., on a shelf), it is recommended to place it approximately 4 ft. (1.2 m) off the floor. If installing on a wall with provided wall anchor, hang Humie at the midway point between the floor and ceiling (similar to a thermostat). Humie can also be securely fastened to the wall with an Alert Labs mounting bracket (sold separately) to help prevent it from being moved.

1 **Add sensor and see install instructions at:** alertaq.com/addsensor


If you have purchased Professional Services to pre-register your sensor, skip to step 2.

2 **When ready to install, pull the tab to activate the batteries**

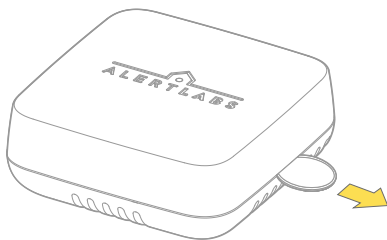


3 **Confirm the LED is green**

See [troubleshooting](#) if it is not.

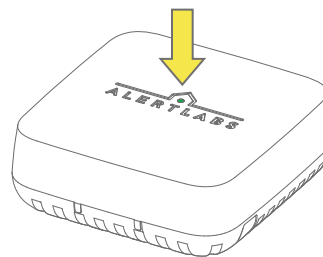

- GREEN - Connected
- RED - No Signal
- YELLOW - Low Battery
- MAGENTA - Upgrading

4 **Place in the desired location**
Ensure the device won't get wet.

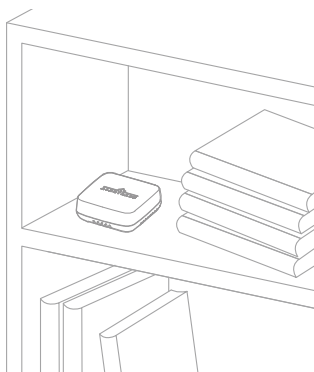

5 **Upload a photo of the installation to the sensor details page in AlertAQ™**

To get to the details section of the sensor, select the name of the sensor from the [Sensors page](#).
[See help article.](#)

If your sensors were not pre-registered, update the sensor name based on its installation.

