

# MOTION ACTIVATED CEILING LIGHT

#### **BL-CSMT-W INSTRUCTION**

**BL-CSMT-W** - Motion Activated Ceiling Light - Requires 3 C batteries (not included)

Thank you for your purchase of this motion activated ceiling light. This light features a 200 lumen neutral white light (4000K) and can be set to turn on anytime motion is sensed, or only when the room is dark (dusk-to-dawn). This light can also be dimmed to 100 lumens in order to conserve battery in dusk-to-dawn mode. This light runs on 3 C batteries that last up to one year, and can be mounted anywhere including closets, basements, laundry rooms, entryways and more.



## **Mounting Plate Instruction**

The Westek motion activated ceiling light comes with a mounting plate that can be easily mounted to a ceiling using the provided hardware. Twist the light clockwise to lift and separate from the attached mounting plate. Use the provided anchors to install your light. Drill 3/16" pilot holes, then gently tap the plastic anchor in the hole until it is flush with the wall. Insert a screw through the mounting plate and into each mounting hole and tighten until the mounting plate does not move. Make sure screw head is flush to mounting plate for a secure fit once fully installed.

### **Battery Installation**

- If the motion ceiling light is installed, twist light clockwise to separate from mounting plate.
- Install / replace 3 C batteries with correct polarity as indicated in the battery compartment. Reversed polarity batteries may cause damage to the device.
- Reposition the motion ceiling light against the built-in mounting
  plate tabs and twist the light counter-clockwise onto the mounting
  plate, checking that the ceiling light is locked to the plate.

## **Operation**

This ceiling light features 120-degree motion detection angle with a 15 foot detection range. It can operate in three different modes:

- 200 lumens, dusk-to-dawn only
- 200 lumens, any light level
- 100 lumens, dusk-to-dawn only

# WARNING

- Use only the size and type of batteries specified
- Replace all batteries at the same time. Do not mix old and new batteries.
- Clean the battery contacts and also those of the device prior to battery installation as necessary.
- · Do not dispose of batteries in a fire
- Remove batteries if consumed or if product is to be left unused for an extended period of time (>1 month).

#### A. On Board Operation


There are three switch options to activate motion.


- ON activates 200 lumens, dusk-to-dawn only mode
- OFF activates 200 lumens, any light level mode
- DIM activates 100 lumens, dusk-to-dawn only mode

 
Light will turn off 20 seconds after last motion detection.




**Note:** DIM can be utilized to effectively further extend the battery life, achieving up to two years from a single set of C batteries.

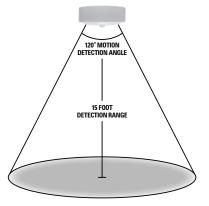

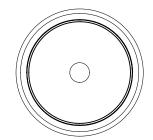



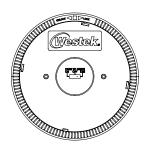



Product SKU	Size	Weight	Color Temperature	Max Lumens	Battery Size	Battery Life	Rating
BL-CSMT-W	5.6"L x 5.6"W x 2.5"H	0.47 lb	4000K	200lm (at 100%)	3 C	up to 1 year*	Dry**

\*At 200 lumens, 8 activations per day, 20 seconds per activation

\*\*For indoor use only

**Warning:** Do not disassemble or modify this light. Modification voids the manufacturer's warranty and any applicable regulatory certifications this light may possess.

#### **Limited Warranty**

Under normal use and conditions, AmerTac provides to the original purchaser of this product a one year limited express warranty that is set forth in the Limited Warranty stated in full at www.amertac.com/warranties. The Limited Warranty is in lieu of all other express or implied warranties or liabilities subject to the exceptions explained fully in the Limited Warranty on the website.

©2022 AmerTac<sup>™</sup>
250 Boulder Drive
Breinigsville, PA 18031
amertac.com
Made in China
BO\_TL\_056\_0522