

Cleaning Instructions for LVP Flooring

Preventative Maintenance:

- Always protect floors when moving heavy objects to prevent permanent scratches and tears.
- Do not use tape to secure floor protection directly to the floor during construction or renovation. Instead, adhere tape to the material used to protect the floor and secure it to the base molding along the wall. A material such as ram board can also be used to protect your flooring.
- Use appropriate wide floor protectors under tables, chairs and any other heavy home furnishing, in addition to chair pads under caster chairs to avoid permanent damage.
- Place chair pads underneath rolling chairs to prevent damage to the LVP flooring.
- Avoid direct sunlight on LVP flooring as it can cause fading and additional expansion of vinyl planks. Use window protection.
- Surface temperature should not exceed acceptable temperature ranges based on product category (65° - 85° F PVC/WPC) (55° - 155° F SPC) Exposing product to temperatures outside the recommended range could cause expansion of vinyl planks.
- Products containing bleach and steam mops are not recommended.

Routine Maintenance:

- Daily removal of dirt and dust is important to prevent particles from abrading the surface of resilient floors. Sweeping, dust mopping, and vacuuming are recommendations to remove soil particles that can result in scratches and worn appearances. Do not use vacuums with rotating beater bars on hard surfaces.