



CARE AND MAINTENANCE OVERVIEW

GENERAL

- Do not move or disassemble the system (or any of its pieces) for any reason.
- Do not attempt to tip or adjust the pillars.
- Never disconnect power to the system (or any of its pieces).

VIRTUAL LIFT ZONE

- Do not drive, stand, or step over the Virtual Lift.
- Try to maintain a constant speed (3mph) throughout the drive. Do not accelerate through the system.
- Starting or stopping on the speed bump could cause flooring parts to become dislodged or damaged.
- Keep Virtual Lift, surrounding area and camera domes free of water/debris.
- Wipe down any spills on the system immediately upon noticing.
- Do not use industrial floor cleaner through the system.
- Keep the flooring clean of any general debris with a gentle broom or mop.

CONTINUED MAINTENANCE

ACV representatives are available to help you with any service or maintenance needs. Please reach out for more information.

FOR ADDITIONAL SUPPORT, PLEASE CONTACT: VIPERSUPPORT@ACVAUCTIONS.COM