

WEBCAM 2K

Manual guide

Installation steps

1. Open the webcam mount and put the webcam above the display screen.
2. Press down on the mount and snap the rear of the mount to the back of the screen.
3. Connect the camera to your computer via the USB cable.
4. 3 level fill light can be adjusted by long touch of the button.

System requirements

- IBM PC or compatible PC or laptop with USB port Pentium 300 or higher CPU
- Operation system: Windows XP 2000/2003 / Vista 7/8/10, Mac Os.
- Over 200MB available hard disk space
- 32MB or higher memory
- Support Direct X VGA card

Installation steps

1. Open the webcam mount and put the webcam above the display screen.
2. Press down on the mount and snap the rear of the mount to the back of the screen.
3. Connect the camera to your computer via the USB cable.
4. 3 level fill light can be adjusted by long touch of the button.

Parameters and features

Parameter	SPEC.	Parameter	SPEC.
Optical size Sensor	1/3" inch 16.9 sensor	Operating System Request	Windows XP, Windows Vista, Windows 7, Windows 8
Sensor Resolution	2592*1440 (16:9)	Focal Length	3.62mm
Focus Length	f = 2.88mm	ADC accuracy	10-bit
Frame rate	30fps	USB 2.0 PHY	On Chip PHY
View Angle	80°(d°)	Power Consumption Suspend	40mA±5mA
Control mode	Single-button touch control	Power Consumption Operating	195mA±5mA (@ 2592x1444, 30fps, (MJPEG)
AEC / AGC / White Balance	Auto Focus		
Output mode	YUV, MJPEG, H.264		
Interface	USB cable		
Power	USB Drive Power		
Operating Temperature	0°C to +50°C		

Cautions

- Avoid contact to the lens with hand, sharp or coarse stuff, use clean and soft cloth for cleaning.
- Continuous dropping may cause damages to the lens, malfunction or scratches to the surface.

Waste Management Instructions

- Always drop your used electronic products, Accessories/Consumables, spares/ batteries and packaging materials after the end of their life at the nearest collection point.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.
- The product is not meant for re-sale of any unauthorized agencies/snap dealers.
- Never dump e-waste in garbage bins.
- Do not dispose off your product in at municipal waste bins.
- Do not throw used batteries into household waste.