

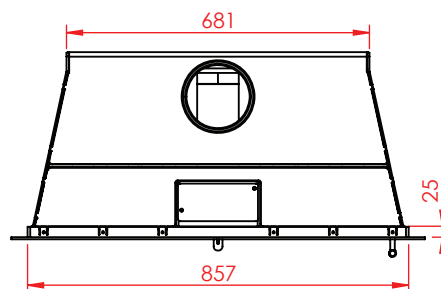
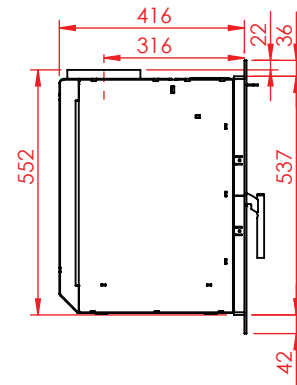
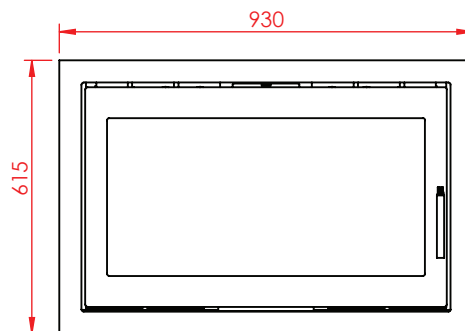
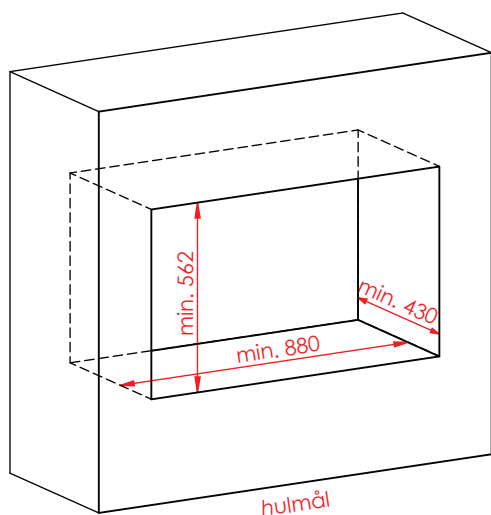
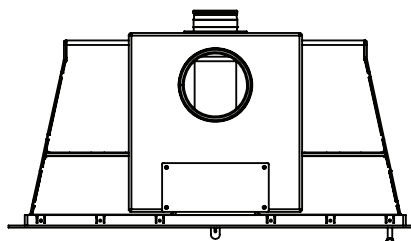
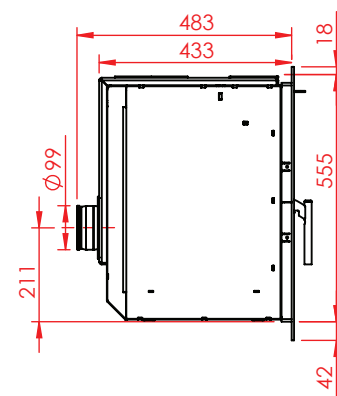


Jupiter 550 - 850





vægt: 138 kg

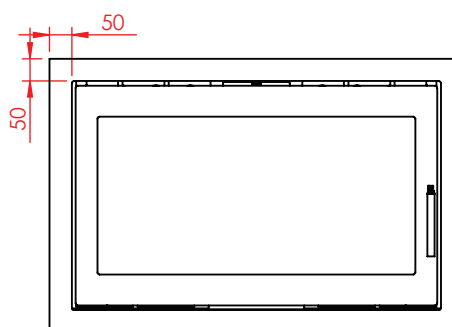

Jupiter 550 - 850

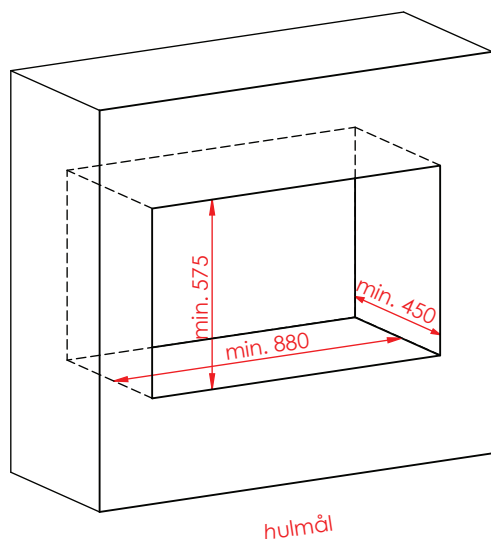

Jupiter 550 - 850, friskluft bag

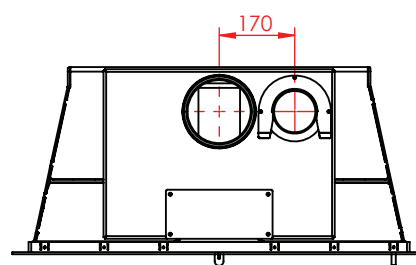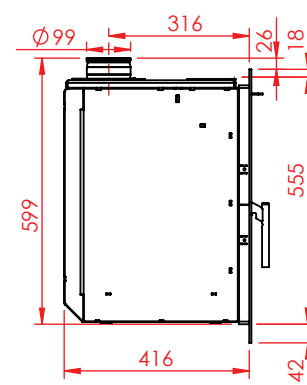
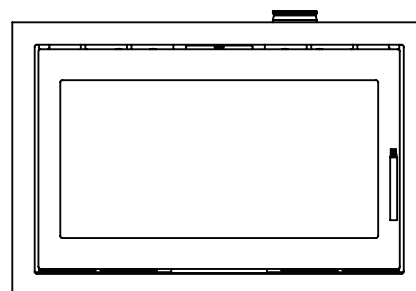
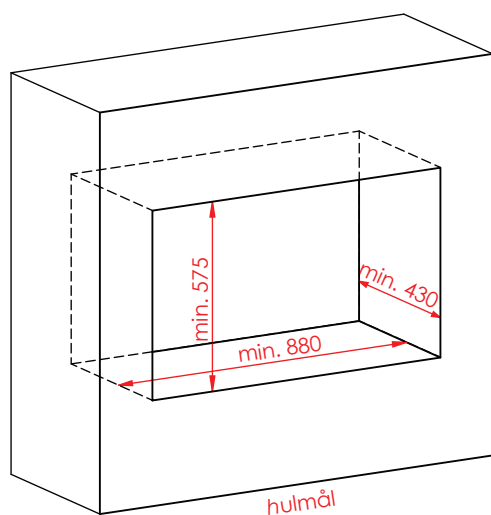


Jupiter 550 - 850, friskluft top

Afstand til brændbart

Jupiter pejseindsatse standard

	dS	dS ¹ note 1	dB	dP	dL note 3	dC note 4	dR
Jupiter 470-850	400	250	400	1400	700	400	0
Jupiter 500-850	400	250	400	1400	700	400	0
Jupiter 550-850	400	250	400	1400	700	400	0
Jupiter 470 XXL	400	250	400	1400	700	400	0
Jupiter 550 XXL	400	250	400	1400	700	400	0

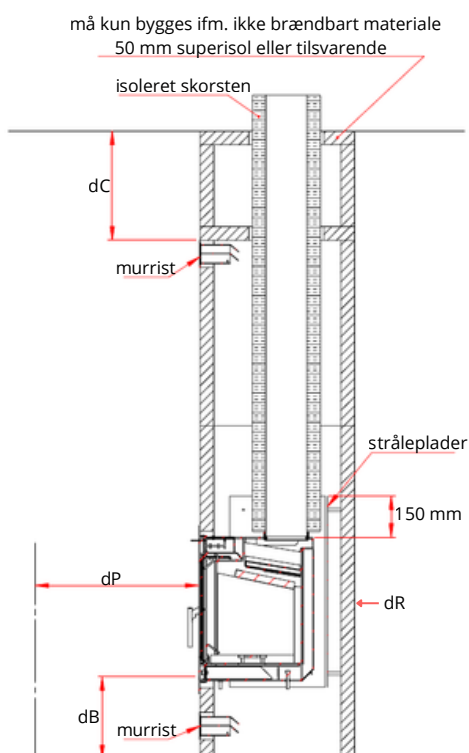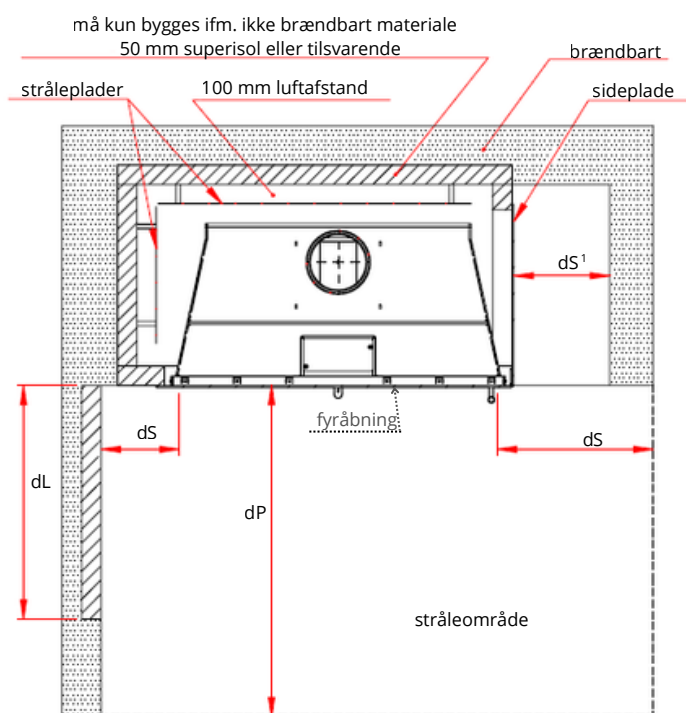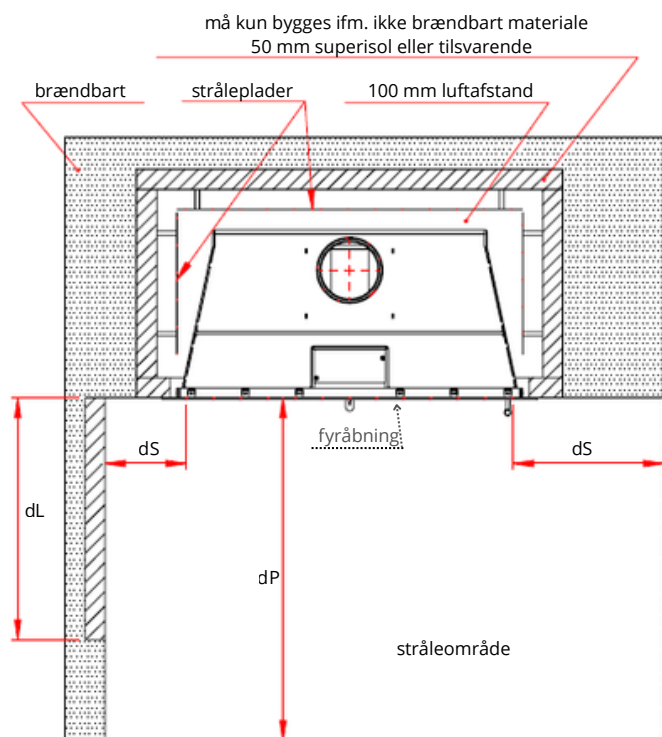

Note 1: målet ud for en lukket sideplade -
målt fra lågekant

Vær opmærksom på at **dS** målene foran
indsatsen stadig overholdes

Note 3: målt fra lågens forkant ved **dS** < 400 mm

Note 4: målt fra overkant murrüst

Stråleplader: på alle 3 sider, placeres fra ovns
bund til 150 mm over ovns top

Sikkerhedsafstand til trappe/brandbart dæk

Hvis der findes brændbare trapper/ et brandbart dæk over pejseindsatsen - målt fra lågens overkant til nærmeste brændbare del af trappen: **dC** min 600 mm



eksempel set forfra ved trappe