


Jupiter 550 see through

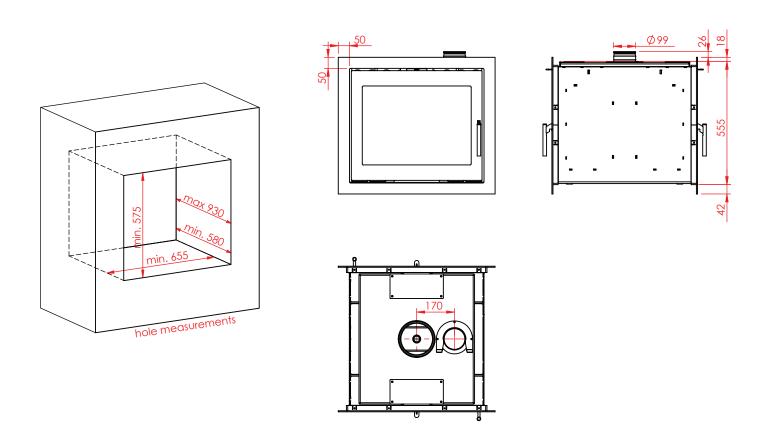



Jupiter 550 see through, airbox on top

## Clearance to combustible materials


Jupiter	fireplace	inserts
---------	-----------	---------

see through	dS	dS <sup>1</sup>	dF	dB	dΡ	dL	dC	
		note 1	note 2	note 2		note 3	note 4	
Jupiter 470 vertical	350	250	0/650	300	1100	700	400	
Jupiter 550 vertical	350	250	0/650	300	1100	700	400	
Jupiter 470	350	250	0/650	300	1100	700	400	
Jupiter 550	350	250	0/650	300	1100	700	400	

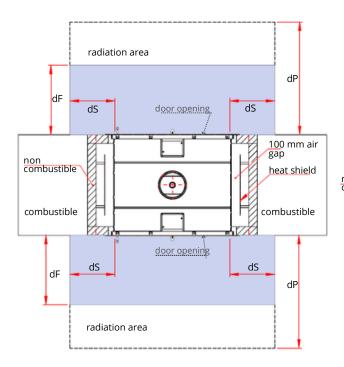

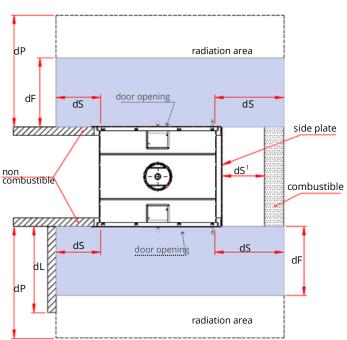

may only be installed in connection with noncombustible material. 50 mm Super-Isol or equivalent

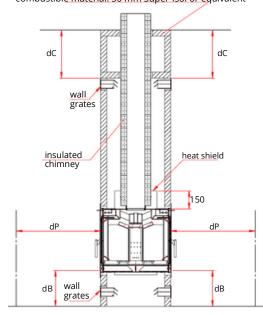

Note 1: dimension measured at a closed side plate
- measured from the edge of the door

Be aware that the **dS** clearances in front of the insert must still be respected.

Note 2: safety distance to non-combustible floor - measured from the floor to the underside of the door edge:


 $dB \ge 300 \ mm = dF: 0 \ mm$  $dB < 300 \ mm = dF: 650 \ mm$ 

Note 3: measured from the front edge of the door when **dS** < 350 mm

Note 4: measured from the top edge of the wall grates Heat shields: on all three sides, positioned from the bottom of the stove up to 150 mm above the top of the stove

## Safety distance to staircase/combustible ceiling

If combustible staircases or a combustible ceiling are located above the fireplace insert – measured from the top edge of the door to the nearest combustible part of the staircase: **dC** min. 600 mm

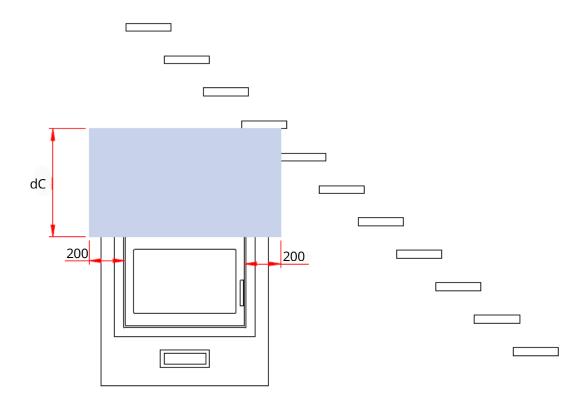

front view example at staircase