




Jupiter 500-850 with fixed glass, airbox behind

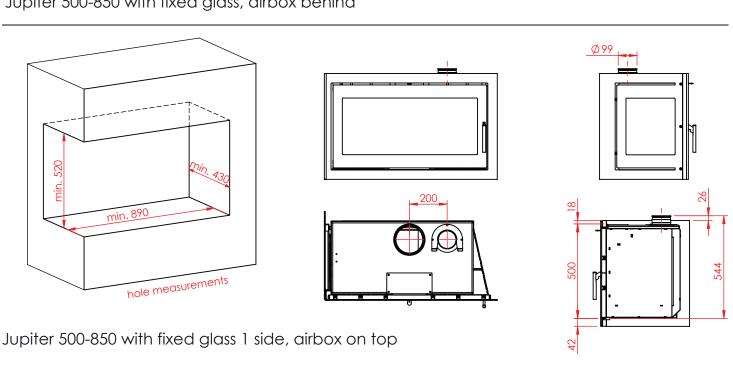


Clearance to combustible materials

Jupiter fireplace inserts with fixed glass 1 side	dS	dS¹	dF	dB	dP	dP ⁵	dL	dC	dR	K
		note 1	note 2	note 2		note 5	note 3	note 4		note K
Jupiter 470-850	400	250	0/650	300	1300	650	700	400	0	150
Jupiter 500-850	400	250	0/650	300	1300	650	700	400	0	150
Jupiter 550-850	400	250	0/650	300	1300	650	700	400	0	150
Jupiter 470 XXL	400	250	0/650	300	1300	650	700	400	0	150
Jupiter 550 XXL	400	250	0/650	300	1300	650	700	400	0	150

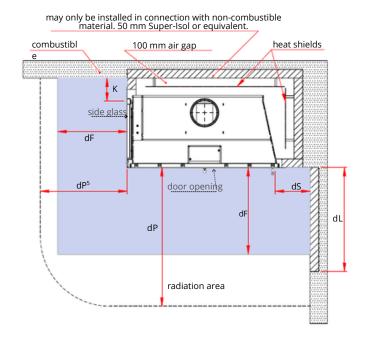

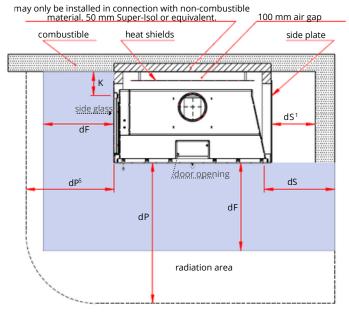

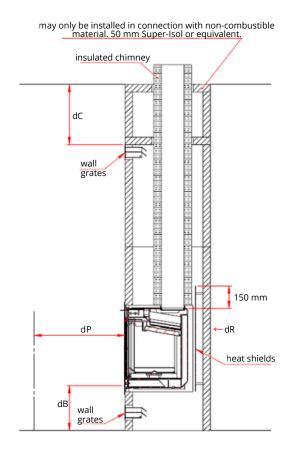

Note 1: dimension measured at a closed side plate
- measured from the edge of the door

Be aware that the **dS** clearances in front of the insert must still be respected.

Note 2: safety distance to non-combustible floor - measured from the floor to the underside of the door edge:

 $dB \ge 300 \text{ } mm = dF: 0 \text{ } mm$ dB < 300 mm = dF: 650 mm

Note 3: measured from the front edge of the door when dS < 400 mm

Note 4: measured from the top edge of the wall grates


Note 5: side glass furniture clearance

Note K: measured from the groove edge

Heat shields: on two sides, positioned from the bottom of the stove up to 150 mm above the top of the stove.

Safety distance to staircase/combustible ceiling

If combustible staircases or a combustible ceiling are located above the fireplace insert – measured from the top edge of the door to the nearest combustible part of the staircase: **dC** min. 600 mm

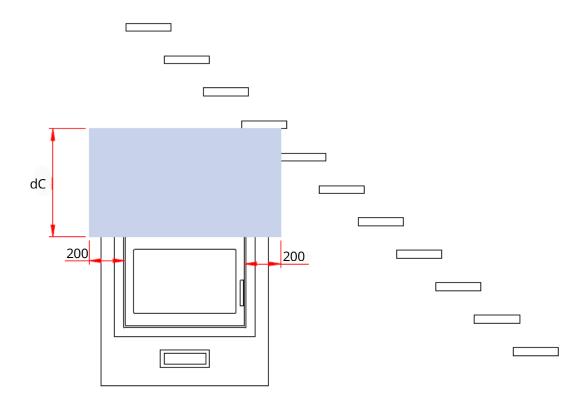

front view example at staircase