

English (Original)

NETFLIX

KPOP DEMON HUNTERS

HUNTRX

'ZOEY'



'RUMI'



'MIRA'



Moto



Combat



Golden

SaijaBoys

'ROMANCE'



'BABY'



'JINU'



 
 
'MYSTERY'



'ABBY'



Human



Demon

'CELINE'



'BOBBY'



'HEALER HAN'



'DERPY'



'SUSSIE'



BITZEE

NETFLIX

KPop Demon Hunters™
© Netflix. Used with permission.

 
TM & © 2026 Spin Master Ltd. All rights reserved. / Tous droits réservés.
Bitzee™ Patent information / Informations sur les brevets : patents.spinmaster.com

5+



1

EXIT TRY-ME

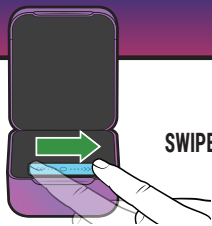

SWIPE once from left to right.



CAUTION

Do not poke, grab or pull the flexible display. Only touch the display gently from above.

2

TUTORIAL

Follow the prompts.



SWIPE BAR

Swipe finger across bar.



TOUCH

(from above only)



SHAKE

Shake the pod.



TILT

(left or right)



TILT

(forward or backward)



LIFT UP

(quickly)



Complete the tutorial steps! Once you finish the tutorial, you are ready to play!

3

PLAYING WITH BITZEE

Interact to increase Fan Count and unlock new content.



Interact with your characters by touching, tilting, shaking and lifting.



As you interact, your Fan Count will periodically increase.



Continue to increase your Fan Count to unlock new outfits, characters, and mini-games!



MAIN MENU

When playing with a Bitzee, swipe to access the Main Menu. Touch the flexible display to select a menu option.



VIEW/SWITCH CHARACTERS

Touch to open. Swipe through characters. Touch to select a character and begin playing with them.



FAN COUNT

View your current fan count. This represents your progress in the game.



MINI-GAMES

Touch to open. Swipe through the different Mini-Games you've unlocked. Touch to play one.



SETTINGS

Touch to go to the Settings Menu.



BATTLE

Touch to open. Swipe through the battles you've already completed. Tap one to replay it.



PERFORM

Touch to open. Swipe through the performances you've already completed. Tap one to replay it.

BATTLE

At certain stages in gameplay, as your Fan Count increases, you'll get a notification that demons have broken through the Honmoon! Touch to accept the notification and begin a battle.



Battles are fast-paced, reaction-based Mini-Games. Dodge demon attacks and strike your opponent when they're vulnerable to defeat them.



DODGE

When your demon opponent flashes red, they're about to attack. Tap anywhere on the swipe bar to dodge.




ATTACK

When they flash blue, they're vulnerable. Swipe to attack them and inflict damage.



JUMP ATTACK

When they flash yellow, they're dizzy. Touch the display to perform a follow-up jump attack.

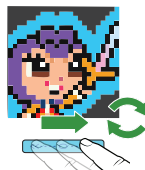

SWIPE REPEATEDLY


For your finishing move, swipe quickly to charge up power and unleash a devastating attack.

Replay battles you've won any time from the Main Menu. Replaying battles will increase your fan count.

6

PERFORM


After completing a battle, you'll get a notification to perform and reseal the Honmoon! Touch to accept the notification and begin a performance.

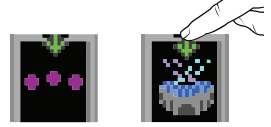

Performances are music-based Mini-Games in which you sing and dance along to the music as HUNTR/X or the Saja Boys.

Tap the left, middle or right sections of the swipe bar when the falling notes line up with the outlines at the bottom of the screen.

Notes are always on the beat, so listen carefully as you play!

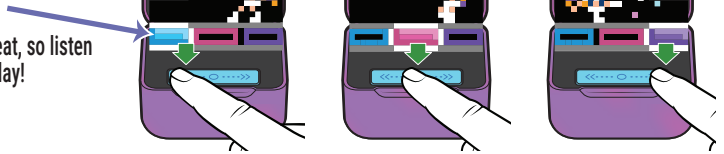

7

HANGOUTS

Sometimes characters will text you asking to hang out. Touch to accept the hangout request and see what they want to do with you.



For example, if Zoey texts you to hang out...



You'll be shown what she wants — she has sushi ready for couch time, but needs you to bring the couch!

Then you'll be shown a prompt for the required interaction — here it's a swipe.

Swipe to bring in a couch. Now, couch time can really begin!



=



Shake the pod.



=



Swipe finger across swipe bar.




=



Touch the display.

Ignore hangouts twice, and your fan count will drop — you'll have to earn them back.

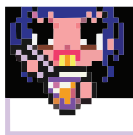


SPEEDY SNACKER

- Eat as many snacks as you can before time is up. Tap the swipe bar quickly to eat the snacks that pop up on the display.
- For soda and kimbap, swipe as fast as you can.
- For chips and ramyeon, tap the swipe bar as fast as you can.



SLAY THE CHOREO

- Bobby is teaching Rumi a new dance. As Bobby does his sequence of dance moves, sections of the display above the swipe bar will light up.
- Watch carefully to memorize his sequence, then repeat it back to him by tapping the left, middle and right sections of the swipe bar.

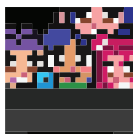


FAN MEET-AND-GREET

- The HUNTR/X girls are at a fan meet-and-greet. As fans and posters appear in front of you, do the correct action to move through each item as fast as possible.
- Touch to take a selfie with fans, swipe to sign posters, and tap the swipe bar to escort Saja Boys fans out.



DERPY DELIVERY

- Jump from windowsill to windowsill to climb a building and deliver an envelope to Rumi at the top.
- Derpy will jump automatically – just hold the left or right sections of the swipe bar to steer Derpy in that direction.

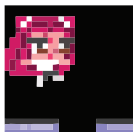

TRAIN TAKEDOWN

- Help Mira dodge, jump and slash her way across the train.
- Tap the left swipe bar section to duck under overhead signals, tap the right swipe bar section to jump over gaps, and swipe across the swipe bar to slash demons.



HEART CHANGER

- Play as the Saja Boys and capture the hearts of fans.
- Fans will walk across the top of the screen – touch the left, middle or right swipe bar when they line up with that section to fire a heart at them.
- Charm as many fans as you can while avoiding shooting hearts at demon decoys.



SETTINGS MENU



VOLUME

Touch to change the volume.



GO BACK

Touch Back icon to exit menu.



ADJUST SCREEN


Touch and hold the center of the swipe bar for 2 seconds to enter screen adjustment. Tap the right side of the swipe bar to move the image up. Tap the left side of the swipe bar to move the image down. Shake to reset to default. Touch the flexible display to confirm.



RESET BITZEE

⚠ CAUTION – THIS ACTION CAUSES A FACTORY RESET AND ERASES ALL EXISTING PLAY HISTORY.

Hold the Bitzee pod level and upright. Then touch and hold the swipe bar to start the countdown. Do not lift your finger until the countdown finishes and you hear the alarm sound effect. Your Bitzee is now reset to the on-shelf demo.

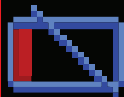

REPLACE BATTERIES

LOW BATTERY WARNING

Before replacing batteries, turn Bitzee off, or your progress may be lost.

⚠ WARNING: This toy produces flashes that may trigger epilepsy in sensitised individuals. To reduce exposure to such potential, play in a well-lit room, and do not flash lights directly into eyes.

⚠ WARNING: This toy contains inaccessible magnets. Exposed magnets, if inhaled or swallowed can stick together or to other metal objects, and can cause serious or fatal injury. Keep away from electronic and medical devices.

BITZEE

KPOP DEMON HUNTERS

KPop Demon Hunters™/© Netflix. Used with permission.

Patent information: patents.spinmaster.com
TM & © 2026 Spin Master Ltd. All rights reserved.

Spin Master Ltd., 225 King Street West, Toronto ON M5V 3M2 Canada
Spin Master Inc., PMB #10053, 300 International Drive, Suite 100, Williamsville, NY 14221
Spin Master International B.V., Kingsfordweg 151, 1043 GR Amsterdam, NL
Spin Master Australia Pty Ltd, Level 9, 205 Pacific Hwy, St Leonards, NSW 2065
Spin Master Toys UK Ltd, Meridian House, Fieldhouse Lane, Marlow, Buckinghamshire, SL7 1TB, UK

MADE IN CHINA

T22913_0001_20159823_QSG_R1

⚠ WARNING: CHOKING HAZARD – Small parts.
Not for children under 3 years.

