



SYSTEM WARNINGS

E129 BLADE SENSOR NOT CONNECTED


- Restart the system by turning the machine off and then on again
- If the error persists, check the blade sensor cable

E131-E133 LASER RECEIVERS NOT CONNECTED

- Restart the system by turning the machine off and then on again
- If the error persists, check the laser receiver cable

E140-E142 SONIC SENSORS NOT CONNECTED

- Restart the system by turning the machine off and then on again
- If the error persists, check the sonic sensor cable

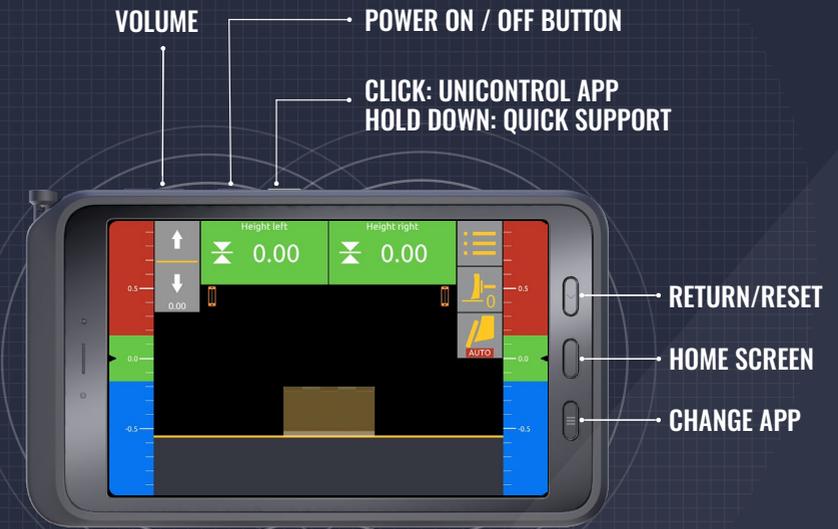

NAVIGATION

PRESS

HOLD

Job Type Menu



Settings

Set Zero Height



Height Offset

Automation Settings



Change Slope Direction



Fine Adjust Height




Coarse Adjust Height

Fine Adjust Slope




Coarse Adjust Slope

JOBTYPES

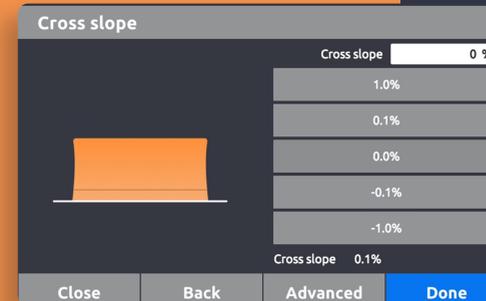


CROSS SLOPE

Create a cross slope by configuring the required cross slope values within this job type. Adjust the slope through the selection menu or by manually entering the cross slope grade.

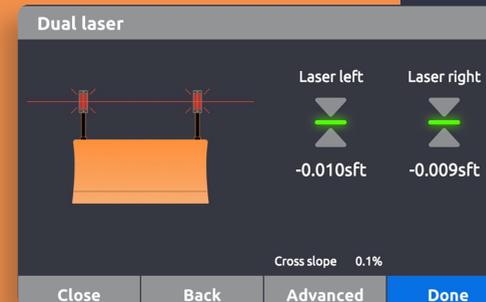

DUAL LASER

Supports grading with a dual laser setup as reference, enabling precise cross slope and elevation control in 2D applications.

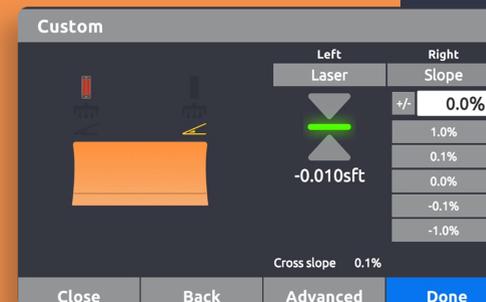

CUSTOM JOBTYP

Enables creation of a custom job-type based on the selected 2D sensor setup. Runscreen indicators reflect the active configuration.

Supported setups:
Dual Laser or Sonic
Slope & Laser or Sonic