

MAINTENANCE

The laminate flooring is very easy to maintain and is extremely resistant to wear and stains.

- Spot clean your floor as needed and completely clean when needed .
- Occasionally vacuum (no beater bar vacuums) or sweep to eliminate loose dust and debris.
- Wipe soiled spots with a cloth dampened with clean water . Make sure the cloth is thoroughly wrung out. Never flood the floor with water or cleaner.
- After damp cleaning, dry the floor thoroughly with a clean cloth.
- Remove tough, stubborn stains such as paint, adhesive, asphalt, oil, etc. with alcohol, acetone or nail polish remover.
- Place rugs or floor mats on heavy traffic areas to avoid excess wear and tear.
- Place doormats in front of outside entrances.
- Never wax, polish or use soap. Doing so may damage the wear surface, causing it to be slippery or to have unattractive smudges.
- The laminate is approved for residential steam mops.
- Never use scouring powder products, steel wool or abrasives.
- Do not treat or seal the panels after they have been installed.