

Access Your Digital Downloads

Homeowner Downloads

Who should download this:
Homeowners



PRO

Downloads

Who should download this:
Installers



CONTROL YOUR WATER™




Thank you for choosing LeakSecure!


You can download the full version(s) of your device & app documentation by scanning these QR codes.

Quick Start Guide 

WHAT'S IN THE BOX?

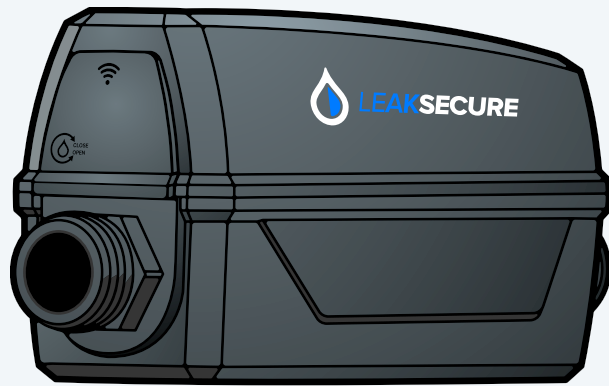


LEAKSECURE Device

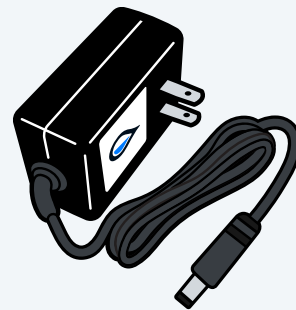

Power Supply



1-1/4" NPSM Installation Tube

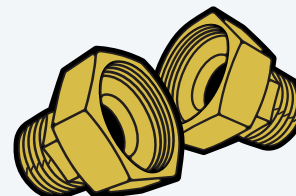

1-1/4" NPSM to 1" NPT Fittings

INSTALLATION DIAGRAM

Power Supply
(GFCI Outlet Recommended)

Vertical installation diagram shown. For a horizontal installation, rotate this page 90 degrees clockwise.

1-1/4" NPSM Fittings Required

Pressure Reducing Valve
(if applicable)

Main Water Shutoff

1" NPT Water Main

INSTALLATION REQUIREMENTS

IMPORTANT:

LeakSecure® should be installed by a licensed plumber. Failure to follow installation instructions may lead to a malfunctioning or leaking device and void the manufacturer's warranty. For complete warranty terms and conditions, refer to page 15 of the User Guide, available for download.

- 1 The LeakSecure device is installed in an accessible location on the main cold water supply line from water provider.
- 2 The device must be installed AFTER water meter, main water shut-off, and pressure reducing valve (if applicable).
- 3 For accurate monitoring and water usage data, your device must be installed BEFORE water heaters, water softeners, whole-home filtration, etc.
- 4 The power supply and device must not be buried or installed where the ambient temperature can exceed 140 deg F (60 deg C) or below 32 deg F (0 deg C).
- 5 110/220V 15W power supply with continuous power within 20' of the installation. A GFCI outlet is recommended.
- 6 A smartphone with the LeakSecure app installed is required to activate your LeakSecure device, receive notifications, and perform remote water shutoff.
- 7 The device must be in range of a Wi-Fi network (WLAN connectivity / IEEE 802.11 bgn, 2.4 GHz range)