

Installers - Auditor 6W (wifi)

Wiring Diagrams

For installers: All wiring diagrams for the Auditor 6W and 6W+3SW

[Click here for the Commissioning Quick Start Guide](#)

This article lists all wiring diagrams for connection of the 6W and 6W+3SW

- Single and mixed-phase
- Three-phase
- Switching



Please ensure that you wire the device correctly using the diagrams below

Single and mixed-phase wiring diagrams - Auditor 6W

[Six 1-phase loads](#)

[2-phase mains 1-phase solar](#)

[3-phase mains 1-phase solar](#)

Three-phase wiring diagrams - Auditor 6W

[Two three-phase loads](#)

[Three phase mains and solar](#)

Auditor 6W - Data Sheet

[Data Sheet](#)