



Installers - Auditor 6M (4G mobile)

Wiring Diagrams

For installers: All wiring diagrams for the Auditor 6M and 6M+3SW

[Click here for the Commissioning Quick Start Guide](#)

This article lists all wiring diagrams for connection of the 6M and 6M+3SW

- Single-phase
- Two-phase
- Three-phase
- Three-phase



Please ensure that you wire the device correctly using the diagrams below

Single and Mixed-Phase Wiring Diagrams - Auditor 6M or 6W

[Single-Phase Supply with Solar and Consumption Monitoring](#)

[Single-Phase Supply with Grid, Solar, and Loads Monitoring](#)

[Two-Phase Supply with Solar and Consumption Monitoring](#)

[Two-Phase Supply with Grid, Solar, and Loads Monitoring \(P3 Red\)](#)

[Two-Phase Supply with Grid, Solar, and Loads Monitoring \(P3 Blue\)](#)

Three-Phase Wiring Diagrams - Auditor 6M or 6W

[Three-Phase Supply with Three-Phase Solar PV Inverter Monitoring](#)

[Three-Phase Supply with Three-Phase Consumption Monitoring](#)

[Three-Phase Supply with 2x Three-Phase Supply Monitoring](#)

[Three-Phase Supply with Grid and Three-Phase Load Monitoring](#)

[Three-Phase Supply with Three-Phase Inverter and Three-Phase Load Monitoring](#)

[Three-Phase Supply with Grid, Single-Phase Inverter, and Loads Monitoring](#)

[Three-Phase Supply with Three-Phase Solar and Consumption Monitoring](#)

Auditor 6M - Data Sheet

[Data Sheet](#)