

APOLLON CT-200 PREPAYMENT SYSTEM

User instructions

How to use a key correctly?

Place the key on the button, wait for the audible signal, then remove the key.

1

How to start the machines?

1

Place the user key on the reader (IN-1 for the washing machine or IN-2 for the dryer).
The key balance appears: **** CHF 30.00.- ****.

Place the key on the reader again while the balance is displayed and wait for the audible signal.

The usage charge is deducted from the key (default: CHF 5.00.-).
The new balance appears: **START CHF 25.00.-** Remove the key.

2

3

Use the washing machine or dryer.

When the programme has finished, the system stops automatically after 5 minutes. Place the key on the reader and wait for the audible signal to stop the machine before the end of the programme or once the programme has finished. The unused amount is credited back to the key:

STOP CHF 28.00.- Remove the key.

4

While the machine is in use, a black dot flashes. A « lightning-bolt » symbol appears when the meter detects electrical power consumption. In the event of a power outage, the amount currently in use is saved.

How to use a key correctly?

Place the user key on the reader (1 for the washing machine and 2 for the dryer).
Remove the key: the machine remains powered for 10 seconds.

WARNING

- KEEP KEYS OUT OF REACH OF CHILDREN.
- DO NOT SWALLOW THE KEYS. DO NOT THROW THE KEYS INTO A FIRE.

