


# ROTARY BRACKET

## Installation


### STEP 1:

Mark the installation position on the mounting surface.

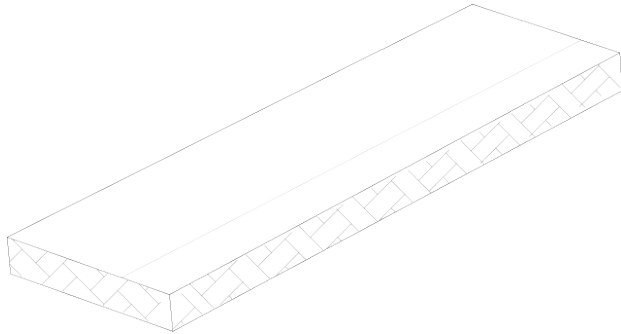


### STEP 3:

Lay the mounting profile aside and fix the rotary locking bracket to the mounting surface by screws along the marking line.

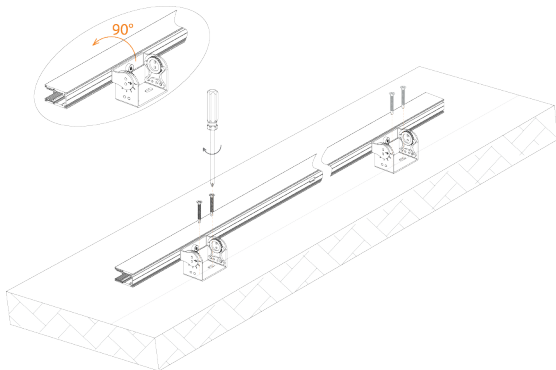


### STEP 5:

Install the light orderly and leave the front connector and end cap outside of mounting profile .

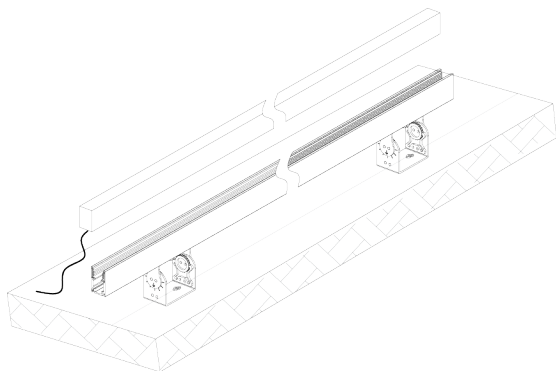


### STEP 2:

Fix the mounting profile to the rotary locking bracket by screws.

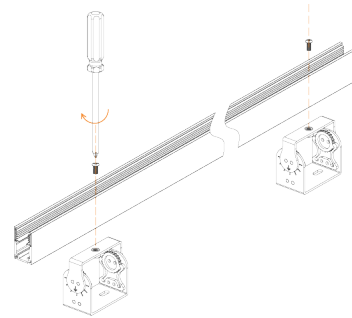


### STEP 4:

Turn back the mounting profile. Please skip to step 7 for length extension (one piece of light crossing multiple pieces of mounting profiles).

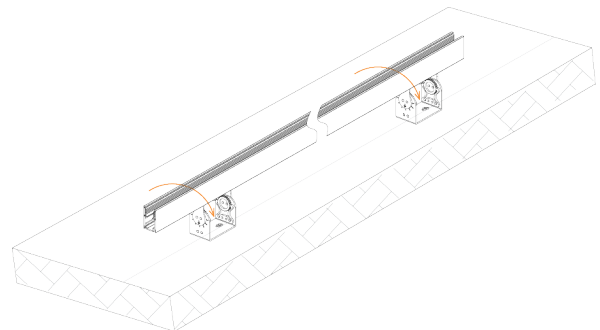

### STEP 6:

Power on the light and rotate the mounting profile to the desired lighting angle.

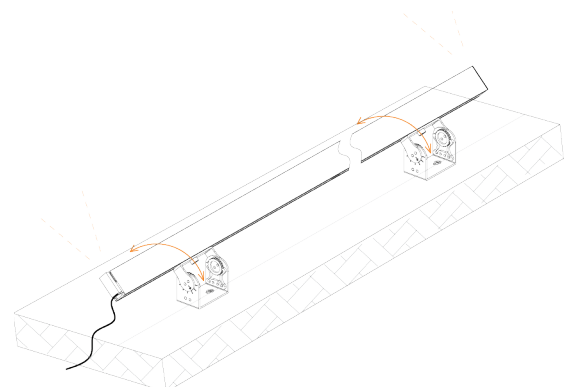


# ROTARY BRACKET



Installation Continues


### STEP 7:

Please reserve 5mm gap between mounting profiles in case of contraction and expansion.

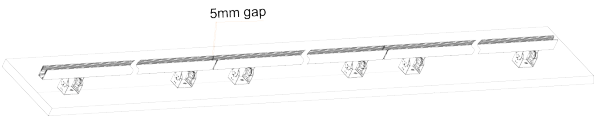


### STEP 8:

Fit the light into the first piece of mounting profile and keep the remaining lights coiled. Next repeat step 6 to adjust the lighting angle.

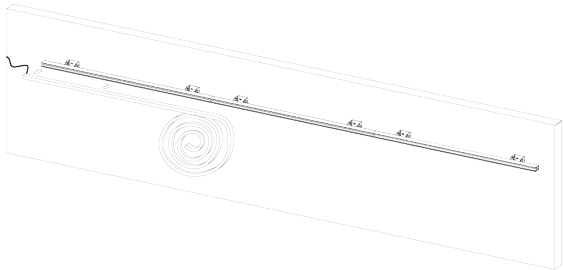

### STEP 9:

Adjust the rest of mounting profile to the same angle and then install the coiled light orderly.

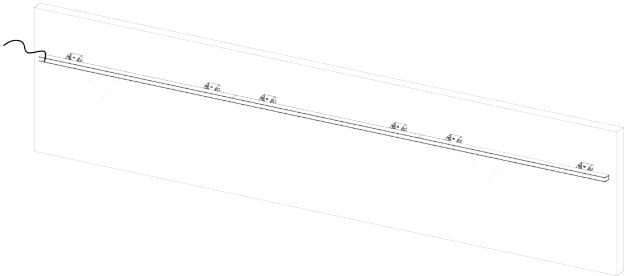

### STEP 10:

If you need further adjustment after installation, please fine tune rotary locking bracket 15 degree each time one by one in case of twisting on lights.

