



I'm not a robot



Continue

Mr heater big maxx 50000 manual

Mr heater big maxx manual. Mr heater big maxx maintenance. Mr heater big maxx instructions. Mr heater big maxx 50000 btu manual.

WARNING: Failure to follow instructions exactly may result in fire, explosion, property damage, personal injury, or loss of life. Please read these instructions before operating this heater and keep combustible materials at a safe distance. NEVER use the heater in spaces with building materials, paper, or cardboard. MHU 50/MHU 80 Unit Dimensions (N-Natural Gas, P-Propylene): * Hanging Brackets: 5/16 x 3 inches * Mounting Slots: Typical The heater is completely assembled. Check for shipping damage and contact the last carrier if any damage is found. These units are certified for residential applications and must be installed according to local building codes. For installation in a residential garage, burners and ignition sources must be located at least 18 inches away from the unit. The burner will attempt to ignite up to two more times before locking out. The flames will be predominantly blue in color and centered in the tubes with no apparent impingement. Clean burners as necessary, ensuring that the MHU 50/80 heads line up properly for flame crossover. Check the spark gap on the electrode and adjust if required. The maximum load at 24V should not exceed 20VA, Class 2. When servicing, disconnect all power (W1) before starting. It is recommended to use an optional thermostat for proper grounding, referring to local codes. For repair parts, include the complete unit model number listed on the rating plate. For example: HSU50/80. It is recommended to use... When ordering a HeatStar compact utility heater, including the model # MHU 50/80 E-14. The warranty gives you specific legal rights and may have other rights that vary from state to state. Mr. Heater reserves the right to make changes without notice or obligation in colors, specifications, accessories, materials, and models. Page 17 (Spanish): Si no se sigue la información de estas instrucciones con exactitud, puede producirse un incendio o una explosión y ocasionar daños a la propiedad, lesiones personales o la muerte. MR. HEATER, INC., 4560 W. 160TH ST., CLEVELAND, OHIO 44135 • 800-251-0001 02/12 Rev. 12A #60185... Page 18 (Spanish): ADVERTENCIA: SU SEGURIDAD ES IMPORTANTE PARA USTED Y PARA PELIGRO DE INCENDIO, QUEMADURAS, INHALACIÓN LOS DEMÁS. Page 19: Dimensiones de las unidades MHU 50/80 (N-Gas natural, P-propano) Soportes para colgar ranuras de montaje (características): 8 x 76 mm (5/16 x 3 pulgadas). Flujos de aire dimensionales: 12 (305), 17 (432), 5-1/2 (140), 6-1/2 (165), 4-1/4 (108), 6-3/4 (171)... Automatic Ignition System: If the device doesn't work on the first try, it will attempt to ignite twice more, every 45 seconds. Once the system responds, you'll know the issue is resolved. Before using this device, ensure the gas line is purged and the pressure gauge is set correctly. Never use it if any part has been submerged in water. Check the admission pressure and refer to the manufacturer's manual for guidance. If the device doesn't function, check these points: • Make sure the power source is connected. • Verify the thermostat installation meets local grounding requirements. • If you're still having issues, contact a qualified technician or the manufacturer for assistance.