

Quick Start Guide

Model: SOUNDMASTER


Congratulations on your purchase and enjoy your
SOUNDMASTER!

This manual is provided for informational purposes
only, without any evident or implied warranties.

Index

1. Control elements & Technical Specifications
2. [Connecting to your speaker](#)
3. [Charging](#)
4. [Bluetooth Control](#)
5. [PlayBack Control](#)
6. [Incoming Calls](#)
7. [Equalizer Control](#)
8. [Activating Voice Assistants](#)
9. [NFC](#)
10. [TWS Mode](#)
11. [Light Indications](#)
12. [Cautions](#)
13. [Disposal](#)
14. [Copyright & Trademark](#)

Components and control elements

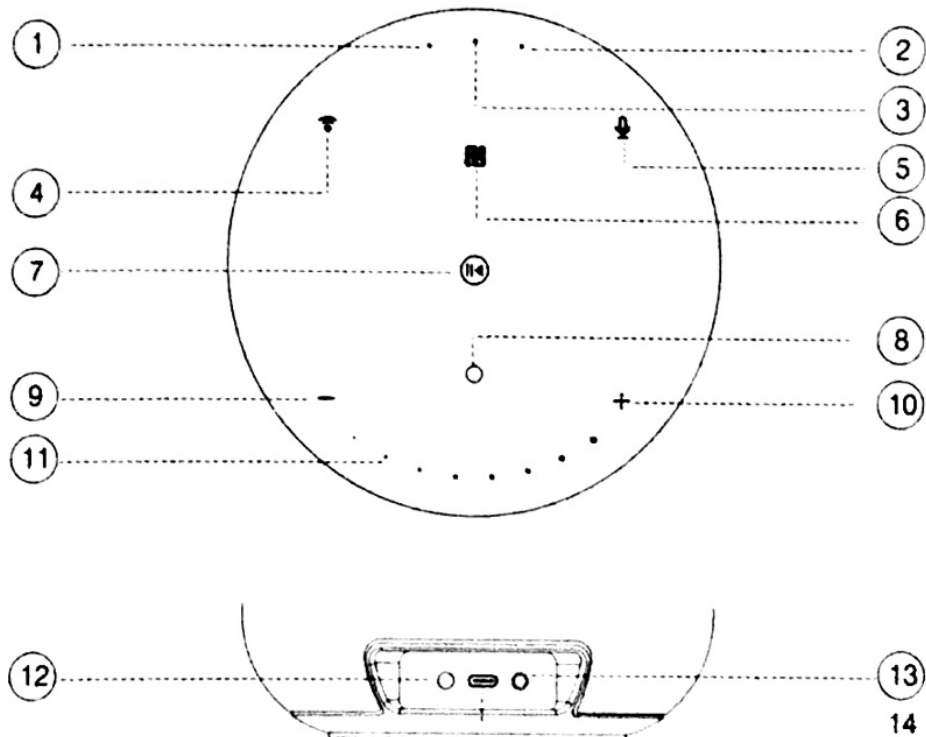

1	Battery charge indicator	8	Microphone
2	AUX indicator	9	Volume Down/Pre track
3	Bluetooth indicator	10	Volume UP/Next track
4	Bluetooth/TWS	11	Volume Level
5	Call control/Siri	12	3.5mm AUX output
6	NFC	13	ON / OFF
7	Play / Pause/EQ mode	14	USB Type-C Port

Technical specifications

Weight	2.1kg
Dimensions	141.5*193.5mm
Battery life	Up to 10h
Battery charge time	1. When using a power supply with PD 30W function: 1h 20min (from 0 to 75%) 2h 40min (from 0 to 100%) 2. When using a power supply with QC function: 3h 40min (from 0 to 100%) 3. When using 5V/2A power supply: 5h 30min (from 0 to 100%)
Speakers	40W(4RMS x10W,45*45mm 8Ω , 80Hz-20kHz)
Subwoofer	20W, 76.2mm, 20Hz-3kHz
Bluetooth	V5.0
Supported Bluetooth profiles	A2DP V1.3, AVRCP V1.6, GAVDP V1.3, HFP V1.7, HID V1.1, IOPT, SPP V1.2
Bluetooth range	10m
Battery	12000mAh

Connecting to your speaker

1. Charge the device before turning it on for the first time.
Use the supplied Type-C cable.
2. Hold the power button for 2 seconds to turn on the speaker. After the control panel lights up the speaker is ready for use.
3. Turn on the Bluetooth function on the external device and search.
4. Select "SOUNDMASTER" from the devices detected and click on it to pair. Now you are ready to use your SOUNDMASTER.
5. To turn off your speaker hold the power button for 2 seconds.

ATTENTION!

If the speaker does not play anything for 10 minutes , it turns off automatically. This is to save battery when you forget to turn it off

After the battery level drops below 20%, you will hear the first warning sound. After the third beep, the speaker will be turned off within a minute.

Charging

The speaker supports both fast charging using PD (30W) QC2.0/QC3.0 (18W) protocols, and charging using conventional 5V/2A power supplies. The choice of power supply will only effect the charging time of the device. To ensure the speaker play at maximum volume and does not drain the battery use a power supply supporting PD 30W.

Bluetooth Control

1. Press the Bluetooth button once to disconnect the device connected via Bluetooth.

2. Press the Bluetooth button twice to disconnect the device connected via Bluetooth, as well as to delete all previously connected devices from the memory.

PlayBack Control

1. Press the play/pause button once to pause/continue playback.
2. Press the Volume Up button once to increase the volume level.
3. Hold the Volume Up button (around 2 seconds) to switch to the next song
4. Press the Volume Down button once to decrease the volume level.
5. Hold the Volume Down button (around 2 seconds) to switch to the previous song

Incoming Calls

1. Press the Call Control button once to accept an incoming call.
2. Hold the Call Control button for 2 seconds to reject an incoming call.
3. Press the power button once to end the call.

Equalizer Control

Press and hold the Play/Pause button for 2 seconds to switch between the equalizers. By default the speaker has 3 equalizers.

Activating Voice Assistant

1. Make sure that the speaker and the smartphone you are using are connected via Bluetooth
2. Hold the call button for 3 seconds to activate the voice assistant on your device.

3. Use the microphone located at the top of the speaker to communicate with your voice assistant.

NFC

SOUNDMASTER speaker supports quick connection using NFC

1. Make sure your device has Bluetooth and NFC functions enabled
2. Place your smartphone in the NFC zone of the speaker for automatic pairing
3. Place your smartphone in the NFC zone again for quick disconnection.

TWS mode

Owners of 2 SOUNDMASTER speakers may connect them together in TWS mode.

1. Turn on both speakers. Make sure once is connected to your device and one is waiting for pairing. The connected speaker performs the function of the main one and the one that is waiting for pairing serves as an auxiliary one.
2. Hold the Bluetooth button on the main speaker for 3 seconds to initiate pairing between the main and auxiliary speaker.
3. After you have successfully paired the speakers, the Bluetooth connection indicator on the main speaker blinks blue and the auxiliary one is constantly blue.
4. Hold the Bluetooth button for 3 seconds on any of the speakers to disconnect them and turn off TWS.

In TWS mode, all speaker control elements are synchronized such as turning on and off, playing, pausing, volume control etc.

Light indications

Bluetooth indicator (in Bluetooth mode):

1. Blinks fast – Waiting for connection.

2. Blinks slowly – Connected to another device. Nothing is played.
3. Constantly activated – Connected to another device. Music is being played.

Bluetooth indicator (in TWS mode):

1. Blinks fast (both speakers) – Devices are waiting for connection.
2. Blinks slowly (both speakers) – Devices are connected. Nothing is played.
3. Constantly activated (both speakers) – Devices are connected in TWS mode. Music is being played.
4. Blinks slowly on main & constantly activated on auxiliary – Devices are connected on TWS mode. Music put on is paused.

AUX indicator:

Constantly activated – speaker connected via AUX

Charge indicator

1. Constantly red – Speaker is charging
2. Constantly green – Speaker is fully charged

Caution

Only certified HPAS approved technicians are qualified to repair your device, in calling upon a nonqualified person you run the risk of damaging your device and voiding your warranty. Only use accessories that are certified by manufacturer. The use of incompatible accessories with the device can cause injury or damage your device.

Battery & Charger Caution

This device is equipped with a Lithium-ion or Lithium-ion polymer battery.

- Risk of explosion if battery is replaced by an incorrect type
- Do not pierce, open, disassemble the battery, or use it in a humid and/or corrosive environment. If a battery leaks, do not let liquid touch skin or eyes. If this happens immediately flush affected areas with water or seek medical help.
- Do not expose battery to temperatures over 45°C (113°F)
- Do not dispose of battery in a fire as they may explode. Obey local regulations. Recycle when possible.
- Be careful to never crush or perforate the battery. Avoid exposing the battery to high external pressure which could provoke an internal short-circuit and overheating.

Avoiding hearing damage

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Disposal and recycling

Correct disposal of the product:

This product contains substances that are potentially dangerous to the environment and to human health. Therefore you should hand it over to the applicable collection point for recycling

Correct disposal of the batteries:

If your product contains a detachable battery pack, you should dispose of it in a designated collection point for used batteries.

Copyright & trademark notice

This document, the content of this device and any preloaded material including logos, graphics, sounds, images, texts, elements of design embodied in this product and documentation are copyrighted works in whole or in part without permission of the respective copyright holders.