



730LTP40k

Low Pressure Pneumatic Test Pump

Instructions

Introduction

The 730LTP40k Low Pressure Pneumatic Test Pump (the Product) is used to check pressure measurement devices against master reference gauges. The Product supplies the same pressure to both a reference gauge and a device under test (DUT) to test the accuracy of the DUT.

Contact Fluke Corporation

Fluke Corporation operates worldwide. For local contact information, go to our website: www.fluke.com.

To register your product, view, print, or download the latest manual or manual supplement, go to our website.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.
+1-425-446-5500

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

fluke-info@fluke.com

Safety Information

A **Warning** identifies conditions and actions that pose hazards to the user; a **Caution** identifies conditions and actions that may damage the Product or the equipment under test.

Warning

To prevent possible electrical shock, fire, or personal injury and safe operation and maintenance of the Product:

- Read all safety information before you use the Product.
- Only assemble and operate high-pressure systems if you know the correct safety procedures. High-pressure liquids and gases are hazardous and the energy from them can be released without warning.
- Do not alter the Product and use only as specified, or the protection supplied by the Product can be compromised.
- Use only specified replacement parts.
- Have an approved technician repair the Product.
- Do not use the Product if it is altered or damaged.
- Do not use the Product with flammable, explosive, or poisonous gasses.
- Do not use the Product above its rated pressure.
- Depressurize the system before removing any hoses, tubing, devices under test, or accessories from the Product.
- Use filters if impurities from source fluids are likely to contaminate the Product.
- Clean the Product with mild soap and water if contaminated. Dry parts and apply manufacturer-specified lubricants, seals, and gaskets during reassembly.

Table 1 lists the symbols used on the Product or in this document.

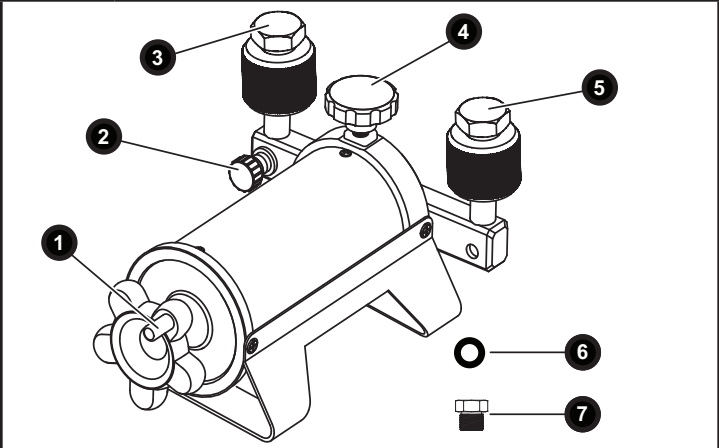
Table 1. Symbols

Symbol	Description
	Consult user documentation.
	WARNING. RISK OF DANGER.

Product Features

Table 2 shows the features of the Product.

Table 2. Product Features

		
Item	Description	Function
1	Pressure wheel	Increases and decreases pressure in large increments
2	Pressure release valve	Releases pressure
3	Output port 1	Connection port for the reference gauge or the DUT
4	Fine adjustment wheel	Increases and decreases pressure in small increments
5	Output port 2	Connection port for the reference gauge or the DUT
6	O rings (x 20) (7.8 mm x 3.1 mm)	Improves the seal between the reference gauge/DUT and the pump
7	Bulkhead plugs (x 2) (M20 x 1.5)	Seals pressure in output ports

Operation

Zero the Product before you do a pressure test.

Zero the Product

To zero the Product:

- Turn 2, pressure release valve, counterclockwise until the valve is fully open.
- Put one O ring in each of the output ports.
- Connect the reference gauge to 3, output port 1, or 5, output port 2.
- Connect the DUT to the open output port.
- Select a pressure method to test:
 - Positive pressure:
Fully turn 1, pressure wheel, counterclockwise to decrease pressure.
 - Vacuum pressure:
Fully turn 1, pressure wheel, clockwise to increase pressure.
- Turn 4, fine adjustment wheel, to the middle position.
- Read the zero pressure from the reference gauge.
- Turn 2, the pressure release valve, clockwise until the valve is fully closed.

Ascending Pressure

To check ascending pressure:

- Zero the Product.
- Select a pressure method to test:
 - Positive pressure:
To generate pressure, turn 1, pressure wheel, clockwise until the pressure gets close to the target pressure.
 - Vacuum pressure:
To generate pressure, turn 1, pressure wheel, counterclockwise until the pressure gets close to the target pressure.
- To get to the target pressure, turn 4, fine adjustment wheel, to increase or decrease pressure as needed.
- Record the pressure from the DUT.
- Repeat step 2 through 4 for each target pressure point up to the full scale.
- Check descending pressure if needed.

Descending Pressure

To check descending pressure:

- Generate ascending pressure greater than the target pressure or up to the full scale.
- Select a pressure method to test:
 - Positive pressure:
To release pressure, turn 1, pressure wheel, counterclockwise until the pressure gets close to the target pressure.
 - Vacuum pressure:
To release pressure, turn 1, pressure wheel, clockwise until the pressure gets close to the target pressure.
- To get to the target pressure, turn 4, fine adjustment wheel, to increase or decrease pressure as needed.
- Record the pressure from the DUT.
- Repeat steps 2 through 4 for each target pressure point down to zero.

Troubleshoot the Product

If the Product does not function as expected, try the steps in Table 3.

Table 3. Troubleshoot the Product

Problem	Cause	Solution
Difficult to maintain pressure (leakage)	The pressure release valve is open.	Close the pressure release valve.
	The reference gauge is loose.	Tighten the reference gauge.
	The DUT is loose.	Tighten the DUT.
	An O ring is worn.	Replace the O ring.
	The threads on the Product, the reference gauge, or the DUT are not smooth.	Apply thread seal tape to the threads of the reference gauge and the threads of the DUT.
	An impurity blocks the circulation of air.	Repeatedly apply pressure and suddenly release the pressure until the impurity comes out.
	The DUT connector is too small for the output port of the Product.	Use an adaptor to connect the DUT to the Product.
Difficult to generate pressure	The pressure release valve is open.	Close the pressure release valve.
	The reference gauge is loose.	Tighten the reference gauge.
	The DUT is loose.	Tighten the DUT.
	An O ring is worn.	Replace the O ring.
	There is a leak in the DUT.	Test another DUT.
Valves or wheels do not turn freely.	The valve or wheel is turned too tightly.	Firmly grasp the valve or wheel and turn it gently.
	The threads on the valves or wheels are dry.	Apply grease to the threads on the valves and wheels.

Specifications

Operating	
Altitude.....	≤3000 m
Temperature.....	23 ±5 °C
Pressure	
Media.....	Air
Positive Range.....	0 kPa to 40 kPa, 0 psi to 5.8 psi
Vacuum Range.....	-40 kPa to 0 kPa, -5.8 psi to 0 psi
Size (H x W x L).....	230 mm x 140 mm x 130 mm
Weight.....	2.3 kg
Safety	IEC 61010-1: Pollution Degree 2
Note	

The vacuum pressure can reach up to 40 % of the local atmospheric pressure.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for two years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.